



## Avaya Solution & Interoperability Test Lab

---

# Application Notes for Empirix Hammer IP 8.0 with Avaya Aura® Communication Manager 8.1 and Avaya Aura® Session Manager 8.1 using SIP Endpoint Emulation – Issue 1.0

### Abstract

These Application Notes describe the configuration steps required to integrate Empirix Hammer IP 8.0 with Avaya Aura® Communication Manager 8.1 and Avaya Aura® Session Manager 8.1 using SIP endpoint emulation. Empirix Hammer IP validates IP-based systems by testing the actual network under anticipated traffic conditions to provide an understanding of expected performance. Empirix Hammer IP can be used to assess and monitor network performance, reliability and quality of VoIP services in an Avaya IP telephony network. In this configuration, Empirix Hammer IP emulates SIP endpoints that register with Avaya Aura® Session Manager and originates and terminates calls through Avaya SIP telephony network. While the call is active, Empirix Hammer IP can send DTMF tones and voice media, and provide voice quality metrics. Call progress can also be monitored, and at the completion of the test, test reports can be generated. Empirix Hammer IP provides a collection of applications used to configure the system; create, schedule, monitor tests; and create reports.

Readers should pay attention to **Section 2**, in particular the scope of testing as outlined in **Section 2.1** as well as any observations noted in **Section 2.2**, to ensure that their own use cases are adequately covered by this scope and results.

Information in these Application Notes has been obtained through DevConnect compliance testing and additional technical discussions. Testing was conducted via the DevConnect Program at the Avaya Solution and Interoperability Test Lab.

# 1. Introduction

These Application Notes describe the configuration steps required to integrate Empirix Hammer IP with Avaya Aura® Communication Manager and Avaya Aura® Session Manager using SIP endpoint emulation. Empirix Hammer IP validates IP-based systems by testing the actual network under anticipated traffic conditions to provide an understanding of expected performance. Empirix Hammer IP can be used to assess and monitor network performance, reliability and quality of VoIP services in an Avaya IP telephony network. In this configuration, Empirix Hammer IP emulates SIP endpoints that register with Avaya Aura® Session Manager and originates and terminates calls through Avaya SIP telephony network. While the call is active, Empirix Hammer IP can send DTMF tones and voice media, and provide voice quality metrics. Call progress can also be monitored, and at the completion of the test, test reports can be generated. Empirix Hammer IP provides a collection of applications used to configure the system; create, schedule, and monitor tests; and create reports.

The following set of Hammer IP applications were used during the compliance testing:

- **Hammer Configurator** used to configure and manage the system.
- **Hammer TestBuilder** used to create and run test scripts.
- **Hammer System Monitor** used to monitor SIP registration status and call progress.
- **Hammer Call Summary Monitor** used to monitor call completion and to create reports.

Below is a list of related Application Notes that describes terminating calls to SIP trunks, H.323 endpoints, and H.323 trunks.

- *Application Notes for Empirix Hammer IP with Avaya Aura® Communication Manager and Avaya Aura® Session Manager using SIP Trunk Emulation [3]*
- *Application Notes for Empirix Hammer IP with Avaya Aura® Communication Manager using H.323 Endpoint Emulation [4]*
- *Application Notes for Empirix Hammer IP with Avaya Aura® Communication Manager using H.323 Trunk Emulation [5]*

## 2. General Test Approach and Test Results

Interoperability compliance testing covered feature and serviceability testing. The feature testing was conducted by originating and terminating calls using SIP endpoint channels on Hammer IP and establishing the calls through the Avaya SIP telephony network. The compliance test also covered monitoring various reports on the Hammer IP during and after the test runs, and checking the status of various SIP resources on Communication Manager. The serviceability testing focused on verifying the ability of the Hammer IP to recover from adverse conditions such as disconnecting the Ethernet cable.

DevConnect Compliance Testing is conducted jointly by Avaya and DevConnect members. The jointly-defined test plan focuses on exercising APIs and/or standards-based interfaces pertinent to the interoperability of the tested products and their functionalities. DevConnect Compliance Testing is not intended to substitute full product performance or feature testing performed by

DevConnect members, nor is it to be construed as an endorsement by Avaya of the suitability or completeness of a DevConnect member's solution.

Avaya recommends our customers implement Avaya solutions using appropriate security and encryption capabilities enabled by our products. The testing referenced in this DevConnect Application Note included the enablement of supported encryption capabilities in the Avaya products. Readers should consult the appropriate Avaya product documentation for further information regarding security and encryption capabilities supported by those Avaya products.

Support for these security and encryption capabilities in any non-Avaya solution component is the responsibility of each individual vendor. Readers should consult the appropriate vendor-supplied product documentation for more information regarding those products.

For the testing associated with this Application Note, the interface between Avaya systems and Empirix Hammer IP did not include use of any specific encryption features as requested by Empirix.

## 2.1. Interoperability Compliance Testing

The interoperability compliance testing focused on verifying that Hammer IP can register with Session Manager as SIP endpoints, establish calls, send voice media, and provide voice quality metrics. The following features and functionality were covered:

- SIP endpoint registration with Session Manager.
- Originating and terminating calls through Avaya SIP telephony network.
- Support of G.711MU and G.729 codecs.
- Support of direct IP-to-IP media (also known as “Shuffling” which allows IP endpoints to send audio RTP packets directly to each other without using media resources on the Avaya Media Gateway).
- Generating voice quality metrics with Shuffling disabled.
- DTMF support.
- Originating calls from SIP endpoints and terminating calls on SIP endpoints, SIP trunks, H.323 endpoints, and H.323 trunks.

**Note:** Performance and load testing were not the focus of the compliance test.

## 2.2. Test Results

Empirix Hammer IP was successful in originating calls using SIP endpoint emulation and terminating calls on channels emulating SIP endpoints, H.323 endpoints, H.323 trunks, and SIP trunks. The compliance test was completed with the following observations:

- Direct IP-to-IP Media (i.e., Shuffling) using H.323 trunks between Communication Manager and Hammer IP is not supported. However, Shuffling with H.323 endpoints and SIP endpoints/trunks is supported.
- Communication Manager does not shuffle calls between a SIP trunk and a H.323 trunk. This is per design. If the originating endpoint on Hammer IP is a SIP endpoint, note that

the call arrives on Communication Manager via a SIP trunk. Therefore, a call from a SIP endpoint to a H.323 trunk is essentially a call from a SIP trunk to a H.323 trunk and the call is not shuffled.

- Hammer IP Call Summary Monitor and Quality of Experience Monitor did not report voice quality metrics. Empirix provided a modified script for testing to output metrics to Hammer IP System Monitor logs. The issue is addressed in a patch release.

**Important Note:** The purpose of this compliance test was to verify interoperability between Hammer IP and Communication Manager and Session Manager using SIP endpoint emulation. That is, the goal was to verify that Hammer IP can register SIP endpoints with Session Manager and establish calls. This was successfully verified. If a Hammer test encounters failed calls, there are various items to consider, including:

- The **Guard Time** and **Stagger** parameters may be set too aggressively (e.g., Hammer IP may be initiating too many calls too quickly) and the configuration under test may not be able to handle the load generated by Hammer IP. These parameters should be considered carefully for each test. It may be necessary to slow down the test to a rate that can be reasonably handled by the test configuration.
- Resources may be getting exhausted in the Avaya Media Gateway or Media Server. These resources may include media processing resources, touch-tone receivers (TTRs), network trunks, and TDM bus resources.
- The pause duration in a test script may need to be adjusted to synchronize the A and B sides.

Generally speaking, call failures encountered in Hammer IP are usually a result of one of the issues mentioned above.


## 2.3. Support

Technical support on the Empirix Hammer IP can be obtained via phone or website.

- **Phone:** (978) 313-7002
- **Web:** <https://support-hammer.infovista.com>

### 3. Reference Configuration

The network diagram shown in **Figure 1** illustrates the test configuration. In this configuration, Session Manager receives calls from Hammer IP, which emulates SIP endpoints. The call is routed through the Avaya SIP telephony network. The call is eventually routed back to Hammer IP where it is terminated. While the call is established, Hammer IP sends voice media (i.e., RTP traffic) using an audio recording. This allows voice quality metrics to be provided at the end of each call. Hammer IP applications running on Hammer IP server were used to configure the system, create and monitor the tests, and view the test reports.

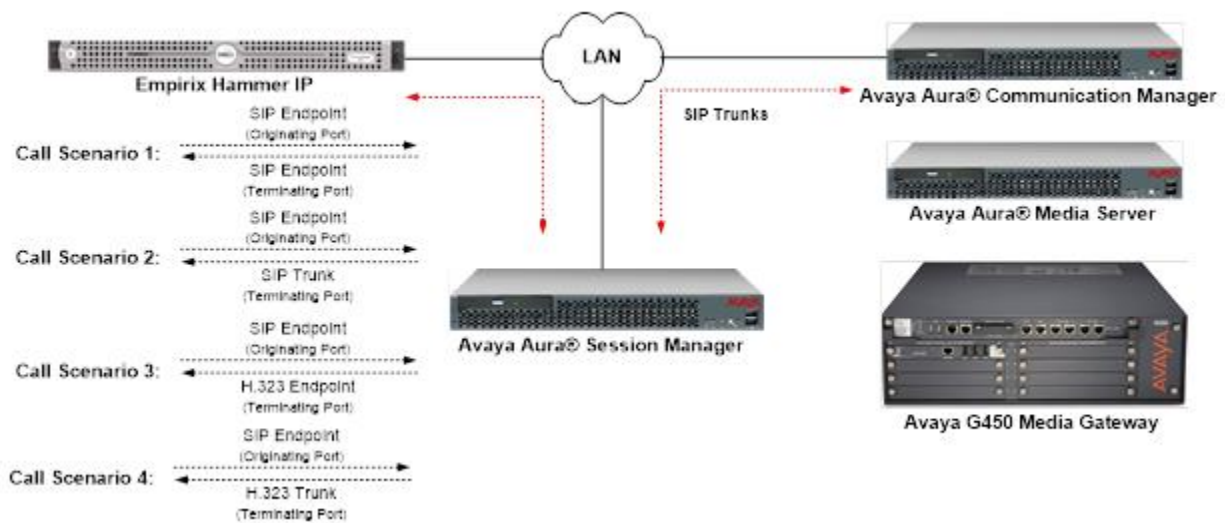

**Figure 1: Empirix Hammer IP with Avaya SIP Telephony Network**

## 4. Equipment and Software Validated

The following equipment and software were used for the sample configuration provided:

Equipment/Software	Release/Version
Avaya Aura® Communication Manager running on Virtual Machine	R018x.0.890.0-27168 (FP3 SP3)
Avaya G450 Media Gateway	41.34.1
Avaya Aura® Media Server running on Virtual Machine	8.0.0.21
Avaya Aura® Session Manager running on Virtual Machine	8.1.3.3.813307
Avaya Aura® System Manager running on Virtual Machine	8.1.3.3.1013529
Empirix Hammer IP running on Microsoft Windows Server 2019 Standard with 2.90 GHz (2 processors) Intel Xeon CPU and 4.0 GB of RAM on VMware	8.0.0.42

## 5. Configure Avaya Aura® Communication Manager

This section provides the procedures for configuring Communication Manager. The procedures include the following areas:

- Administer IP Node Names
- Administer IP Codec Set
- Administer IP Network Region
- Administer SIP Trunk Group to Session Manager
- Administer SIP Stations
- Administer AAR Call Routing

Communication Manager is configured through the System Access Terminal (SAT).

### 5.1. Administer IP Node Names

In the **IP Node Names** form, assign an IP address and host name for Communication Manager (*procr*) and Session Manager (*sm81*). The host names will be used in other configuration screens of Communication Manager.

change node-names ip		Page 1 of 2
		IP NODE NAMES
Name	IP Address	
HammerIP-orig	10.64.110.151	
HammerIP-term	10.64.110.161	
aes81	10.64.110.215	
ams81	10.64.110.214	
<b>sm81</b>	<b>10.64.110.212</b>	
default	0.0.0.0	
<b>procr</b>	<b>10.64.110.213</b>	
procr6	::	
( 8 of 8 administered node-names were displayed )		
Use 'list node-names' command to see all the administered node-names		
Use 'change node-names ip xxx' to change a node-name 'xxx' or add a node-name		

## 5.2. Administer IP Codec Set

In the **IP Codec Set** form, specify the audio codec(s) required by the test that will be run on Hammer IP. The form is accessed via the **change ip-codec-set 1** command. Note the codec set number since it will be used in the IP Network Region covered in the next section. For the compliance test, G.711MU, G.729AB, and G.729A codecs were used. In the **IP Codec Set** form, specify the appropriate codec being used by Hammer test. Below is the IP codec set configured for G.711MU.

```
change ip-codec-set 1                                     Page 1 of 2

                                IP MEDIA PARAMETERS

Codec Set: 1

Audio      Silence      Frames      Packet
Codec      Suppression  Per Pkt    Size (ms)
1: G.711MU          n           2          20
2:
3:
```

## 5.3. Administer IP Network Region

In the **IP Network Region** form, specify the codec set to be used for Hammer calls and specify whether **IP-IP Direct Audio** (Shuffling) is required for the test. Shuffling allows audio traffic to be sent directly between IP endpoints without using media resources in the Avaya G450 Media Gateway or Media Server. Note that if Shuffling is enabled, audio traffic does not egress Hammer IP since the calls would be shuffled. The **Authoritative Domain** for this configuration is *avaya.com*.

```
change ip-network-region 1                               Page 1 of 20

                                IP NETWORK REGION

Region: 1      NR Group: 1
Location: 1    Authoritative Domain: avaya.com
Name:          Stub Network Region: n
MEDIA PARAMETERS      Intra-region IP-IP Direct Audio: no
                      Inter-region IP-IP Direct Audio: no
                      IP Audio Hairpinning? n
Codec Set: 1
UDP Port Min: 2048
UDP Port Max: 50999
DIFFSERV/TOS PARAMETERS
Call Control PHB Value: 46
Audio PHB Value: 46
Video PHB Value: 26
802.1P/Q PARAMETERS
Call Control 802.1p Priority: 6
Audio 802.1p Priority: 6
Video 802.1p Priority: 5
AUDIO RESOURCE RESERVATION PARAMETERS
H.323 IP ENDPOINTS      RSVP Enabled? n
H.323 Link Bounce Recovery? y
Idle Traffic Interval (sec): 20
Keep-Alive Interval (sec): 5
Keep-Alive Count: 5
```

## 5.4. Administer SIP Trunk Group to Session Manager

Prior to configuring a SIP trunk group for communication with Session Manager, a SIP signaling group must be configured. Configure the **Signaling Group** form as follows:

- Set the **Group Type** field to *sip*.
- The **Transport Method** field was set to *tls*.
- Specify Communication Manager (*procr*) and the Session Manager (*sm81*) as the two ends of the signaling group in the **Near-end Node Name** field and the **Far-end Node Name** field, respectively. The name values are those configured in **Section 5.1**.
- Ensure that the TLS port value of *5061* is configured in the **Near-end Listen Port** and the **Far-end Listen Port** fields.
- The preferred codec for the call will be selected from the IP codec set assigned to the IP network region specified in the **Far-end Network Region** field.
- Enter the domain name of Session Manager in the **Far-end Domain** field. In this configuration, the domain name is *avaya.com*.
- The **Direct IP-IP Audio Connections** field was enabled on this form.
- The **DTMF over IP** field should be set to the default value of *rtp-payload*.
- Disable **Initial IP-IP Direct Media**.

Communication Manager supports DTMF transmission using RFC 2833. The default values for the other fields may be used.

add signaling-group 1		Page 1 of 2
SIGNALING GROUP		
Group Number: 1	<b>Group Type: sip</b>	
IMS Enabled? n	<b>Transport Method: tls</b>	
Q-SIP? n		
IP Video? y	Priority Video? n	Enforce SIPS URI for SRTP? n
Peer Detection Enabled? y	Peer Server: SM	Clustered n
Prepend '+' to Outgoing Calling/Alerting/Diverting/Connected Public Numbers? y		
Remove '+' from Incoming Called/Calling/Alerting/Diverting/Connected Numbers? n		
Alert Incoming SIP Crisis Calls? n		
<b>Near-end Node Name: procr</b>		<b>Far-end Node Name: sm81</b>
<b>Near-end Listen Port: 5061</b>		<b>Far-end Listen Port: 5061</b>
		<b>Far-end Network Region: 1</b>
<b>Far-end Domain: avaya.com</b>		
Incoming Dialog Loopbacks: eliminate		Bypass If IP Threshold Exceeded? n
<b>DTMF over IP: rtp-payload</b>		RFC 3389 Comfort Noise? n
Session Establishment Timer(min): 65		<b>Direct IP-IP Audio Connections? y</b>
Enable Layer 3 Test? y		IP Audio Hairpinning? n
H.323 Station Outgoing Direct Media? n		<b>Initial IP-IP Direct Media? n</b>
		Alternate Route Timer(sec): 6

Configure the **Trunk Group** form as shown below. This trunk group is used for SIP calls to Hammer IP. Set the **Group Type** field to *sip*, set the **Service Type** field to *tie*, specify the signaling group associated with this trunk group in the **Signaling Group** field, and specify the **Number of Members** supported by this SIP trunk group. Accept the default values for the remaining fields.

add trunk-group 1		Page 1 of 22	
TRUNK GROUP			
Group Number: 1	<b>Group Type: sip</b>	CDR Reports: y	
Group Name: SM Trunk 1	COR: 1	TN: 1	TAC: 101
Direction: two-way	Outgoing Display? y		
Dial Access? n	Night Service:		
Queue Length: 0			
<b>Service Type: tie</b>	Auth Code? n		
	Member Assignment Method: auto		
	<b>Signaling Group: 1</b>		
	<b>Number of Members: 40</b>		

## 5.5. Administer SIP Stations

**Note:** The SIP station and off-PBX Telephone Integration was configured automatically by System Manager as described in **Section 6.3**. The following describes the station configuration process if they were added through Communication Manager.

Configure a SIP station for each SIP channel on Hammer IP. Set the **Type** field to either *9641SIP* or *J179*. Set the **Port** field to *IP* and configure a descriptive **Name**. For the compliance test, 20 SIP stations were used with extensions ranging from 78151 to 78170. The first group of 10 channels (extensions 78151 to 78160) were used to originate calls. The calls were then terminated on the remaining 10 channels (extensions 78161 to 78170). Repeat this procedure for each channel required by the Hammer test.

display station 78151		Page 1 of 6	
STATION			
Extension: 78151	Lock Messages? n	BCC: 0	
<b>Type: 9641SIP</b>	Security Code:	TN: 1	
<b>Port: S00049</b>	Coverage Path 1:	COR: 1	
<b>Name: Hammer, 78151</b>	Coverage Path 2:	COS: 1	
Unicode name?	Hunt-to Station:		
STATION OPTIONS			
Time of Day Lock Table:			
Loss Group: 19			
Message Lamp Ext: 78151			
Display Language: english			
Survivable COR: internal			
Survivable Trunk Dest? y	IP SoftPhone? n		
IP Video? n			

Configure the **Stations with Off-PBX Telephone Integration** form so that calls destined for a SIP endpoint on Hammer IP are routed to Session Manager, which will then route the call to Hammer IP. On this form, specify the extension of the SIP endpoint and set the **Application** field to *OPS*. The **Phone Number** field is set to the digits to be sent over the SIP trunk. In this case, the SIP telephone extensions configured on Session Manager also match the extensions of the corresponding stations on Communication Manager. However, this is not a requirement. Finally, the **Trunk Selection** field is set to *aar*. This field specifies Auto Alternate Routing (AAR) routing. In this case, the **Trunk Selection** field would be set to *aar* to trigger AAR routing. Configuration of the **AAR Analysis** and **Route Pattern** forms would also be required. Refer to [1] for information on routing calls using AAR or ARS. Repeat this step for each SIP endpoint required on Hammer IP (e.g., extensions 78151 to 78170).

change off-pbx-telephone station-mapping 78151						Page	1 of	3
STATIONS WITH OFF-PBX TELEPHONE INTEGRATION								
Station Extension	Application	Dial Prefix	CC	Phone Number	Trunk Selection	Config Set	Dual Mode	
78151	OPS	-		78151	aar	1		

## 5.6. AAR Call Routing

SIP calls to Session Manager are routed over a SIP trunk via AAR call routing. Configure the AAR analysis form and enter add an entry that routes digits beginning with “78” to route pattern 1 as shown below.

change aar analysis 78							Page	1	of	2
AAR DIGIT ANALYSIS TABLE										
Location: all							Percent Full: 1			
	Dialed	Total		Route	Call	Node	ANI			
	String	Min	Max	Pattern	Type	Num	Reqd			
<b>78</b>		<b>5</b>	<b>5</b>	<b>1</b>	<b>aar</b>		<b>n</b>			

Configure a preference in Route Pattern 1 to route calls over SIP trunk group 1 as shown below.

change route-pattern 10										Page	1	of	3							
Pattern Number: 1										Pattern Name: main										
SCCAN? n		Secure SIP? n		Used for SIP stations? n																
Grp	FRL	NPA	Pfx	Hop	Toll	No.	Inserted	DCS/ IXC												
No			Mrk	Lmt	List	Del	Digits	QSIG												
							Dgts	Intw												
1:	1	0						n	user											
2:								n	user											
3:								n	user											
4:								n	user											
5:								n	user											
6:								n	user											
BCC VALUE										TSC	CA-TSC		ITC	BCIE	Service/Feature	PARM	Sub	Numbering	LAR	
0 1 2 M 4 W										Request								Dgts	Format	
1:	y	y	y	y	y	n	n			rest						unk-unk		none		
2:	y	y	y	y	y	n	n			rest								none		
3:	y	y	y	y	y	n	n			rest								none		
4:	y	y	y	y	y	n	n			rest								none		
5:	y	y	y	y	y	n	n			rest								none		

## 6. Configure Avaya Aura® Session Manager

This section provides the procedures for configuring Session Manager. The procedures include adding the following items:

- SIP domain
- Logical/physical Locations that can be occupied by SIP Entities
- SIP Entities corresponding to Session Manager and Communication Manager
- Entity Links, which define the SIP trunk parameters used by Session Manager when routing calls to/from SIP Entities
- Add SIP Users

Configuration is accomplished by accessing the browser-based GUI of System Manager using the URL “https://<ip-address>/SMGR”, where <ip-address> is the IP address of System Manager. Log in with the appropriate credentials.

### 6.1. Specify SIP Domain

Add the SIP domain for which the communications infrastructure will be authoritative. Select **Elements** → **Routing** → **Domains** from the toolbar and click **New** button on the right (not shown). The following screen will then be shown. Fill in the following:

- **Name:** The authoritative domain name (e.g., *avaya.com*).
- **Type:** Set to *sip*.
- **Notes:** Descriptive text (optional).

Click **Commit**.

Since the sample configuration does not deal with any other domains, no additional domains need to be added.

The screenshot displays the Avaya Aura System Manager 8.1 web interface. The top navigation bar includes the Avaya logo, version information, and various menu items like Users, Elements, Services, Widgets, and Shortcuts. The main content area is titled 'Domain Management' and features a table with one item. The table has columns for Name, Type, and Notes. The Name column contains 'avaya.com', the Type column contains 'sip', and the Notes column is empty. The table is titled '1 Item' and has a 'Filter: Enable' button. The interface also includes a 'Commit' button and a 'Cancel' button.

Name	Type	Notes
* avaya.com	sip	


## 6.2. Add Locations

Locations can be used to identify logical and/or physical locations where SIP Entities reside for purposes of bandwidth management. To add a location, select **Elements** → **Routing** → **Locations** from the toolbar and click on the **New** button (not shown) on the right. The following screen will then be shown. Fill in the following:

Under *General*:


- **Name:** A descriptive name.
- **Notes:** Descriptive text (optional).

The screen below shows addition of the *DevConnect* location, which includes Communication Manager and Session Manager.

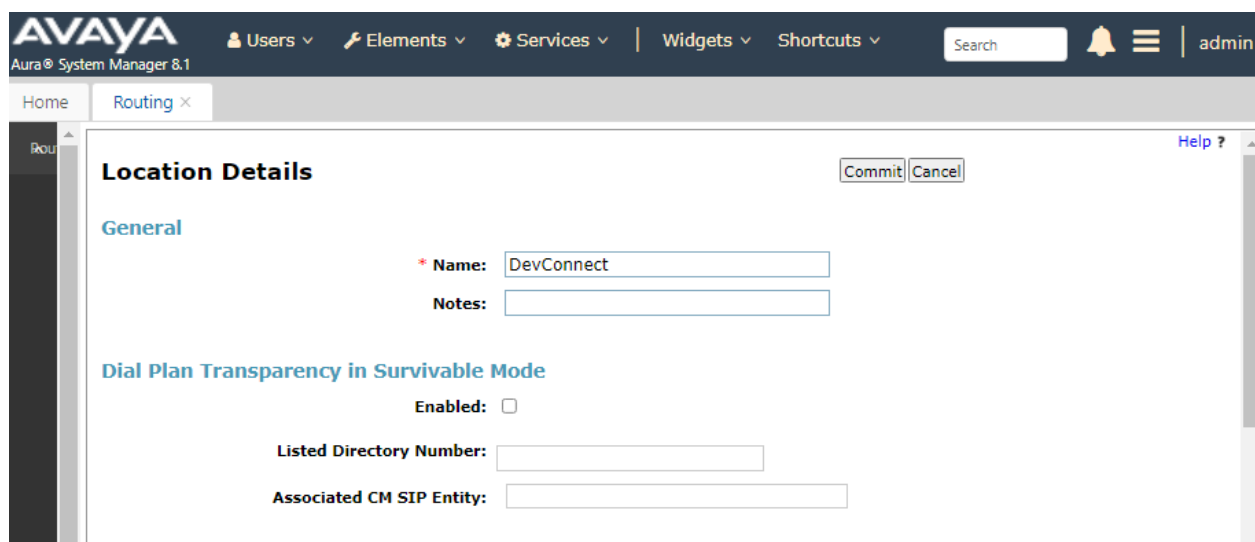

Under *Location Pattern*:

- **IP Address Pattern:** A pattern used to logically identify the location.
- **Notes:** Descriptive text (optional).

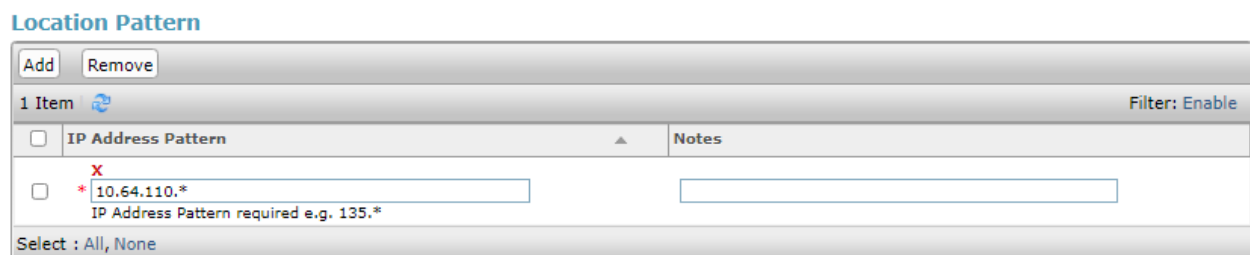

Click **Commit** to save the **Location** definition.

## 6.3. Add SIP Entities

In the sample configuration, a SIP Entity is added for Session Manager and Communication Manager.

### 6.3.1. Avaya Aura® Session Manager

A SIP Entity must be added for Session Manager. To add a SIP Entity, select **Elements** → **Routing** → **SIP Entities** from the toolbar and click on the **New** button (not shown) on the right. The following screen is displayed. Fill in the following:

Under *General*:

- **Name:** A descriptive name.
- **FQDN or IP Address:** IP address of the signaling interface on Session Manager.
- **Type:** Select *Session Manager*.
- **Location:** Select one of the locations defined previously.
- **Time Zone:** Time zone for this location.


The screenshot shows the Avaya Aura System Manager 8.1 interface. The top navigation bar includes the Avaya logo, "Aura® System Manager 8.1", and several menu items: Users, Elements, Services, Widgets, and Shortcuts. A search bar and a user profile icon labeled "admin" are also present. Below the navigation bar, the "Routing" tab is selected. The main content area displays the "SIP Entity Details" form. The form has two sections: "General" and "Monitoring". The "General" section includes fields for Name (sm81), IP Address (10.64.110.212), SIP FQDN, Type (Session Manager), Notes, Location (DevConnect), Outbound Proxy, Time Zone (America/Denver), Minimum TLS Version (Use Global Setting), and Credential name. The "Monitoring" section includes SIP Link Monitoring and CRLF Keep Alive Monitoring, both set to "Use Session Manager Configuration". Buttons for "Commit" and "Cancel" are located at the top right of the form.

Under *Listen Ports*, click **Add**, and then edit the fields in the resulting new row as shown below:

- **Listen Ports:** Port number on which the system listens for SIP requests.
- **Protocol:** Transport protocol to be used to send SIP requests.
- **Default Domain** The domain used for the enterprise (e.g., *avaya.com*).

Defaults can be used for the remaining fields. Click **Commit** (not shown) to save the SIP Entity definition.

#### Listen Ports

3 Items  Filter: [Enable](#)

<input type="checkbox"/>	Listen Ports	Protocol	Default Domain	Endpoint	Notes
<input type="checkbox"/>	<input type="text" value="5060"/>	TCP ▾	avaya.com ▾	<input type="checkbox"/>	<input type="text"/>
<input type="checkbox"/>	<input type="text" value="5060"/>	UDP ▾	avaya.com ▾	<input type="checkbox"/>	<input type="text"/>
<input type="checkbox"/>	<input type="text" value="5061"/>	TLS ▾	avaya.com ▾	<input type="checkbox"/>	<input type="text"/>

Select : [All](#), [None](#)

### 6.3.2. Avaya Aura® Communication Manager

A SIP Entity must be added for the Communication Manager. To add a SIP Entity, select **Elements → Routing → SIP Entities** and click on the **New** button on the right. The following screen is displayed. Fill in the following:

Under *General*:

- **Name:** A descriptive name.
- **FQDN or IP Address:** IP address of the signaling interface (e.g., Communication Manager (*procr*)) on the telephony system.
- **Type:** Select *CM*.
- **Location:** Select one of the locations defined previously.
- **Time Zone:** Time zone for this location.

Defaults can be used for the remaining fields. Click **Commit** to save the SIP Entity definition.

The screenshot shows the Avaya Aura System Manager 8.1 web interface. The top navigation bar includes the Avaya logo, 'Aura® System Manager 8.1', and tabs for 'Users', 'Elements', 'Services', 'Widgets', and 'Shortcuts'. A search bar and a user profile 'admin' are also present. The main content area is titled 'SIP Entity Details' with a 'Commit' and 'Cancel' button. The 'General' tab is selected, showing the following fields:

- Name:** cm81
- FQDN or IP Address:** 10.64.110.213
- Type:** CM (dropdown)
- Notes:** (text area)
- Adaptation:** (dropdown)
- Location:** DevConnect (dropdown)
- Time Zone:** America/Denver (dropdown)
- SIP Timer B/F (in seconds):** 4
- Minimum TLS Version:** Use Global Setting (dropdown)
- Credential name:** (text field)
- Securable:** ☐
- Call Detail Recording:** none (dropdown)

## 6.4. Add Entity Link

The SIP trunk from Session Manager to Communication Manager is described by an Entity link. To add an Entity Link, select **Elements → Routing → Entity Links** and click on the **New** button (not shown) on the right. Fill in the following fields in the new row that is displayed:

- **Name:** A descriptive name (e.g., *sm81\_cm81\_5061\_TLS*).
- **SIP Entity 1:** Select the Session Manager.
- **Protocol:** Select the appropriate protocol.
- **Port:** Port number to which the other system sends SIP requests.
- **SIP Entity 2:** Select the name of Communication Manager.
- **Port:** Port number on which the other system receives SIP requests.
- **Connection Policy:** Select *trusted*. *Note: If trusted is not selected, calls from the associated SIP Entity specified in Section 6.3.2 will be denied.*

Click **Commit** to save the Entity Link definition.

Name	SIP Entity 1	Protocol	Port	SIP Entity 2	Port	DNS Override	Connection Policy	Deny New Service	Notes
sm81_cm81_5061_TLS	sm81	TLS	5061	cm81	5061	<input type="checkbox"/>	trusted	<input type="checkbox"/>	

## 6.5. Administer SIP Users

A SIP user must be configured for each SIP endpoint channel on Hammer IP as defined in **Section 7.2**. This configuration is automatically synchronized with Communication Manager. In Session Manager, select **Users → User Management → Manage Users** to display the **User Management** screen (not shown). Click + **New** to add a user.

### 6.5.1. Identity

Enter values for the following required attributes for a new SIP user in the **New User Profile** screen:

- **Last Name:** Enter the last name of the user, (e.g., *Hammer*)
- **First Name:** Enter the first name of the user, (e.g., *78151*)
- **Login Name:** Enter <extension>@<sip domain> of the user (e.g., *78151@avaya.com*)

The screenshot displays the Avaya Aura System Manager 8.1 interface. The top navigation bar includes the Avaya logo, 'Aura® System Manager 8.1', and tabs for 'Users', 'Elements', 'Services', 'Widgets', and 'Shortcuts'. A search bar and a user profile icon are also present. The main content area is titled 'User Management' and shows a breadcrumb trail: 'Home / Users / Manage Users'. The 'User Profile | Add' form is active, with tabs for 'Identity', 'Communication Profile', 'Membership', and 'Contacts'. The 'Identity' tab is selected, showing a 'Basic Info' section with fields for 'User Provisioning Rule', 'Last Name' (Hammer), 'First Name' (78151), 'Login Name' (78151@avaya.com), 'Description' (Description Of User), 'Password', 'Confirm Password', 'Last Name (in Latin alphabet characters)' (Hammer), 'First Name (in Latin alphabet characters)' (78151), 'Middle Name' (Middle Name Of User), 'Email Address' (Email Address Of User), 'User Type' (Basic), and 'Localized Display Name' (Localized Display Name Of). Buttons for 'Commit & Continue', 'Commit', and 'Cancel' are visible at the top right of the form.

## 6.5.2. Communication Address

Select the **Communication** Profile tab. Select **Communication Address** in the left list and click + **New** (not shown).

Enter the following attributes for the **Communication Address**:

- **Type:** Select **Avaya SIP** from the drop-down list
- **Fully Qualified Address:** Enter the extension number (e.g., *70151*)
- **Domain:** Enter the domain (e.g., *avaya.com*)

The screenshot displays the Avaya Aura System Manager 8.1 web interface. The top navigation bar includes the Avaya logo, 'Aura® System Manager 8.1', and various menu items like 'Users', 'Elements', 'Services', 'Widgets', and 'Shortcuts'. A search bar and user profile 'admin' are also visible. The main content area is titled 'User Profile | Add' and features tabs for 'Identity', 'Communication Profile', 'Membership', and 'Contacts'. The 'Communication Profile' tab is active, showing a list of profiles on the left and a 'Communication Address' section. A modal dialog box titled 'Communication Address Add/Edit' is open, containing the following fields: 'Type' (a dropdown menu with 'Avaya SIP' selected), 'Fully Qualified Address' (a text input field with '78151' entered), and 'Domain' (a dropdown menu with 'avaya.com' selected). The dialog box has 'Cancel' and 'OK' buttons at the bottom right.

### 6.5.3. Communication Profile Password

Select **Communication Profile Password** on the left and in the **Comm-Profile Password** and **Re-enter Comm-Profile Password** fields, enter a numeric password. This will be used to register the device. Click **OK**.

The screenshot displays the Avaya Aura System Manager 8.1 interface. The top navigation bar includes the Avaya logo, 'Aura® System Manager 8.1', and various menu items like Users, Elements, Services, Widgets, and Shortcuts. A search bar and user profile (admin) are also present. The main content area shows the 'User Profile | Add' dialog box. The 'Communication Profile' tab is selected, and a modal window titled 'Comm-Profile Password' is open. This modal window contains two password input fields: 'Comm-Profile Password' and 'Re-enter Comm-Profile Password'. The 'Re-enter' field has a green checkmark, indicating the passwords match. Below the fields is a 'Generate Comm-Profile Password' link and 'Cancel' and 'OK' buttons. The background shows the 'User Profile | Add' form with tabs for Identity, Communication Profile, Membership, and Contacts. The 'Communication Profile' tab is active, showing 'PROFILE SET : Primary' and 'Communication Address'. A list of profiles is visible on the left, including Session Manager Profile, Avaya BreezeS Profile, CM Endpoint Profile, OfficeInx Comm Profile, Messaging Profile, and Presence Profile.

### 6.5.4. Session Manager Profile

Click on the **Session Manager Profile** slide button. For **Primary Session Manager**, **Origination Sequence**, **Termination Sequence**, and **Home Location** (not shown), select the values corresponding to the applicable Session Manager and Communication Manager. Retain the default values in the remaining fields.

The screenshot displays the Avaya Aura System Manager 8.1 interface. The top navigation bar includes the Avaya logo, version information, and menu items for Users, Elements, Services, Widgets, and Shortcuts. A search bar and user profile (admin) are also present. The main content area is titled 'User Profile | Add' and features tabs for Identity, Communication Profile, Membership, and Contacts. The 'Communication Profile' tab is active, showing a 'Communication Profile Password' section and a 'PROFILES' list. In the 'PROFILES' list, the 'Session Manager Profile' is selected and toggled on. The 'SIP Registration' section contains fields for 'Primary Session Manager' (set to sm81), 'Secondary Session Manager' (placeholder: Start typing...), 'Survivability Server' (placeholder: Start typing...), 'Max. Simultaneous Devices' (set to Select), and a checkbox for 'Block New Registration When Maximum Registrations Active?'. The 'Application Sequences' section includes 'Origination Sequence' and 'Termination Sequence', both set to cm81. Action buttons 'Commit & Continue', 'Commit', and 'Cancel' are located at the top right of the form.

### 6.5.5. CM Endpoint Profile

Click on the **CM Endpoint Profile** slide button. Fill in the following fields:

- **System:** Select the relevant Communication Manager SIP Entity (e.g., **cm81**).
- **Profile Type:** Select *Endpoint*.
- **Template:** Select *J179\_DEFAULT\_CM\_8\_1* or *9641SIP\_DEFAULT\_CM\_8\_1* as appropriate.
- **Extension:** Enter the extension number (e.g., *70151*).

Click on **Endpoint Editor** in the Extension field to edit Communication Manager settings if needed. Click **Done** to close the Endpoint Editor. Click **Commit** (not shown).

The screenshot displays the Avaya Aura System Manager 8.1 interface. The top navigation bar includes the Avaya logo, 'Aura® System Manager 8.1', and tabs for Users, Elements, Services, Widgets, and Shortcuts. A search bar and user profile (admin) are on the right. The main content area is titled 'User Profile | Add' and features tabs for Identity, Communication Profile, Membership, and Contacts. The 'Communication Profile' tab is active, showing a list of profiles on the left: 'Primary' (selected), 'Session Manager Profile', 'Avaya Breeze® Profile', 'CM Endpoint Profile' (highlighted with a blue bar and toggle), 'Officelinx Comm Profile', 'Messaging Profile', and 'Presence Profile'. The main form area contains the following fields:

- System:** cm81
- Profile Type:** Endpoint
- Extension:** Start typing...
- Template:** J179\_DEFAULT\_CM\_8\_1
- Set Type:** J179
- Security Code:** Enter Security Code
- Port:** JP
- Voice Mail Number:** (empty)
- Preferred Handle:** Select
- Calculate Route Pattern:** (checkbox)
- SIP URI:** Select
- Delete on Unassign from User or on Delete User:** (checkbox, checked)
- Override Endpoint Name and Localized Name:** (checkbox, checked)
- Allow H.323 and SIP Endpoint Dual Registration:** (checkbox)

Buttons for 'Commit & Continue', 'Commit', and 'Cancel' are at the top right of the form.


## 7. Configure Empirix Hammer IP

This section provides the procedures for configuring the Empirix Hammer IP. The procedures fall into the following areas:

- Assign IP addresses to each Hammer IP channel.
- Configure the system, including the originating and terminating channels and the phone book, using Hammer **Configurator**.
- Save and apply the Hammer configuration and start the Hammer server.
- Create and run the test script using Hammer **TestBuilder**.

### 7.1. Configure IP Addresses on Hammer IP Server

Hammer IP server needs to be configured with IP addresses for each channel. During the compliance test, 20 SIP endpoint channels were used. 10 channels were used to originate calls and 10 channels were used to terminate calls. This requires a block of 20 IP addresses, which must be contiguous. The 20 IP addresses used were from 10.64.110.151 to 10.64.110.170. These IP addresses are configured in the **Advanced TCP/IP Settings** under Network Connections (not shown) in Windows Server 2019.

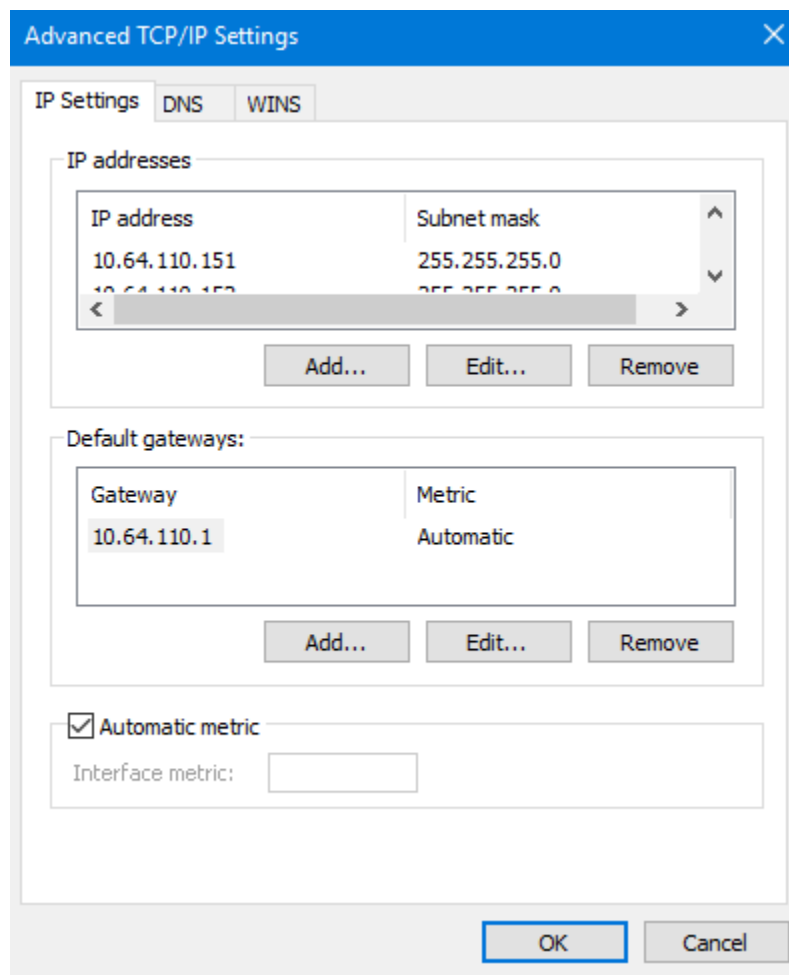

## 7.2. Configure System


This section covers the configuration of originating and terminating channels and the PhoneBook on Hammer IP. In this configuration, the originating channels emulate SIP endpoints (described in **Section 6.5**). The terminating channels can emulate SIP endpoints, SIP trunks, H.323 trunks or H.323 endpoints. These Application Notes will explicitly describe the configuration for terminating calls to SIP endpoints in **Section 7.2.2.1**. In addition, references are provided to other Application Notes for configuring terminating channels as SIP trunks, H.323 endpoints or H.323 trunks in **Sections 7.2.2.2, 7.2.2.3, and 7.2.2.4**, respectively. Only one of those sections needs to be followed depending on the configuration desired.

### 7.2.1. Configure Originating Channels – SIP Endpoints

The Empirix Hammer IP is configured through **Hammer Configurator**, a graphical user interface, residing on Hammer IP server. From Hammer IP server, run **Hammer Configurator**. The following screen is displayed.


**Note:** It is assumed that Hammer IP is already in **Master Controller Mode**. To verify, check that the title bar of Hammer **Configurator** indicates *Master Controller Mode Enabled* as shown below. It is also assumed that a system was already added to the configuration. In this configuration, the system name is *W2019SVR*, which corresponds to the server name.

In **Hammer Configurator**, the server name will appear in the left pane. Expand the server name (e.g., *W2019SVR*) in the left pane and click on **IP Channels Configuration**. The following window will be displayed. Select *Avaya\_SIP* for the **Signaling Project** and then click **New**.

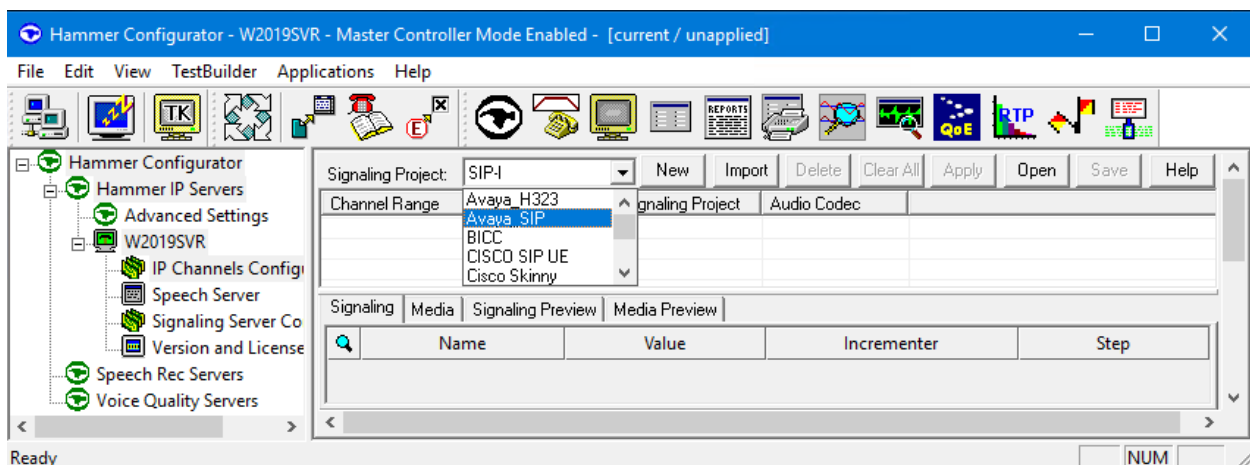

The first line in the grid that is highlighted in the figure below corresponds to the 10 originating channels. To set the number of channels in the group, click on the **Channel Range** cell in the grid and enter the number *10*. The following fields in the **Signaling** tab should be set as follows:

- **State Machine** should be set to *Avaya SIP Station*.
- **Station Extension** should be set to the first extension in the group (e.g., *78151*) and the **Incrementer** and **Step** fields should be set as shown so that the extension of the subsequent channels are incremented by one. This covers extensions from *78151* to *78160*.
- **Display Name** may be set to the first extension in the group (e.g., *78151*) and the **Incrementer** and **Step** fields should be set as shown so that the extension of the subsequent channels are incremented by one. This covers extensions from *78151* to *78160*.
- **Network Connection** should be set to the appropriate network interface.
- **Phone IP** should be set to the IP address of the first channel in the group and the **Incrementer** and **Step** fields should be set as shown so that the last of octet of the IP address is incremented by one. Note that this requires a block of contiguous IP addresses. This covers IP addresses from *10.64.110.151* to *10.64.110.160*.
- **Subnet Mask** should be set to the network mask (e.g., *255.255.255.0*).
- **Avaya IP** should be set to the Session Manager SIP interface (e.g., *10.64.110.212*).
- **Station Security Code** should match the one configured under the Communication Profile tab of the **SIP User** in Session Manager described in **Section 6.5**.
- **Register with Avaya SM** should be set to *Yes*.
- **Authenticate with Avaya CM** should be set to *Yes*.
- The default values for other fields may be used as shown.

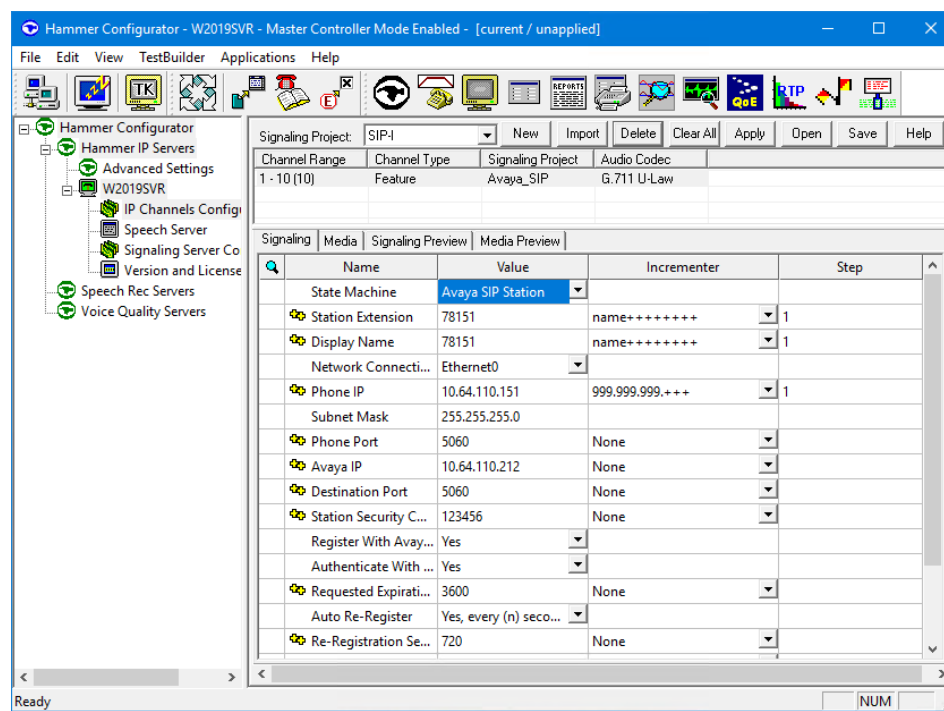

In the **Media** tab of the 10 originating channels, configure the fields as follows:

- **Audio Codec** should be set to the appropriate codec for the test. G711 U-Law, G729AB, and G.729A were used during the compliance testing.
- **Frequency [ms]** should be set to the appropriate value for the specified codec. It should match the Packet Size [ms] field in the **IP Codec Set** form on Communication Manager for the specified codec.
- **Network Connection** should specify the appropriate network interface.
- **Source IP Address** should be set to the IP address of the first channel in the group. The **Incrementer** and **Step** fields should be set as shown so that the last octet of the IP address is incremented for the subsequent channels. Note that the IP addresses for the channels need to be contiguous.
- **Media Profile** should be set to one that specifies the codec configured in the **Audio Codec** field.

The default values for the remaining fields may be used as shown.

Hammer Configurator - W2019SVR - Master Controller Mode Enabled - [current / unapplied]

File Edit View TestBuilder Applications Help

Hammer Configurator

- Hammer IP Servers
  - Advanced Settings
  - W2019SVR
    - IP Channels Config
    - Speech Server
    - Signaling Server Co
    - Version and License
    - Speech Rec Servers
    - Voice Quality Servers

Signaling Project: SIP-I New Import Delete Clear All Apply Open Save Help

Channel Range	Channel Type	Signaling Project	Audio Codec
1 - 10 (10)	Feature	Avaya_SIP	G.711 U-Law

Signaling Media Signaling Preview Media Preview

Name	Value	Incrementer	Step
Audio Codec	G.711 U-Law		
Frequency [ms]	20 [ms]		
Network Connection	Ethernet0		
Source IP Address	10.64.110.151	999.999.999.+++	1
Audio Port	10000	+++++++	2
DTMF Type	In Band		
Silence Type	Audio		
Jitter Buffer	8 x Frequency [ms]		
Subnet Mask	255.255.255.0		
Media Profile	G711U...		
RTCP	Enabled		
TestBuilder Configu...	None		
SRTP Encryption	Disabled		
SRTP Authentication	Disabled		

Ready NUM

## 7.2.2. Configure Terminating Channels

During the compliance test, the originating channels emulated SIP endpoints with the calls terminating on SIP endpoints, SIP trunks, H.323 endpoints, or H.323 trunks. Select one of the following subsections depending on the configuration desired.

- **Section 7.2.2.1** for terminating calls on SIP endpoints.
- **Section 7.2.2.2** for terminating calls on SIP trunks.
- **Section 7.2.2.3** for terminating calls on H.323 endpoints.
- **Section 7.2.2.4** for terminating calls on H.323 trunks.

**Note:** Ensure that the originating and terminating channels are assigned unique IP addresses.

### 7.2.2.1 Configure Terminating Channels – SIP Endpoints

The second line in the grid that is highlighted in the figure below corresponds to the second group of channels that will terminate calls. Set the **Channel Range** cell to the number of channels in this group. The configuration of the **Signaling** tab is similar to the one for the group of originating channels in **Section 7.2.1** with the exception that the **Station Extension** and **Phone IP** fields will be different. This group of channels will be assigned extensions 78161 to 78170 and IP addresses from 10.64.110.161 to 10.64.110.170. Again, the IP addresses for this group of channels need to be contiguous.


The screenshot shows the Hammer Configurator interface. The left sidebar displays a tree view with 'Hammer IP Servers' expanded, showing 'W2019SVR' and its sub-items: 'IP Channels Config', 'Speech Server', 'Signaling Server Co', 'Version and License', 'Speech Rec Servers', and 'Voice Quality Servers'. The main window is titled 'Hammer Configurator - W2019SVR - Master Controller Mode Enabled - [current / unapplied]'. It features a menu bar (File, Edit, View, TestBuilder, Applications, Help) and a toolbar. Below the toolbar, there's a 'Signaling Project' dropdown set to 'SIP-I' and buttons for 'New', 'Import', 'Delete', 'Clear All', 'Apply', 'Open', 'Save', and 'Help'. A table lists channel ranges and their configurations:

Channel Range	Channel Type	Signaling Project	Audio Codec
1 - 10 (10)	Feature	Avaya SIP	G.711 U-Law
11 - 20 (10)	Feature	Avaya SIP	G.711 U-Law

The 'Signaling' tab is selected, showing a configuration table with columns: Name, Value, Incrementer, and Step.

Name	Value	Incrementer	Step
State Machine	Avaya SIP Station		
Station Extension	78161	name++++++	1
Display Name	78161	name++++++	1
Network Connecti...	Ethernet0		
Phone IP	10.64.110.161	999.999.999.+++	1
Subnet Mask	255.255.255.0		
Phone Port	5060	None	
Avaya IP	10.64.110.212	None	
Destination Port	5060	None	
Station Security C...	123456	None	
Register With Avay...	Yes		
Authenticate With ...	Yes		
Requested Expirati...	3600	None	
Auto Re-Register	Yes, every (n) seco...		
Re-Registration Se...	720	None	
Registration Stagger	1000	++++++	200
Transport Protocol	UDP		
Enable OPTIONS "	NO		
Agent Login	No		

The **Media** tab for the group of terminating channels is shown below. The configuration is like the one for the group of originating channels except for the **Source IP Address** field.

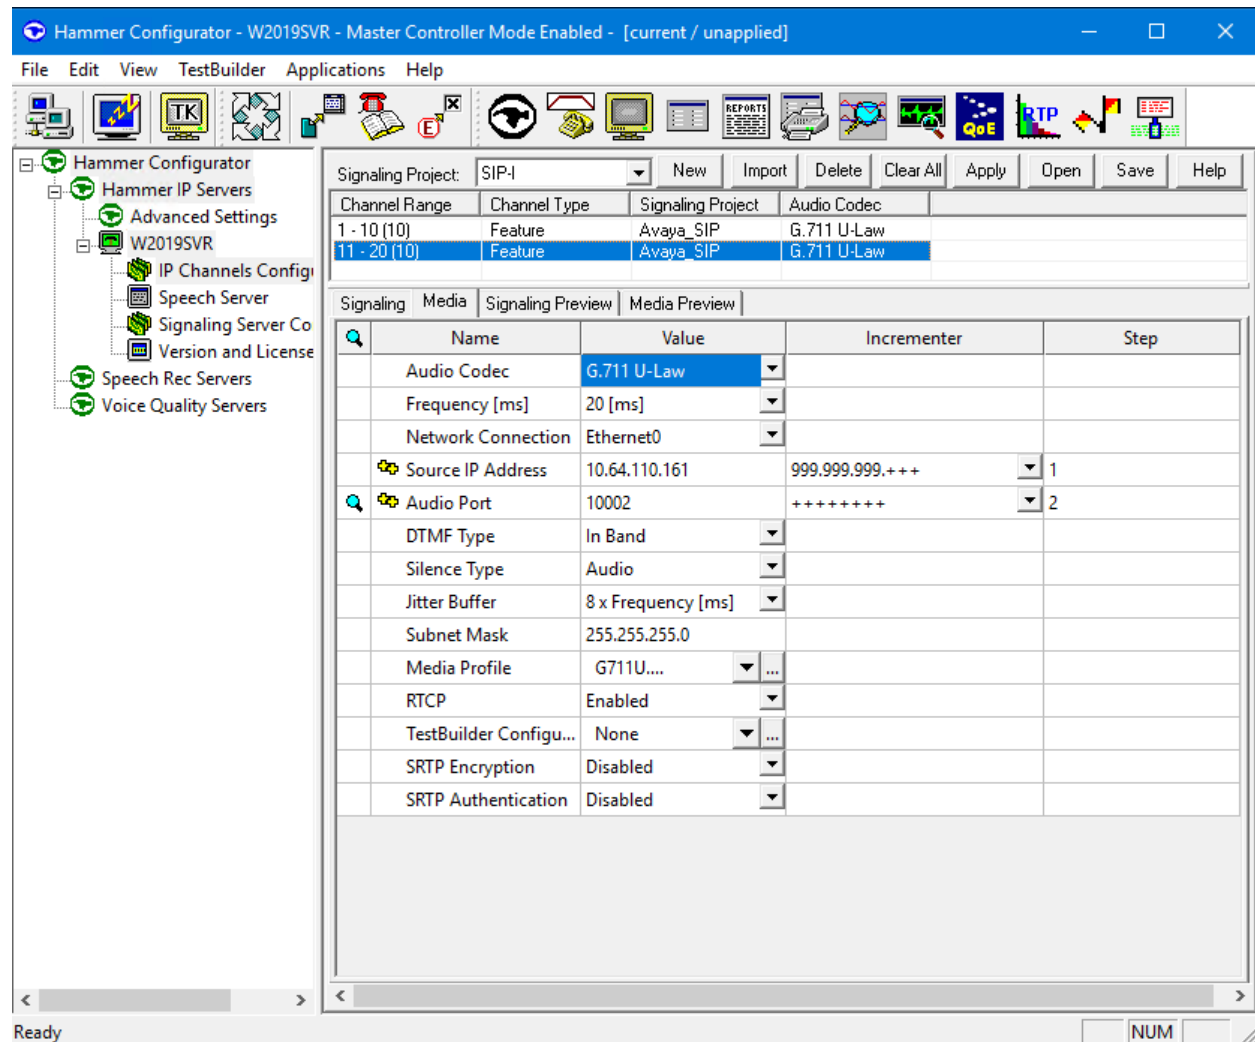

### 7.2.2.2 Terminating Channels – SIP Trunks

To terminate the calls to SIP trunks follow the instructions described in [3], specifically:

- **Section 5** describes how to configure call routing on Communication Manager.
- **Section 6** describes how to configure SIP trunks to Hammer IP on Session Manager.
- **Section 7.2.2.1** describes how to configure terminating SIP trunks on Hammer IP.
- **Section 7.4** describes how to specify the dialed digits when running a test script.

The configuration described in all the aforementioned sections of [3] must be completed for terminating calls to SIP trunks.

### 7.2.2.3 Configure Terminating Channels – H.323 Endpoints

To terminate the calls to H.323 endpoints follow the instructions described in [4], specifically:

- **Section 5** describes how to configure H.323 endpoints for the terminating channels on Communication Manager.
- **Section 6.2.2.1** describes how to configure terminating H.323 endpoints on Hammer IP.
- **Section 6.2.3** describes how to configure the PhoneBook.
- **Section 6.4** describes how to specify the dialed digits when running a test script.

The configuration described in all the aforementioned sections of [4] must be completed for terminating calls to H.323 endpoints.

### 7.2.2.4 Configure Terminating Channels – H.323 Trunks


To terminate the calls to H.323 trunks follow the instructions described in [5], specifically:

- **Section 5** describes how to configure H.323 trunks and call routing on Communication Manager.
- **Section 6.2.2.1** describes how to configure terminating H.323 trunks on Hammer IP.
- **Section 6.4** describes how to specify the dialed digits when running a test script.

The configuration described in all the aforementioned sections of [6] must be completed for terminating calls to H.323 trunks.

### 7.2.3. Configure the PhoneBook

The **PhoneBook** is used to specify which number each originating channel should dial when placing a call. Click on the **PhoneBook** icon in Hammer **Configurator**. The **PhoneBook** window is displayed below. The **Channel** column is automatically displayed with the appropriate channel groups. Right-mouse click on the first line corresponding to the group of originating channels (channels 1-10) and select the **Increment using a simple format** option as shown below.

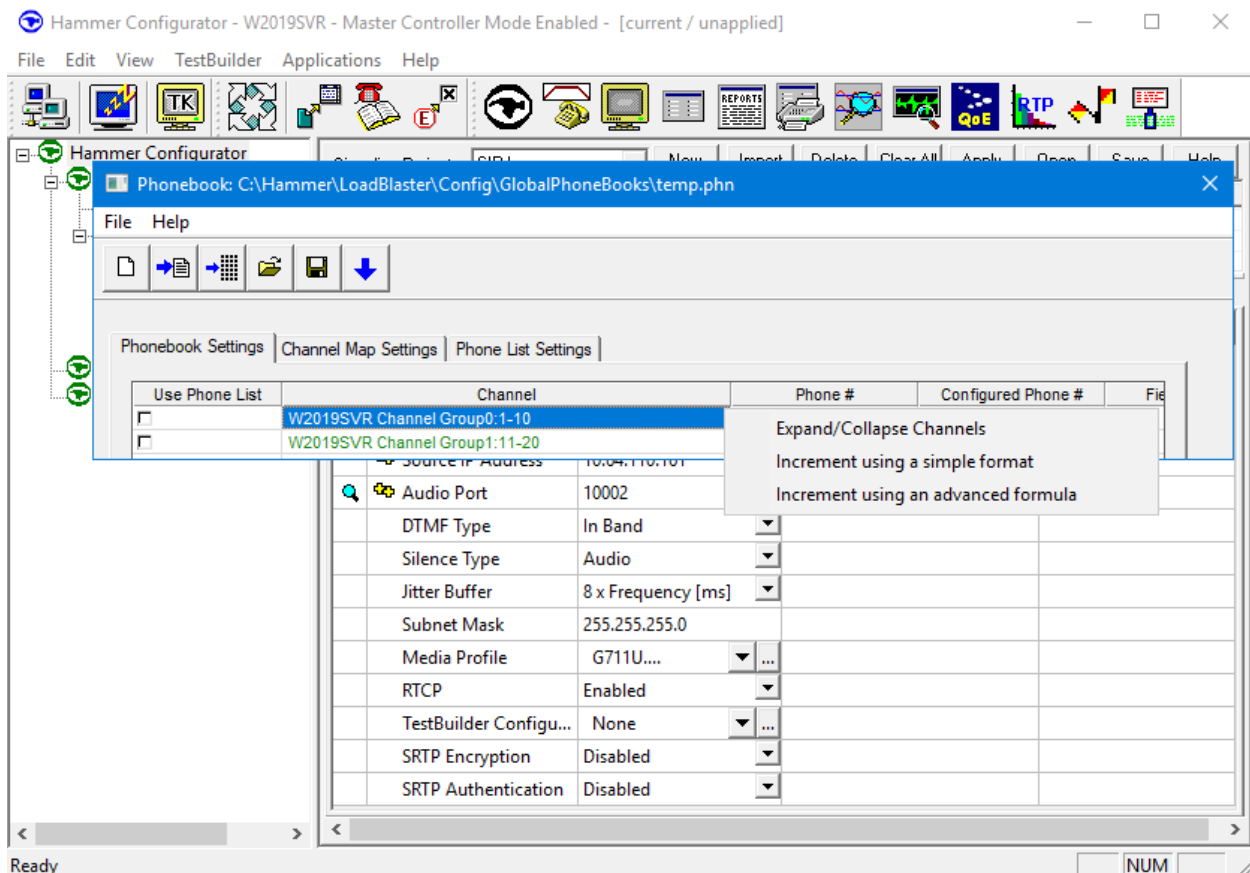

In the **Simple Incrementer** window, specify the number that the first originating channel should dial in the **Start Value** field. In this example, the first channel will dial **78161**, which corresponds to channel 11. Set the **Increment By** field to **1**. This specifies that the subsequent channels should increment the dialed number by one. For example, channel 1 will dial 78161, channel 2 will dial 78162, and so on. The **Start Channel** field should be set to the first channel number and the **End Channel** field should be set to the last originating channel number, which is 10. Click **OK**.

Simple Incrementer

Server: W2019SVR

Column: Phone #

Destination Server:

Fill Type

☒ Channel Fill ☐ Group Fill

Tel. Numbers | IP Addresses | URLs | MAC Addresses

☐ All numbers around nonnumerics  
(e.g. 9..1..888-555-\*999# becomes 9..1..888-556-\*000#)

☒ xxx-yyy-zzzz

☐ xxx (e.g. 1 (888) 555-9999 becomes 1 (889) 555-9999)

☐ yyy (e.g. 1 888 555 9999 becomes 1 888 556 9999)

☒ zzzz (e.g. 1-888-555-9999 becomes 1-888-555-0000)

☐ Use H323 formatting with prefix:

Start Value: 78161

Increment By: 1


Start Channel: 1

End Channel: 10


OK Cancel Apply Help

### 7.3. Save and Apply Hammer IP Configuration

This completes the configuration of Hammer IP. This configuration should be saved by clicking the **Save** button (not shown) on Hammer **Configurator** window. The configuration needs to be applied to the server for the changes to take effect. Click on the **Apply** button (not shown) in Hammer **Configurator** window. The following window is displayed as the configuration is being validated prior to being applied to the server.

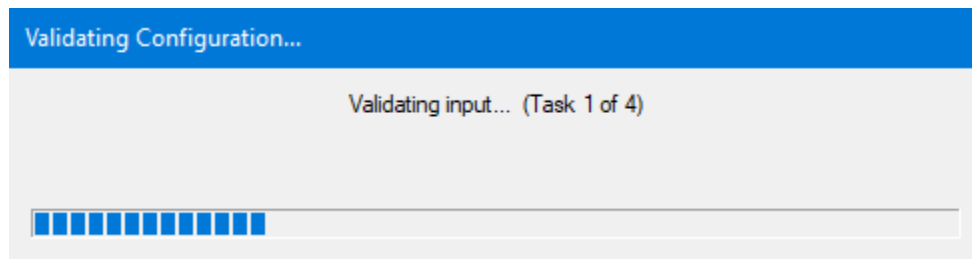

Check that the system has been started by clicking on the server name (e.g., *WIN2019SVR*) in the left pane of Hammer **Configurator**. If the current status is *System Is Stopped*, click the **Start system** button to start the system. When the system is started, it should appear as shown below and should also specify which configuration has been applied. The configuration performed above was saved as *Hammer IP DevConnect*. When the system is started, Hammer IP will register SIP endpoints with Session Manager.

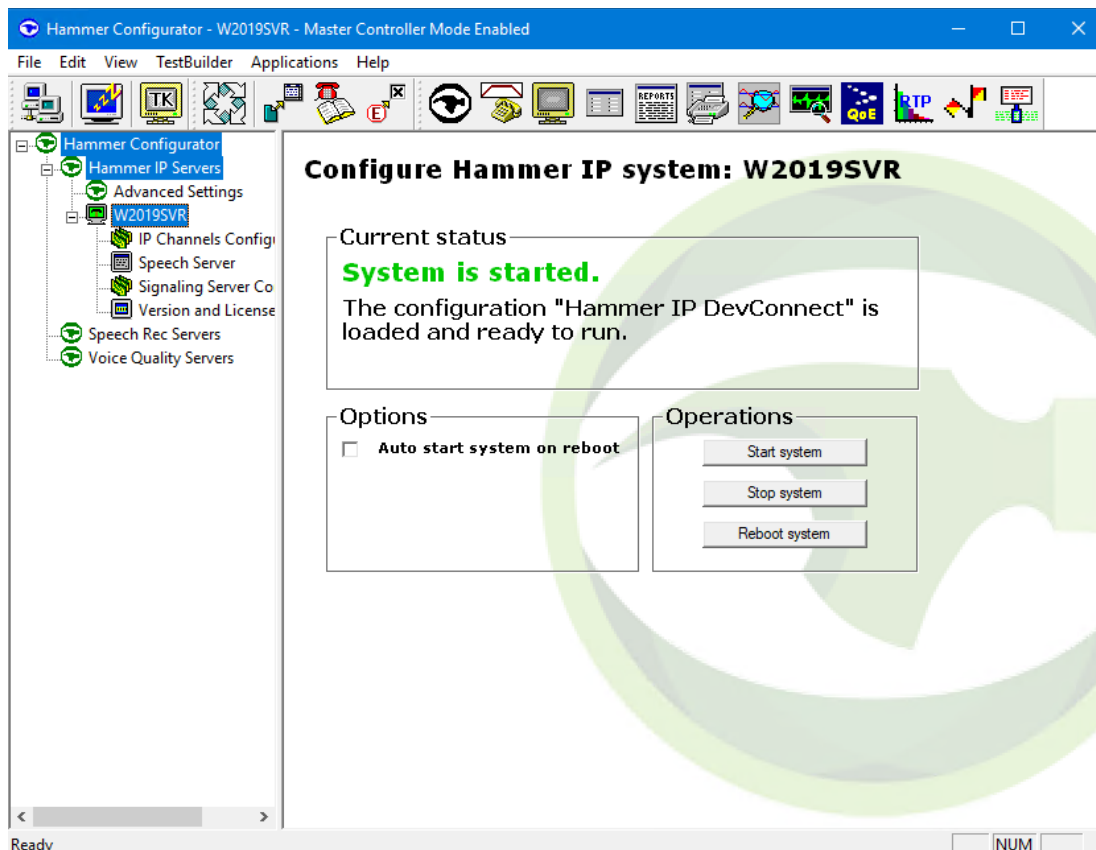


## 7.4. Configure and Run the Test Script

For the compliance test, three test scripts were used:


- `a_calls_b_dtmf.hld` to verify DTMF
- `a_calls_b_voice.hld` to verify stability for 1 hour of execution
- Two Empirix provided scripts, `Simple_VQ_Answer` and `A_calls_b_voice_VQ_A` to verify voice quality. The modified script provided MOH values as a workaround to the Monitor issues listed in **Section 2.2**.

The sample test script, `a_calls_b_dtmf.hld`, establishes a VoIP call between two SIP endpoints on Hammer IP, followed by the originating side playing digits to the far-end and verifies that the expected digits have arrived. This occurs for both audio paths. The test script is configured with Hammer **TestBuilder** application and can be displayed in a ladder diagram as shown below by double-clicking on the test script name.

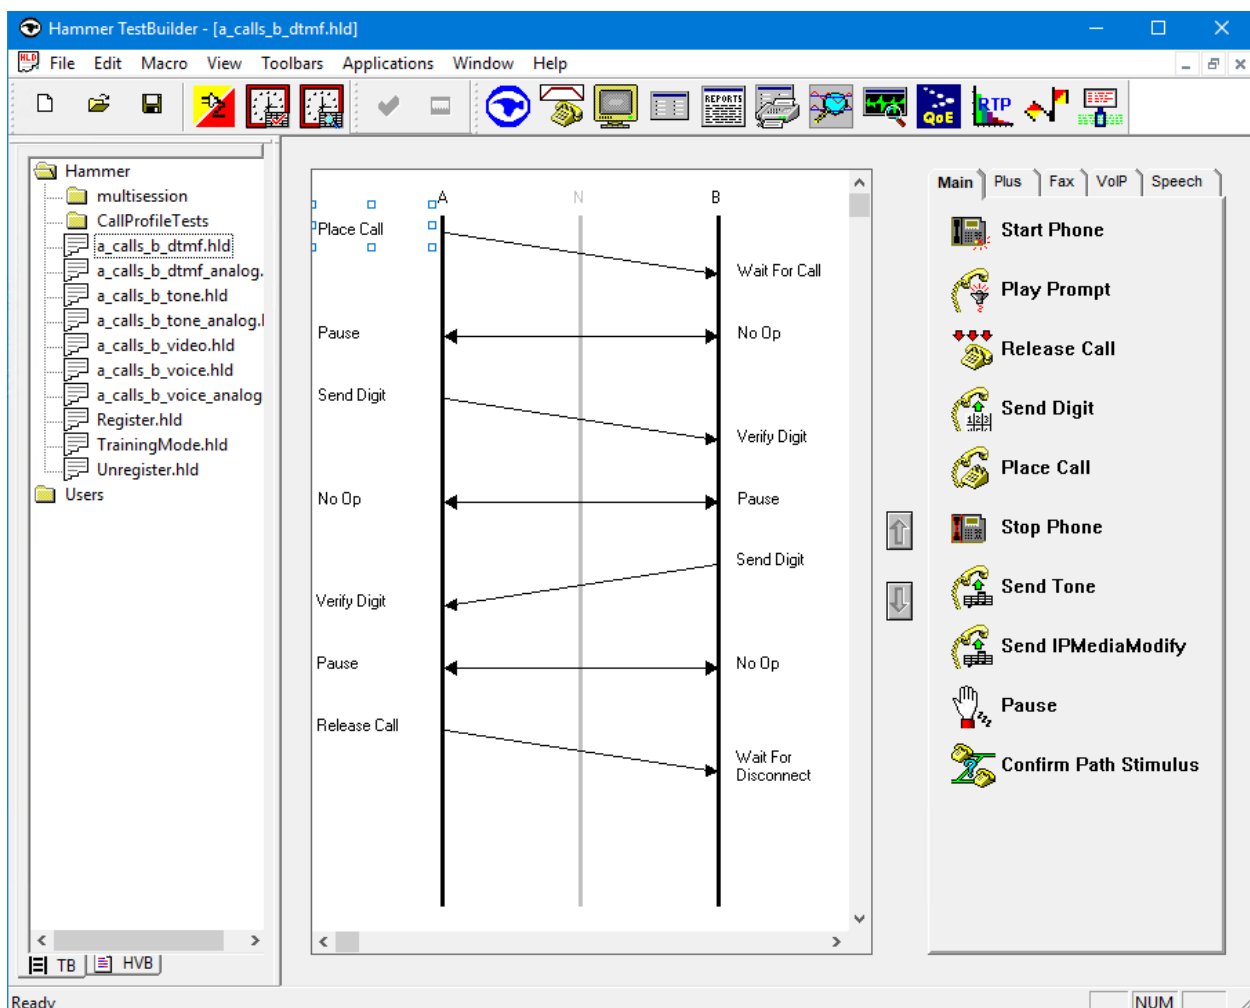


In the sample test script configured above, the A-side (originating SIP endpoint) places a call to the B-side (terminating SIP endpoint) using the **Place Call** action. The **Place Call** properties can be configured by double-clicking on the action in the ladder diagram. The **Place Call Properties** is configured to use the PhoneBook as shown below.

**Note:** Disable the **Do Connect Latency** option in the **Place Call Properties** window.

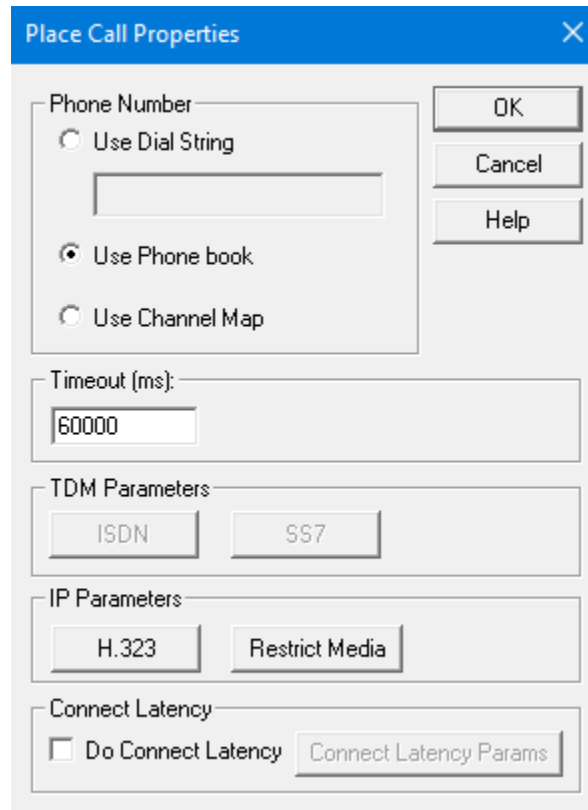

The image shows a 'Place Call Properties' dialog box with a blue title bar and a close button. It contains several sections: 'Phone Number' with radio buttons for 'Use Dial String', 'Use Phone book' (selected), and 'Use Channel Map'; a 'Timeout (ms):' field with the value '60000'; 'TDM Parameters' with buttons for 'ISDN' and 'SS7'; 'IP Parameters' with buttons for 'H.323' and 'Restrict Media'; and 'Connect Latency' with a checkbox for 'Do Connect Latency' (unchecked) and a 'Connect Latency Params' button. On the right side, there are 'OK', 'Cancel', and 'Help' buttons.

To run the test, right-mouse click on the test script in the left pane of Hammer **TestBuilder** window and navigate to **Schedule→Edit & Run**. To re-run the test, the user can simply select **Schedule→Run**, if no changes are required.

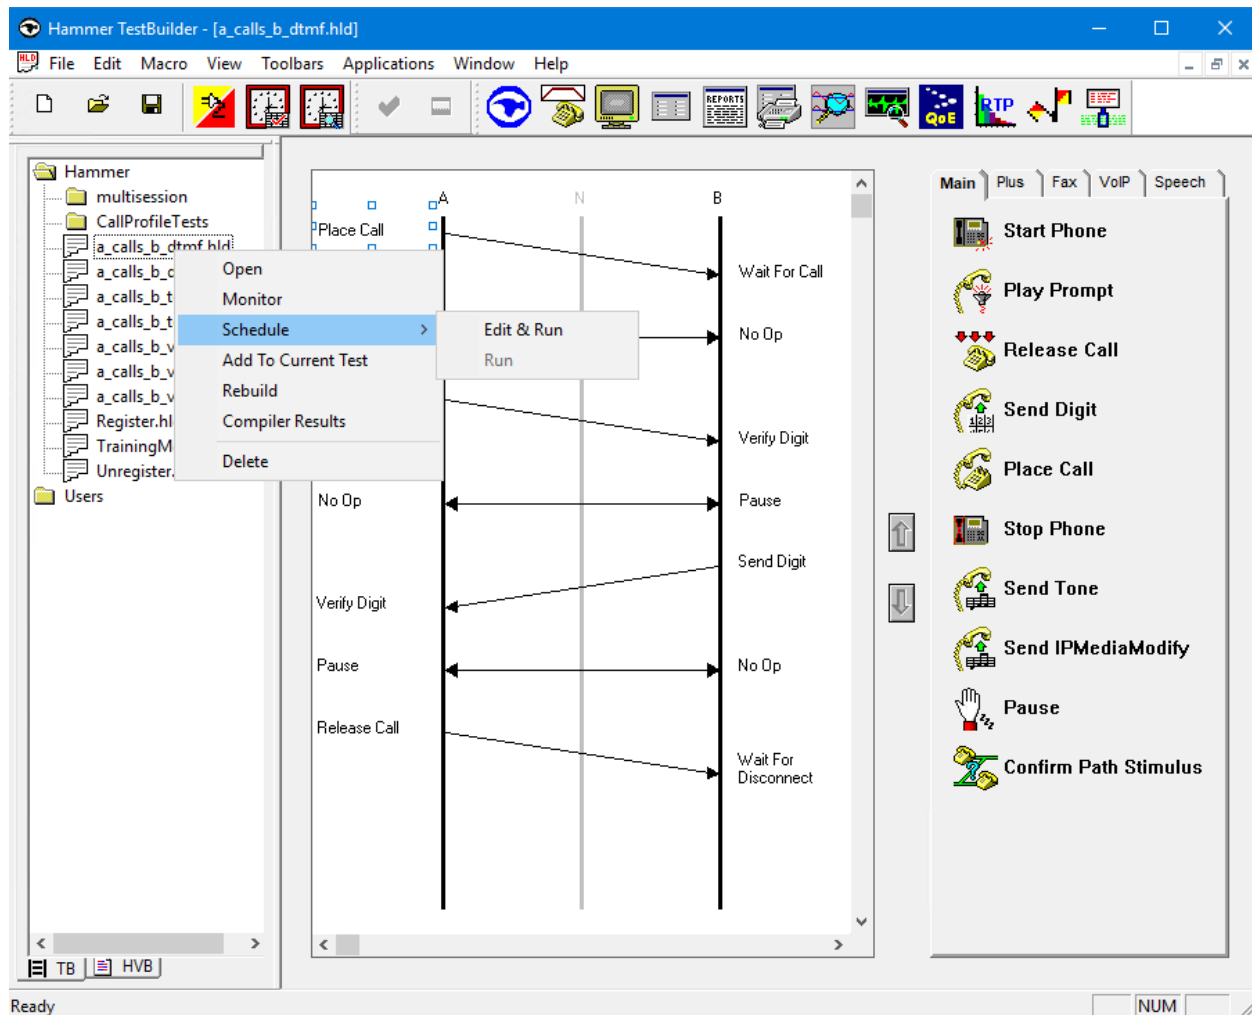

In the **Properties** window, click on the ellipses button (...) in the **Channels** section and assign channels to the **A-Side** and **B-Side**. Set the **Loop Count** to the appropriate value to control the number of iterations the test should run. Setting this field to *-1* will allow the test to run forever. Setting this field to a specific number will run the test for the many iterations and then stop. The **Guard Time (ms)** field specifies how long to wait before the test is run again on the same channel. The minimum setting should be *3500*. The **Stagger** section allows the user to specify how long to wait before the test is run on the next channel.

**Important Note:** The **Guard Time** and **Stagger** parameters should be carefully considered for every test. A test script could fail because the configuration under test cannot handle the load generated by Hammer IP. These parameters can slow down the test to a rate that can be reasonably handled by the test configuration.

The screenshot shows the 'Properties' dialog box for the 'TB Scheduler' tab. The 'Start Time' is set to 10:59:39 AM on 3/14/2022. The 'Channels' section has empty fields for 'A-Side' and 'B-Side' with an ellipsis button to the right. The 'PhoneBook' section shows 'Default-phonebook' selected. The 'Stagger' section has 'User Defined' selected with a value of 1000 ms. The 'Action if a Channel is busy:' is set to 'Wait'. The 'Max Active Connections:' is set to 0. The 'Max Test Time:' is set to 0 hours and 0 minutes. The 'Loop Count:' is set to 1. The 'Guard Time (ms):' is set to 3500. The dialog has buttons for OK, Cancel, Apply, and Help at the bottom.

## 8. Verification Steps

This section provides the tests that can be performed to verify proper configuration of Avaya Aura® Communication Manager, Avaya Aura® Session Manager and Empirix Hammer IP.

### 8.1. Verify Avaya Aura® Communication Manager

When Hammer IP is running a test script, the **status trunk** command may be used to view the active call status. The trunk that is being monitored here is the trunk to Session Manager. This command should specify the trunk group and trunk member used for the call be specified.

status trunk 1/1	Page 1 of 4
TRUNK STATUS	
Trunk Group/Member: 0001/0006	Service State: in-service/active
Port: T000006	Maintenance Busy? no
Signaling Group ID:1	
IGAR Connection? no	
Connected Ports: T00047	

**Page 2** of the **status trunk** command indicates the codec being used for the call and whether the call is shuffled. If the call is not shuffled, the **Audio Connection Type** field would be set to *ip-tdm*, set to *ip-direct* as shown below.

status trunk 1/1	Page 2 of 4
CALL CONTROL SIGNALING	
Near-end Signaling Loc: PROCR	
Signaling	IP Address Port
Near-end:	10.64.110.213 : 5061
Far-end:	10.64.110.212 : 5061
H.245 Near:	
H.245 Far:	
H.245 Signaling Loc:	H.245 Tunneled in Q.931? no
<b>Audio Connection Type: ip-direct</b>	Authentication Type: None
Near-end Audio Loc:	<b>Codec Type: G.711MU</b>
Audio	IP Address Port
Near-end:	10.64.110.151 : 10000
Far-end:	10.64.110.161 : 10002
Video Near:	
Video Far:	
Video Port:	
Video Near-end Codec:	Video Far-end Codec:

## 8.2. Verify Avaya Aura® Session Manager

The registered SIP endpoints can also be viewed from Session Manager by navigating to **Home→Elements→Session Manager→System Status→User Registrations**.

**Note:** Make sure that all registered SIP endpoints associated with Hammer IP only have one IP address.

**AVAYA** Aura® System Manager 8.1

Users ▾ Elements ▾ Services ▾ Widgets ▾ Shortcuts ▾ Search [ ] admin

Home Session Manager ×

### User Registrations

Select rows to send notifications to devices. Click on Details column for complete registration status.

View ▾ Default Export Force Unregister AST Device Notifications: Reboot Reload ▾ Fallback As of 11:19 AM Customize ▾ Advanced Search ▾


56 Items Show 15 ▾ Filter: Enable

<input type="checkbox"/>	Details	Address ▾	First Name	Last Name	Actual Location	IP Address	Remote Office	Shared Control	Simult. Devices	AST Device	Registered			
											Prim	Sec	Surv	Visiting
<input type="checkbox"/>	Show	78170@avaya.com	78170	Hammer	DevConnect	10.64.110.170	<input type="checkbox"/>	<input type="checkbox"/>	1/1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	Show	78169@avaya.com	78169	Hammer	DevConnect	10.64.110.169	<input type="checkbox"/>	<input type="checkbox"/>	1/1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	Show	78168@avaya.com	78168	Hammer	DevConnect	10.64.110.168	<input type="checkbox"/>	<input type="checkbox"/>	1/1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	Show	78167@avaya.com	78167	Hammer	DevConnect	10.64.110.167	<input type="checkbox"/>	<input type="checkbox"/>	1/1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	Show	78166@avaya.com	78166	Hammer	DevConnect	10.64.110.166	<input type="checkbox"/>	<input type="checkbox"/>	1/1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	Show	78165@avaya.com	78165	Hammer	DevConnect	10.64.110.165	<input type="checkbox"/>	<input type="checkbox"/>	1/1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	Show	78164@avaya.com	78164	Hammer	DevConnect	10.64.110.164	<input type="checkbox"/>	<input type="checkbox"/>	1/1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	Show	78163@avaya.com	78163	Hammer	DevConnect	10.64.110.163	<input type="checkbox"/>	<input type="checkbox"/>	1/1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	Show	78162@avaya.com	78162	Hammer	DevConnect	10.64.110.162	<input type="checkbox"/>	<input type="checkbox"/>	1/1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	Show	78161@avaya.com	78161	Hammer	DevConnect	10.64.110.161	<input type="checkbox"/>	<input type="checkbox"/>	1/1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	Show	78160@avaya.com	78160	Hammer	DevConnect	10.64.110.160	<input type="checkbox"/>	<input type="checkbox"/>	1/1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	Show	78159@avaya.com	78159	Hammer	DevConnect	10.64.110.159	<input type="checkbox"/>	<input type="checkbox"/>	1/1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	Show	78158@avaya.com	78158	Hammer	DevConnect	10.64.110.158	<input type="checkbox"/>	<input type="checkbox"/>	1/1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	Show	78157@avaya.com	78157	Hammer	DevConnect	10.64.110.157	<input type="checkbox"/>	<input type="checkbox"/>	1/1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	Show	78156@avaya.com	78156	Hammer	DevConnect	10.64.110.156	<input type="checkbox"/>	<input type="checkbox"/>	1/1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>


Select : All, None Page 1 of 4

### 8.3. Verify Empirix Hammer IP

To view the run execution status from Hammer IP, make sure that Hammer **System Monitor** is running before starting the script. The call log for an originating channel may be logged to the left window and the call log for a terminating channel may be logged to the right window. The green circle for the channel means that the script is running. The red circle means that the script has completed. A script error is indicated by a red X across the circle (not shown).

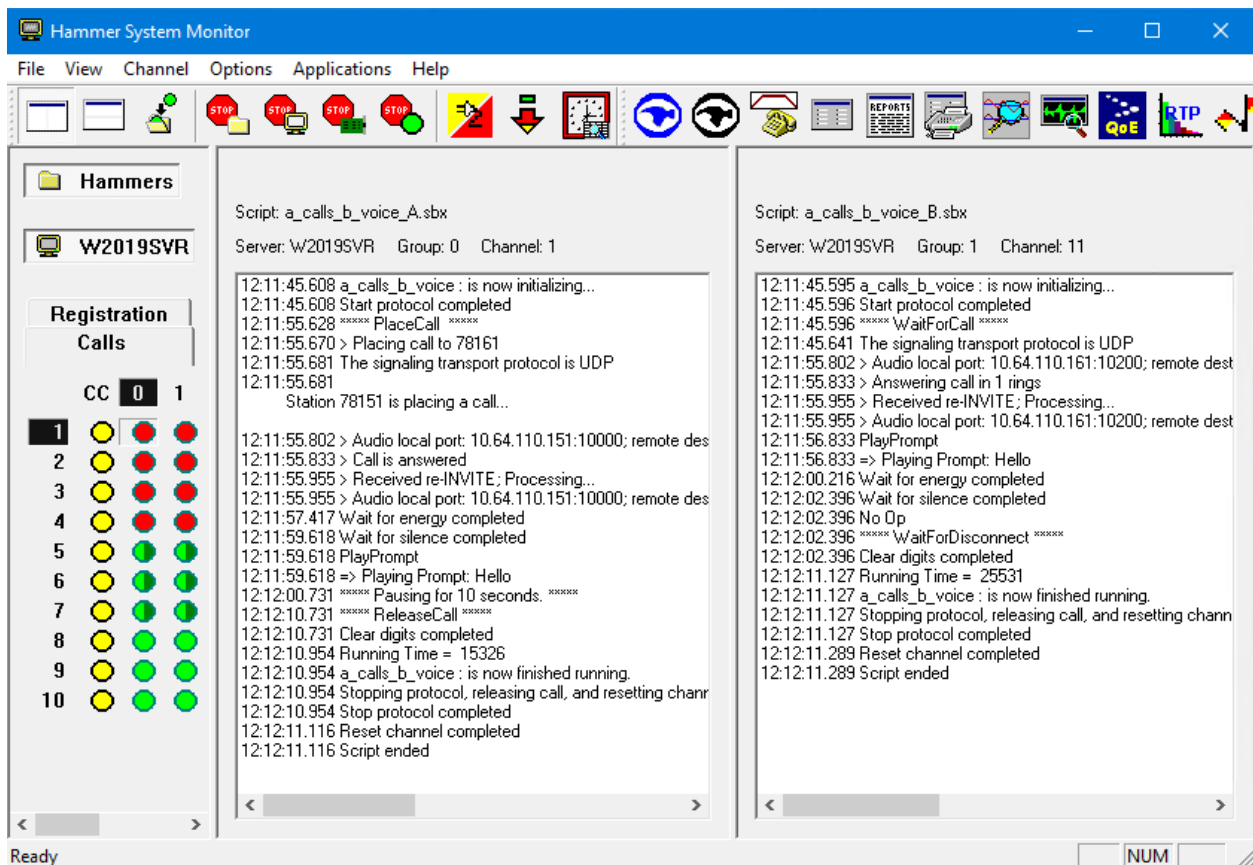

Hammer **Call Summary Monitor** may be used to get a test status overview, including the number of call attempts, number of failed calls, call length, and other metrics. **Note** Voice Quality Metrics are not displayed correctly as noted in **Section 2.2**.

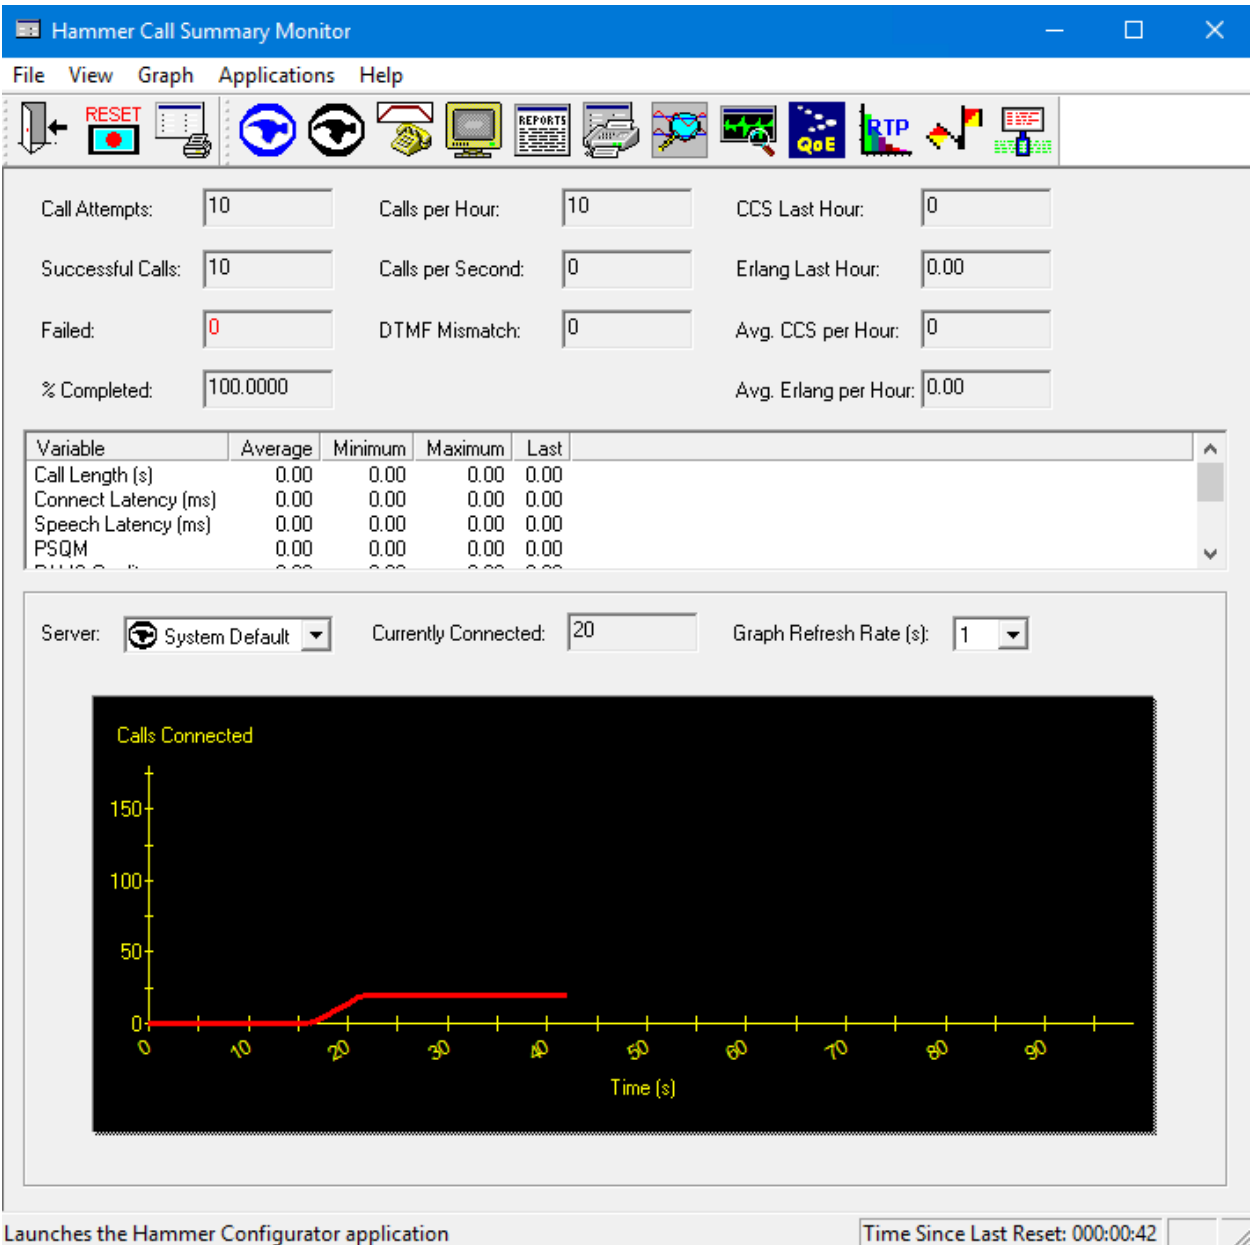

## 9. Conclusion

These Application Notes describe the configuration steps required to integrate the Empirix Hammer IP with an Avaya SIP telephony network using SIP endpoint emulation. Hammer IP was able to register with Avaya Aura® Session Manager, successfully establish calls through Avaya Aura® Communication Manager to H.323 and SIP endpoints/trunks, generate voice quality metrics, monitor the calls, and generate reports. All feature and serviceability test cases were completed with observations noted in **Section 2.2**.

## 10. Additional References

This section references the product documentation relevant to these Application Notes. The following Avaya product documentation is available at [support.avaya.com](http://support.avaya.com).

- [1] *Administering Avaya Aura® Communication Manager*, Issue 12, Release 8.1.x, July 2021
- [2] *Administering Avaya Aura® Session Manager*, Issue 10, Release 8.1.x, September 2021
- [3] *Application Notes for Empirix Hammer IP with Avaya Aura® Communication Manager Avaya Aura® Session Manager using SIP Trunk Emulation*, Issue 1.0, available at <http://www.avaya.com>.
- [4] *Application Notes for Empirix Hammer IP with Avaya Aura® Communication Manager using H.323 Endpoint Emulation*, Issue 1.0, available at <http://www.avaya.com>.
- [5] *Application Notes for Empirix Hammer IP with Avaya Aura® Communication Manager using H.323 Trunk Emulation*, Issue 1.0, available at <http://www.avaya.com>.

---

**©2022 Avaya Inc. All Rights Reserved.**

Avaya and the Avaya Logo are trademarks of Avaya Inc. All trademarks identified by ® and ™ are registered trademarks or trademarks, respectively, of Avaya Inc. All other trademarks are the property of their respective owners. The information provided in these Application Notes is subject to change without notice. The configurations, technical data, and recommendations provided in these Application Notes are believed to be accurate and dependable, but are presented without express or implied warranty. Users are responsible for their application of any products specified in these Application Notes.

Please e-mail any questions or comments pertaining to these Application Notes along with the full title name and filename, located in the lower right corner, directly to the Avaya DevConnect Program at [devconnect@avaya.com](mailto:devconnect@avaya.com).