



Avaya Solution & Interoperability Test Lab

Application Notes for Configuring Avaya Aura® Communication Manager R10.1, Avaya Aura® Session Manager R10.1, Avaya Experience Portal R8.1 and Avaya Session Border Controller for Enterprise R10.1 to support BT BV IP Connect - Issue 1.0

Abstract

These Application Notes describe the steps used to configure Session Initiation Protocol (SIP) trunking between BT BV IP Connect and an Avaya SIP enabled Enterprise Solution. The Avaya solution consists of Avaya Aura® Communication Manager 10.1, Avaya Aura® Session Manager 10.1, Avaya Experience Portal R8.1 and Avaya Session Border Controller for Enterprise 10.1.

The BT BV IP Connect SIP Platform provides PSTN access via a SIP trunk connected to the BT Voice over Internet Protocol (VoIP) network as an alternative to legacy analogue or digital trunks.

Readers should pay attention to **Section 2**, in particular the scope of testing as outlined in **Section 2.1** as well as the observations noted in **Section 2.2**, to ensure that their own use cases are adequately covered by this scope and results.

BT Germany is a member of the DevConnect Service Provider program. Information in these Application Notes has been obtained through DevConnect compliance testing and additional technical discussions. Testing was conducted via the DevConnect Program at the Avaya Solution and Interoperability Test Lab.

Table of Contents

- 1. Introduction..... 4
- 2. General Test Approach and Test Results..... 4
 - 2.1. Interoperability Compliance Testing..... 5
 - 2.2. Test Results 6
 - 2.3. Support 7
- 3. Reference Configuration..... 8
- 4. Equipment and Software Validated 9
- 5. Configure Avaya Aura® Communication Manager 10
 - 5.1. Confirm System Features 10
 - 5.2. Administer IP Node Names..... 11
 - 5.3. Administer IP Network Region..... 12
 - 5.4. Administer IP Codec Set 13
 - 5.5. Administer SIP Signaling Groups 14
 - 5.6. Administer SIP Trunk Groups..... 15
 - 5.7. Administer Calling Party Number Information 17
 - 5.8. Administer Route Selection for Outbound Calls..... 17
 - 5.9. Administer Incoming Digit Translation 19
 - 5.10. EC500 Configuration..... 20
- 6. Configuring Avaya Aura® Session Manager 21
 - 6.1. Log in to Avaya Aura® System Manager..... 21
 - 6.2. Administer SIP Domain 22
 - 6.3. Administer Locations 23
 - 6.4. Administer Adaptations..... 26
 - 6.5. Administer SIP Entities 28
 - 6.5.1. Avaya Aura® Session Manager SIP Entity 29
 - 6.5.2. Avaya Aura® Communication Manager SIP Entity 30
 - 6.5.3. Avaya Experience Portal SIP Entity 31
 - 6.5.4. Avaya Session Border Controller for Enterprise SIP Entity..... 32
 - 6.6. Administer Entity Links 33
 - 6.7. Administer Routing Policies 34
 - 6.8. Administer Dial Patterns 36
- 7. Configure Avaya Experience Portal 39
 - 7.1. Background 39
 - 7.2. Logging In and Licensing 40
 - 7.3. VoIP Connection 41
 - 7.4. Speech Servers 43
 - 7.5. Application References 44
 - 7.6. MPP Servers and VoIP Settings..... 46
- 8. Configure Avaya Session Border Controller for Enterprise 49
 - 8.1. Access Avaya Session Border Controller for Enterprise 49
 - 8.2. Define Network Management 51
 - 8.3. Define TLS Profiles 54
 - 8.3.1. Certificates 54
 - 8.3.2. Client Profile..... 55

8.3.3.	Server Profile	56
8.4.	Define Interfaces	57
8.4.1.	Signalling Interfaces	57
8.4.2.	Media Interfaces.....	58
8.5.	Define Server Interworking.....	59
8.5.1.	Server Interworking Avaya.....	59
8.5.2.	Server Interworking – BT	61
8.6.	Signalling Manipulation.....	63
8.7.	Define Servers	65
8.7.1.	Server Configuration – Avaya	65
8.7.2.	Server Configuration – BT.....	67
8.8.	Routing	69
8.8.1.	Routing – Avaya	69
8.8.2.	Routing – BT.....	70
8.9.	Topology Hiding	72
8.10.	Media Rules	74
8.11.	End Point Policy Groups	75
8.11.1.	End Point Policy Group – Session Manager	75
8.11.2.	End Point Policy Group – BT	76
8.12.	Server Flows	77
9.	Configure the BT SIP Trunk Equipment	80
10.	Verification Steps.....	80
11.	Conclusion	82
12.	Additional References.....	82
13.	Appendix A: SigMa Scripts.....	83

1. Introduction

These Application Notes describe the steps used to configure Session Initiation Protocol (SIP) trunking between the BT BV IP Connect and an Avaya SIP-enabled enterprise solution. The Avaya solution consists of the following: Avaya Aura® Communication Manager R10.1 (Communication Manager); Avaya Aura® Session Manager R10.1 (Session Manager), Avaya Experience Portal R8.1 (Experience Portal) and Avaya Session Border Controller for Enterprise R10.1 (Avaya SBCE).

Customers using this Avaya SIP-enabled enterprise solution with the BT SIP platform are able to place and receive PSTN calls via a dedicated Internet connection and the SIP protocol. This approach generally results in lower cost for the enterprise customer.

2. General Test Approach and Test Results

The general test approach was to configure a simulated enterprise site using an Avaya SIP telephony solution consisting of Communication Manager, Session Manager and Avaya SBCE. The enterprise site was configured to connect to the BT SIP platform.

DevConnect Compliance Testing is conducted jointly by Avaya and DevConnect members. The jointly-defined test plan focuses on exercising APIs and/or standards-based interfaces pertinent to the interoperability of the tested products and their functionalities. DevConnect Compliance Testing is not intended to substitute full product performance or feature testing performed by DevConnect members, nor is it to be construed as an endorsement by Avaya of the suitability or completeness of a DevConnect member's solution.

Avaya recommends our customers implement Avaya solutions using appropriate security and encryption capabilities enabled by our products. The testing referenced in these DevConnect Application Notes included the enablement of supported encryption capabilities in the Avaya products. Readers should consult the appropriate Avaya product documentation for further information regarding security and encryption capabilities supported by those Avaya products.

Support for these security and encryption capabilities in any non-Avaya solution component is the responsibility of each individual vendor. Readers should consult the appropriate vendor-supplied product documentation for more information regarding those products.

2.1. Interoperability Compliance Testing

The interoperability test included the following:

- Incoming calls to the enterprise site from PSTN phones using the BT BV IP Connect, calls made to SIP and H.323 telephones at the enterprise.
- Outgoing calls from the enterprise site completed via the BT BV IP Connect to PSTN destinations, calls made from SIP and H.323 telephones.
- Incoming and Outgoing PSTN calls to/from Avaya one-X® Communicator and Avaya Workplace for Windows soft phones.
- Calls using the G.711A, G.729 and G.711MU codec's.
- Fax calls to/from a group 3 fax machine to a PSTN-connected fax machine using G.711 pass-through and T.38 fax transmissions.
- DTMF transmission using RFC 2833 with successful Voice Mail/Vector navigation for inbound and outbound calls.
- User features such as hold and resume, transfer, conference, call forwarding, etc.
- Caller ID Presentation and Caller ID Restriction.
- Call coverage and call forwarding for endpoints at the enterprise site.
- Inbound caller interaction with Experience Portal applications, including prompting, caller DTMF input, wait treatment (e.g., announcements and/or music on hold).
- Experience Portal use of SIP REFER to redirect inbound calls, via the Avaya SBCE, to the appropriate Communication Manager agents and extensions.
- Call and two-way talk path establishment between callers and Communication Manager agents and extensions following redirection from Experience Portal.
- Routing inbound vector call to call center agent queues.
- Transmission and response of SIP OPTIONS messages sent by BT requiring Avaya response and sent by Avaya requiring BT response.

2.2. Test Results

Interoperability testing of the sample configuration was completed with successful results for the BT BV IP Connect with the following observations:

- It was observed when performing Blind Transfer to PSTN numbers on inbound calls (i.e. PSTN (A) -> Avaya (B) -> Blind transfer -> PSTN (C)) from Avaya SIP handsets, that BT BV IP Connect was responding with a “604 Does Not Exist Anywhere”. The reason BT BV IP Connect was responding with “604 Does Not Exist Anywhere” is that the Avaya SIP handsets populate the P-Asserted-Identity Header with the originating caller (A) CLID. BT BV IP Connect require the P-Asserted-Identity Header to be populated with the CLID of a known BT BV IP Connect number (B) on their SIP platform. In order for Blind Transfers to PSTN to complete successfully, a SigMa script was created on the Avaya SBCE to populate the P-Asserted-Identity Header with a known BT BV IP Connect CLID number on their SIP platform. The details of the Sigma Script are outlined in **Section 8.6**.
- When attempting to execute a Blind Transfer to a PSTN phone for both inbound and outbound calls, BT were responding with “415 Unsupported Media Type” as Communication Manager uses the UPDATE method to execute the Blind Transfer successfully. In order for Blind Transfers to execute successfully for inbound and outbound calls, set “Always Use re-INVITE for Display Updates” to “y” within the trunk groups settings in **Section 5.6**.
- It was observed during testing that Experience Portal uses REFER to complete Blind and Consultative transfers to internal Contact Center/ACD applications, such as agent routing, which led to signalling issues and transfer failures between Avaya and the BT BV IP Connect SIP trunk. In order to complete Blind and Consultative transfers successfully within Experience Portal, REFER Handling needs to be enabled on the BT Server Interworking profile (**Section 8.5.2**) on the Avaya SBCE. When the REFER message comes from an Avaya enterprise element such as Experience Portal, the Avaya SBCE translates that REFER into a reINVITE which will then be routed towards the trunk server (i.e., BT BV IP Connect) based on the trunk server interworking profile configuration.
- It was observed during testing that Blind and Consultative transfers from Experience Portal to external PSTN phones were failing due to lack of transmission of media. This is due to the handling of the signalling within the BT BV IP Connect SIP platform when executing the Consultative and Blind transfers from Experience Portal to the external PSTN. Therefore, Blind and Consultative transfers from Experience Portal to the PSTN are not currently supported on the BT BV IP Connect SIP platform.
- All unwanted Avaya proprietary SIP headers and MIME was stripped on outbound calls using the Adaptation Module in Session Manager.
- No inbound toll free numbers were tested, however routing of inbound DDI numbers and the relevant number translation was successfully tested.
- Access to Emergency Services was not tested as no test call had been booked with the Emergency Services Operator.

2.3. Support

For technical support on the Avaya products described in these Application Notes visit <http://support.avaya.com>.

For technical support on BT products please visit the website at www.business.bt.com contact an authorized BT representative.

3. Reference Configuration

Figure 1 illustrates the test configuration. The test configuration shows an Enterprise site connected to the BT SIP platform. Located at the Enterprise site is an Avaya SBCE, Experience Portal, Session Manager and Communication Manager. Endpoints are Avaya 96x1 series IP telephones (with SIP and H.323 firmware), Avaya J179 series IP telephone (with SIP firmware), Avaya 16xx series IP telephones (with H.323 firmware), Avaya analogue telephones and an analogue fax machine. Also included in the test configuration was an Avaya one-X® Communicator soft phone and Avaya Workplace for Windows running on laptop PCs.

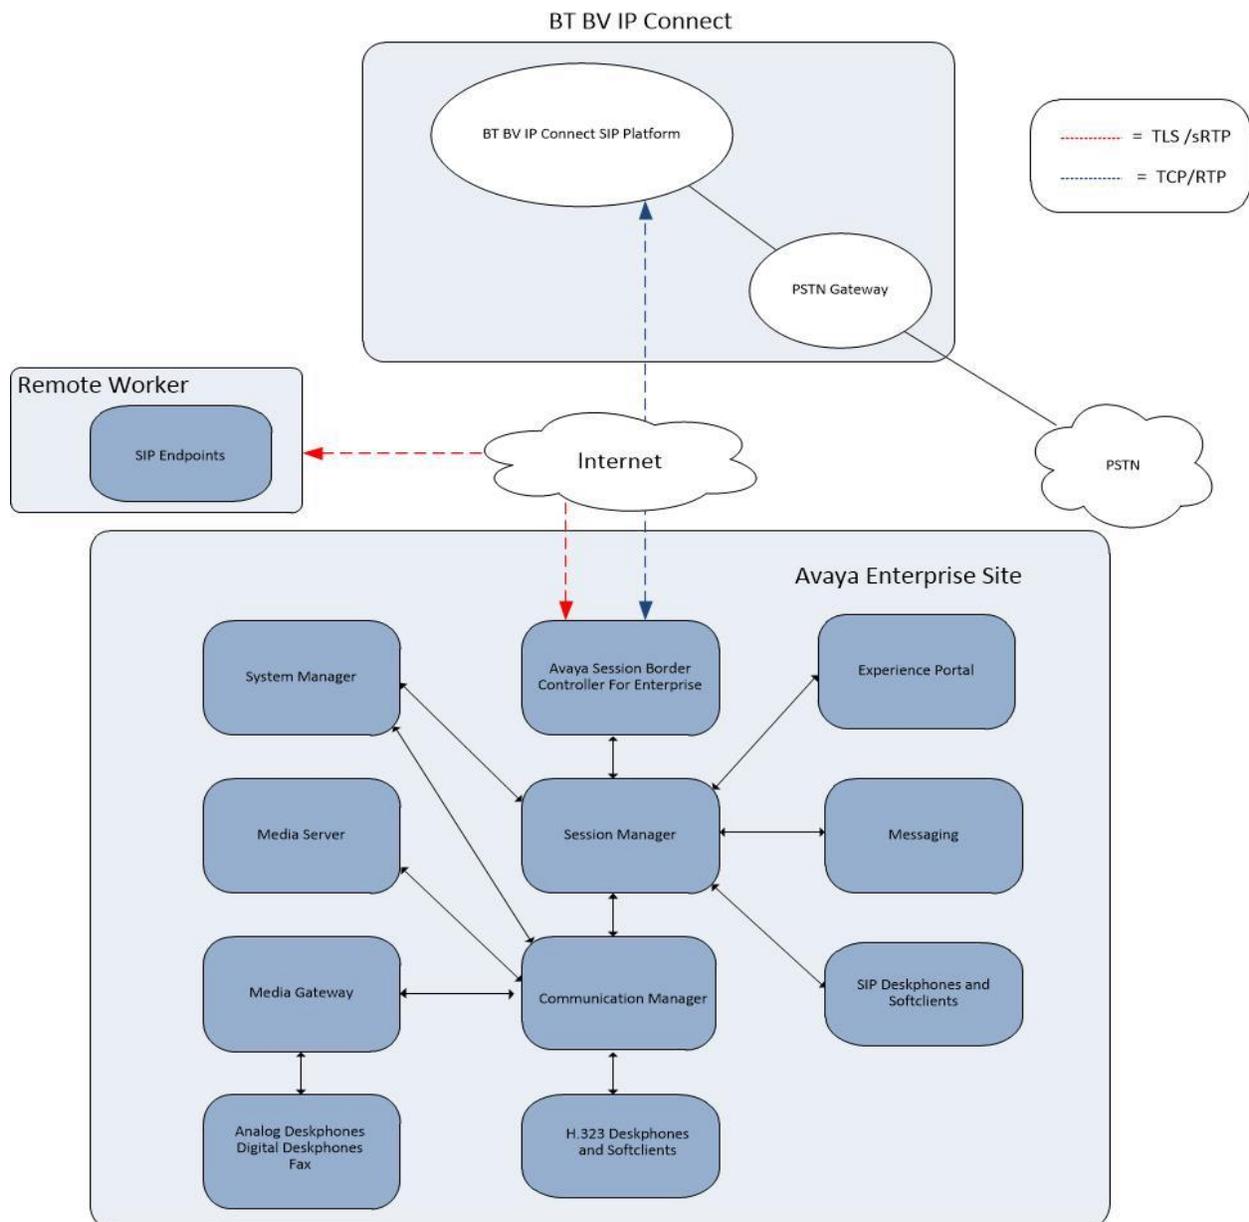


Figure 1: Test Setup BT BV IP Connect to Avaya Enterprise

4. Equipment and Software Validated

The following equipment and software were used for the sample configuration provided:

Equipment/Software	Release/Version
Avaya	
Avaya Aura® System Manager	10.1.0.1 Build No. – 10.1.0.0.537353 Software Update Revision No: 10.1.0.1.0614394 – Service Pack 1
Avaya Aura® Session Manager	10.1.0.1.1010105
Avaya Aura® Communication Manager	10.1 Service Pack 1 - 27293
Avaya Session Border Controller for Enterprise	10.1.1.0-35-21872
Avaya G430 Media Gateway	42.7.0
Avaya Experience Portal	8.1.1
Avaya Aura® Media Server	v.8.0.2.SP9
Avaya Aura® Messaging	7.2 SP3
Avaya 1600 IP Deskphone (H.323)	1.3.12
Avaya 96x1 IP DeskPhone (H.323)	6.8.5
Avaya 9611 IP DeskPhone (SIP)	7.1.15
Avaya 9608 IP DeskPhone (SIP)	7.1.15
Avaya J179 IP Deskphone (SIP)	4.0.11.0
Avaya one-X® Communicator (H.323 & SIP)	6.2.14.15 -SP14-Patch 7
Avaya Workplace for Windows (SIP)	3.23.0.64
Avaya 1408 Digital Telephone	R48
Analogue Handset	N/A.
BT BV IP Connect	
Nokia Siemens Networks hiE 9200	S 4.3
Media Gateway hiG1200	V9
SBC Acme Packet Net-Net SD 4xxx	SCZ8.4
Genband Q21	9.3

5. Configure Avaya Aura® Communication Manager

This section describes the steps for configuring Communication Manager for SIP Trunking. SIP trunks are established between Communication Manager and Session Manager. These SIP trunks will carry SIP signalling associated with the BT BV IP Connect service. For incoming calls, Session Manager receives SIP messages from the Avaya SBCE and directs the incoming SIP messages to Communication Manager. Once the message arrives at Communication Manager further incoming call treatment, such as incoming digit translations and class of service restrictions may be performed. All outgoing calls to the PSTN are processed within Communication Manager and may be first subject to outbound features such as automatic route selection, digit manipulation and class of service restrictions. Once Communication Manager selects a SIP trunk, the SIP signalling is routed to Session Manager. The Session Manager directs the outbound SIP messages to the Avaya SBCE at the enterprise site that then sends the SIP messages to the BT network. Communication Manager configuration was performed using the System Access Terminal (SAT). Some screens in this section have been abridged and highlighted for brevity and clarity in presentation. The general installation of the Servers and Avaya G430 Media Gateway is presumed to have been previously completed and is not discussed here.

5.1. Confirm System Features

The license file installed on the system controls the maximum values for these attributes. If a required feature is not enabled or there is insufficient capacity, contact an authorized Avaya sales representative to add additional capacity. Use the **display system-parameters customer-options** command and on **Page 2**, verify that the **Maximum Administered SIP Trunks** supported by the system is sufficient for the combination of trunks to the BT SIP Trunking Service and any other SIP trunks used.

```
display system-parameters customer-options                               Page 2 of 12
                                OPTIONAL FEATURES

IP PORT CAPACITIES                                                    USED
      Maximum Administered H.323 Trunks: 4000 0
      Maximum Concurrently Registered IP Stations: 2400 3
      Maximum Administered Remote Office Trunks: 4000 0
Maximum Concurrently Registered Remote Office Stations: 2400 0
      Maximum Concurrently Registered IP eCons: 68 0
      Max Concur Registered Unauthenticated H.323 Stations: 100 0
      Maximum Video Capable Stations: 2400 0
      Maximum Video Capable IP Softphones: 2400 0
      Maximum Administered SIP Trunks: 4000 20
      Maximum Administered Ad-hoc Video Conferencing Ports: 4000 0
      Maximum Number of DS1 Boards with Echo Cancellation: 80 0
```

On **Page 5**, verify that **IP Trunks** field is set to **y**.

```
display system-parameters customer-options                               Page 5 of 12
                                OPTIONAL FEATURES

Emergency Access to Attendant? y                                     IP Stations? y
  Enable 'dadmin' Login? y
  Enhanced Conferencing? y                                         ISDN Feature Plus? n
    Enhanced EC500? y                                             ISDN/SIP Network Call Redirection? y
Enterprise Survivable Server? n                                     ISDN-BRI Trunks? y
  Enterprise Wide Licensing? n                                     ISDN-PRI? y
    ESS Administration? y                                         Local Survivable Processor? n
  Extended Cvg/Fwd Admin? y                                       Malicious Call Trace? y
  External Device Alarm Admin? y                                   Media Encryption Over IP? y
  Five Port Networks Max Per MCC? n                               Mode Code for Centralized Voice Mail? n
    Flexible Billing? n
  Forced Entry of Account Codes? y                                 Multifrequency Signaling? y
  Global Call Classification? y                                   Multimedia Call Handling (Basic)? y
  Hospitality (Basic)? y                                         Multimedia Call Handling (Enhanced)? y
  Hospitality (G3V3 Enhancements)? y                             Multimedia IP SIP Trunking? y
    IP Trunks? y

IP Attendant Consoles? y
```

5.2. Administer IP Node Names

The node names defined here will be used in other configuration screens to define a SIP signalling group between Communication Manager and Session Manager. In the **IP Node Names** form, assign the node **Name** and **IP Address** for Session Manager. In this case, **Session Manager** and **10.10.3.42** are the **Name** and **IP Address** for the Session Manager SIP interface. Also note the **procr** IP address as this is the processor interface that Communication Manager will use as the SIP signalling interface to Session Manager.

```
display node-names ip                                               IP NODE NAMES

  Name          IP Address
AMS             10.10.3.45
Session_Manager  10.10.3.42
default        0.0.0.0
procr          10.10.3.44
procr6         ::
```

5.3. Administer IP Network Region

Use the **change ip-network-region n** command where **n** is the chosen value of the configuration for the SIP Trunk. Set the following values:

- The **Authoritative Domain** field is configured to match the domain name configured on Session Manager. In this configuration, the domain name is **avaya.com**.
- By default, **IP-IP Direct Audio** (both **Intra-** and **Inter-Region**) is enabled (**yes**) to allow audio traffic to be sent directly between endpoints without using gateway VoIP resources. When a PSTN call is shuffled or the call is set up with initial IP-IP direct media, the media stream is established directly between the enterprise end-point and the internal media interface of the Avaya SBCE.
- The **Codec Set** is set to the number of the IP codec set to be used for calls within the IP network region. In this case, codec set **1** is used.
- The rest of the fields can be left at default values.

```
change ip-network-region 1                                     Page 1 of 20
                                                              IP NETWORK REGION
Region: 2
Location:      Authoritative Domain: avaya.com
Name: Trunk    Stub Network Region: n
MEDIA PARAMETERS Intra-region IP-IP Direct Audio: yes
                Inter-region IP-IP Direct Audio: yes
                IP Audio Hairpinning? n
Codec Set: 1
UDP Port Min: 2048
UDP Port Max: 3329
DIFFSERV/TOS PARAMETERS
Call Control PHB Value: 46
Audio PHB Value: 46
Video PHB Value: 26
802.1P/Q PARAMETERS
Call Control 802.1p Priority: 6
Audio 802.1p Priority: 6
Video 802.1p Priority: 5
AUDIO RESOURCE RESERVATION PARAMETERS
H.323 IP ENDPOINTS RSVP Enabled? n
H.323 Link Bounce Recovery? y
Idle Traffic Interval (sec): 20
Keep-Alive Interval (sec): 5
Keep-Alive Count: 5
```

5.4. Administer IP Codec Set

Open the IP Codec Set form for the codec set specified in the IP Network Region form in **Section 5.3** by typing **change ip-codec set n** where **n** is the chosen value of the configuration for the SIP Trunk. Enter the list of audio codec's eligible to be used in order of preference. For the interoperability test the codec supported by BT were configured, namely **G.711A**,nd **G.729** and **G.711MU**.

In addition to the codec's, the **Media Encryption** is defined here. For the compliance test, a value of **srtp-aescm128-hmac80** was used.

```
change ip-codec-set 1 Page 1 of 2

                                IP MEDIA PARAMETERS

Codec Set: 2

Audio          Silence      Frames      Packet
Codec          Suppression  Per Pkt    Size (ms)
1: G.711A      n             2           20
2: G.729      n             2           20
3: G.711MU    n             2           20

Media Encryption          Encrypted SRTCP: enforce-unenc-srtcp
1: srtp-aescm128-hmac80
2: none
```

BT SIP Trunk supports T.38 for transmission of fax. Navigate to **Page 2** and define fax properties as follows:

- Set the **FAX - Mode** to **t.38-standard**.
- Leave **ECM** at default value of **y**.

```
change ip-codec-set 1 Page 2 of 2

                                IP MEDIA PARAMETERS

                                Allow Direct-IP Multimedia? n

                                Mode          Redun-          Packet
                                t.38-standard  dancy          Size (ms)
                                ECM: y

FAX                               0
Modem                             off             0
TDD/TTY                            US              3
H.323 Clear-channel                n               0
SIP 64K Data                       n               0
```

5.5. Administer SIP Signaling Groups

This signalling group (and trunk group) will be used for inbound and outbound PSTN calls to the BT SIP Trunking Service. Configure the **Signaling Group** using the **add signaling-group n** command as follows:

- Set **Group Type** to **sip**.
- Set **Transport Method** to **tls**.
- Set **Peer Detection Enabled** to **y** allowing Communication Manager to automatically detect if the peer server is a Session Manager.
- Set **Near-end Node Name** to the processor interface (node name **procr** as defined in the **IP Node Names** form shown in **Section 5.2**).
- Set **Far-end Node Name** to Session Manager interface (node name **Session_Manager** as defined in the **IP Node Names** form shown in **Section 5.2**).
- Set **Near-end Listen Port** and **Far-end Listen Port** as required. The standard value for TLS is **5061**.
- Set **Far-end Network Region** to the IP Network Region configured in **Section 5.3** (logically establishes the far-end for calls using this signalling group as region **1**).
- Leave **Far-end Domain** blank to allow Communication Manager to accept calls from any SIP domain on the associated trunk.
- Leave **DTMF over IP** at default value of **rtp-payload** (Enables **RFC2833** for DTMF transmission from Communication Manager).
- Set **Direct IP-IP Audio Connections** to **y**.
- Set both **H.323 Station Outgoing Direct Media** and **Initial IP-IP Direct Media** to **n**.

The default values for the other fields may be used.

```
add signaling-group 1                               Page 1 of 2
                                                    SIGNALING GROUP

Group Number: 2                                Group Type: sip
IMS Enabled? n                                Transport Method: tls
Q-SIP? n
IP Video? n                                    Enforce SIPS URI for SRTP? n
Peer Detection Enabled? y Peer Server: SM
Prepend '+' to Outgoing Calling/Alerting/Diverting/Connected Public Numbers? y
Remove '+' from Incoming Called/Calling/Alerting/Diverting/Connected Numbers? n
Alert Incoming SIP Crisis Calls? n
Near-end Node Name: procr                       Far-end Node Name: Session_Manager
Near-end Listen Port: 5061                     Far-end Listen Port: 5061
Far-end Network Region: 1

Far-end Domain:
Bypass If IP Threshold Exceeded? n
Incoming Dialog Loopbacks: eliminate           RFC 3389 Comfort Noise? n
DTMF over IP: rtp-payload                     Direct IP-IP Audio Connections? y
Session Establishment Timer(min): 3            IP Audio Hairpinning? n
Enable Layer 3 Test? n                       Initial IP-IP Direct Media? n
H.323 Station Outgoing Direct Media? n       Alternate Route Timer(sec): 6
```

5.6. Administer SIP Trunk Groups

A trunk group is associated with the signalling group described in **Section 5.5**. Configure the trunk group using the **add trunk-group n** command, where **n** is an available trunk group for the SIP Trunk. On **Page 1** of this form:

- Set the **Group Type** field to **sip**.
- Choose a descriptive **Group Name**.
- Specify a trunk access code (**TAC**) consistent with the dial plan.
- The **Direction** is set to **two-way** to allow incoming and outgoing calls.
- Set the **Service Type** field to **public-netwrk**.
- Specify the signalling group associated with this trunk group in the **Signaling Group** field as previously configured in **Section 5.5**.
- Specify the **Number of Members** administered for this SIP trunk group.

```
add trunk-group 1                                     Page 1 of 21
                                     TRUNK GROUP
Group Number: 1                                     Group Type: sip                                     CDR Reports: y
  Group Name: OUTSIDE CALL                           COR: 1                                     TN: 1                                     TAC: 101
  Direction: two-way                                 Outgoing Display? n
Dial Access? n                                       Night Service:
Queue Length: 0
Service Type: public-ntwrk                           Auth Code? n
                                                    Member Assignment Method: auto
                                                    Signaling Group: 1
                                                    Number of Members: 10
```

On **Page 2** of the trunk-group form, the Preferred **Minimum Session Refresh Interval (sec)** field should be set to a value mutually agreed with BT to prevent unnecessary SIP messages during call setup. During testing, a value of **900** was used that sets Min-SE to 1800 in the SIP signalling.

```
add trunk-group 1                                     Page 2 of 21
  Group Type: sip
TRUNK PARAMETERS
  Unicode Name: auto
                                                    Redirect On OPTIM Failure: 5000
  SCCAN? n                                           Digital Loss Group: 18
  Preferred Minimum Session Refresh Interval(sec): 900
Disconnect Supervision - In? y Out? y
  XOIP Treatment: auto                               Delay Call Setup When Accessed Via IGAR? n
Caller ID for Service Link Call to H.323 1xC: station-extension
```

On **Page 3**, set the **Numbering Format** field to **public**. This allows delivery of CLI in E.164 format with leading “+”. Set **Hold/Unhold Notifications** to **n** as this is not required with BT and results in unnecessary signalling.

```

add trunk-group 1                                     Page 3 of 21
TRUNK FEATURES
  ACA Assignment? n                               Measured: none
                                                Maintenance Tests? y

  Suppress # Outpulsing? n  Numbering Format: public
                                                UUI Treatment: service-provider

                                                Replace Restricted Numbers? n
                                                Replace Unavailable Numbers? n

                                                Hold/Unhold Notifications? n
  Modify Tandem Calling Number: no

Show ANSWERED BY on Display? y
  
```

On **Page 4** of this form:

- Set **Mark Users as Phone** to **y**.
- Set **Send Transferring Party Information** to **n**.
- Set **Network Call Direction** to **n**.
- Set **Send Diversion Header** to **y**.
- Set **Support Request History** to **n**.
- Set the **Telephone Event Payload Type** to **101** as requested by BT.
- Set **Always Use re-INVITE for Display Updates** to **y** as explained in **Section 2.2**.
- Set the **Identity for Calling Party Display** to **P-Asserted-Identity**.

```

add trunk-group 2                                     Page 4 of 21
                                                PROTOCOL VARIATIONS

                                                Mark Users as Phone? y
Prepend '+' to Calling/Alerting/Diverting/Connected Number? n
  Send Transferring Party Information? n
  Network Call Redirection? n

  Send Diversion Header? y
  Support Request History? n
  Telephone Event Payload Type: 101

  Convert 180 to 183 for Early Media? n
  Always Use re-INVITE for Display Updates? y
  Identity for Calling Party Display: P-Asserted-Identity
  Block Sending Calling Party Location in INVITE? n
  Accept Redirect to Blank User Destination? n
  Enable Q-SIP? N
  Interworking of ISDN Clearing with In-Band Tones: keep-channel-active
  Request URI Contents: may-have-extra-digits
  
```

5.7. Administer Calling Party Number Information

Use the **change public-unknown-numbering** command to configure Communication Manager to send the calling party number in the format required. These calling party numbers are sent in the SIP From, Contact and PAI headers as well as the Diversion header for forwarded calls. The numbers are displayed on display-equipped PSTN telephones with any reformatting performed in the network. The public numbering table is used for numbers in E.164 format.

```

change public-unknown-numbering 0                               Page 1 of 2
                                NUMBERING - PUBLIC/UNKNOWN FORMAT
                                Total
Ext          Trk      CPN
Len Code          Grp(s)  Prefix      Len
4  6102          1      49893xxxxxx90  13
4  6010          1      49893xxxxxx91  13
4  6020          1      49893xxxxxx92  13
4  6104          1      49893xxxxxx93  13
                                Total Administered: 4
                                Maximum Entries: 240
                                Note: If an entry applies to
                                a SIP connection to Avaya
                                Aura(R) Session Manager,
                                the resulting number must
                                be a complete E.164 number.
                                Communication Manager
                                automatically inserts
                                a '+' digit in this case.
  
```

5.8. Administer Route Selection for Outbound Calls

In the test environment, the Automatic Route Selection (ARS) feature was used to route outbound calls via the SIP trunk to the BT SIP platform. The single digit **9** was used as the ARS access code providing a facility for telephone users to dial 9 to invoke ARS directly. Use the **change feature-access-codes** command to configure a digit as the **Auto Route Selection (ARS) - Access Code 1**.

```

change feature-access-codes                                     Page 1 of 10
                                FEATURE ACCESS CODE (FAC)
                                Abbreviated Dialing List1 Access Code:
                                Abbreviated Dialing List2 Access Code:
                                Abbreviated Dialing List3 Access Code:
                                Abbreviated Dial - Prgm Group List Access Code:
                                Announcement Access Code: *69
                                Answer Back Access Code:
                                Attendant Access Code:
                                Auto Alternate Routing (AAR) Access Code: 7
                                Auto Route Selection (ARS) - Access Code 1: 9      Access Code 2:
  
```

Use the **change ars analysis** command to configure the routing of dialled digits following the first digit 9. A small sample of dial patterns are shown here as an example. Further administration of ARS is beyond the scope of this document. The example entries shown will match outgoing calls to numbers beginning **0**. Note that exact maximum number lengths should be used where possible to reduce post-dial delay. Calls are sent to **Route Pattern 1**.

```

change ars analysis 0                                     Page 1 of 2
                ARS DIGIT ANALYSIS TABLE
                Location: all                            Percent Full: 0

```

Dialed String	Total Min	Total Max	Route Pattern	Call Type	Node Num	ANI Reqd
0	11	14	1	pubu		n
00	13	15	1	pubu		n
0035391	13	13	1	pubu		n
030	10	10	1	pubu		n
0800	8	10	1	pubu		n
0900	8	8	1	pubu		n

Use the **change route-pattern x** command, where **x** is an available route pattern, to add the SIP trunk group to the route pattern that ARS selects. In this configuration, route pattern **1** is used to route calls to trunk group **1**. **Numbering Format** is applied to CLI and is used to set TDM signalling parameters such as type of number and numbering plan indicator. This doesn't have the same significance in SIP calls and during testing it was set to **intl-pub**.

```

change route-pattern 1                                   Page 1 of 3
                Pattern Number: 1                       Pattern Name:
                SCCAN? n                               Secure SIP? n

```

Grp No	FRL	NPA	Pfx	Hop	Toll	No.	Inserted	DCS/	IXC
No	Mrk	Lmt	List	Del	Digits	Dgts		Intw	
1: 1	0							n	user
2:								n	user
3:								n	user
4:								n	user
5:								n	user
6:								n	user

BCC	VALUE	TSC	CA-TSC	ITC	BCIE	Service/Feature	PARM	No.	Numbering	LAR
0	1	2	M	4	W	Request		Dgts	Format	
1:	y	y	y	y	y	n	n	rest	intl-pub	none
2:	y	y	y	y	y	n	n	rest		none
3:	y	y	y	y	y	n	n	rest		none
4:	y	y	y	y	y	n	n	rest		none
5:	y	y	y	y	y	n	n	rest		none
6:	y	y	y	y	n	n	n	rest		none

5.9. Administer Incoming Digit Translation

This step configures the settings necessary to map incoming DDI calls to the proper Communication Manager extension(s). The incoming digits sent in the INVITE message from BT can be manipulated as necessary to route calls to the desired extension. In the examples used in the compliance testing, the incoming DDI numbers provided by BT SIP platform correlate to the internal extensions assigned within Communication Manager. The entries displayed below translate incoming DDI numbers **+49893xxxxxx90**, **+49893xxxxxx91**, **+49893xxxxxx92** and **+49893xxxxxx93** to a 4-digit extension by deleting all of the incoming digits and inserting an extension.

change inc-call-handling-trmt trunk-group 1				Page 1 of 3	
INCOMING CALL HANDLING TREATMENT					
Service/ Feature	Number Len	Del Digits	Insert		
public-ntwrk	14	+49893xxxxxx90	all	6102	
public-ntwrk	14	+49893xxxxxx91	all	6010	
public-ntwrk	14	+49893xxxxxx92	all	6020	
public-ntwrk	14	+49893xxxxxx93	all	6104	

5.10. EC500 Configuration

When EC500 is enabled on a Communication Manager station, a call to that station will generate a new outbound call from Communication Manager to the configured EC500 destination, typically a mobile phone.

The following screen shows an example EC500 configuration for the user with station extension 6102. Use the command **change off-pbx-telephone station-mapping x** where **x** is Communication Manager station.

- The **Station Extension** field will automatically populate with station extension.
- For **Application** enter **EC500**.
- Enter a **Dial Prefix** if required by the routing configuration, none was required during testing.
- For the **Phone Number** enter the phone that will also be called (e.g. **0035389434xxxx**).
- Set the **Trunk Selection** to **ars** so that the ARS table will be used for routing.
- Set the **Config Set** to **1**.

change off-pbx-telephone station-mapping 6102							Page	1 of	3
STATIONS WITH OFF-PBX TELEPHONE INTEGRATION									
Station	Application	Dial	CC	Phone Number	Trunk	Config	Dual		
Extension		Prefix			Selection	Set	Mode		
6102	EC500	-		0035389434xxxx	ars	1			

Note: The phone number shown is for a mobile phone in the Avaya Lab. To use facilities for calls coming in from EC500 mobile phones, the calling party number received in Communication Manager must exactly match the number specified in the above table.

Save Communication Manager configuration by entering **save translation**.

6. Configuring Avaya Aura® Session Manager


This section provides the procedures for configuring Session Manager. Session Manager is configured via System Manager. The procedures include the following areas:

- Log in to Avaya Aura® System Manager.
- Administer SIP Domain.
- Administer SIP Location.
- Administer Conditions.
- Administer Adaptations.
- Administer SIP Entities.
- Administer Entity Links.
- Administer Routing Policies.
- Administer Dial Patterns.


It may not be necessary to create all the items above when creating a connection to the service provider since some of these items would have already been defined as part of the initial Session Manager installation. This includes items such as certain SIP domains, locations, SIP entities, and Session Manager itself. However, each item should be reviewed to verify the configuration.

6.1. Log in to Avaya Aura® System Manager

Access the System Manager using a web browser and entering **http://<FQDN >/SMGR**, where **<FQDN>** is the fully qualified domain name of System Manager. Log in using appropriate credentials (not shown) and the Dashboard tab will be presented with menu options shown below.

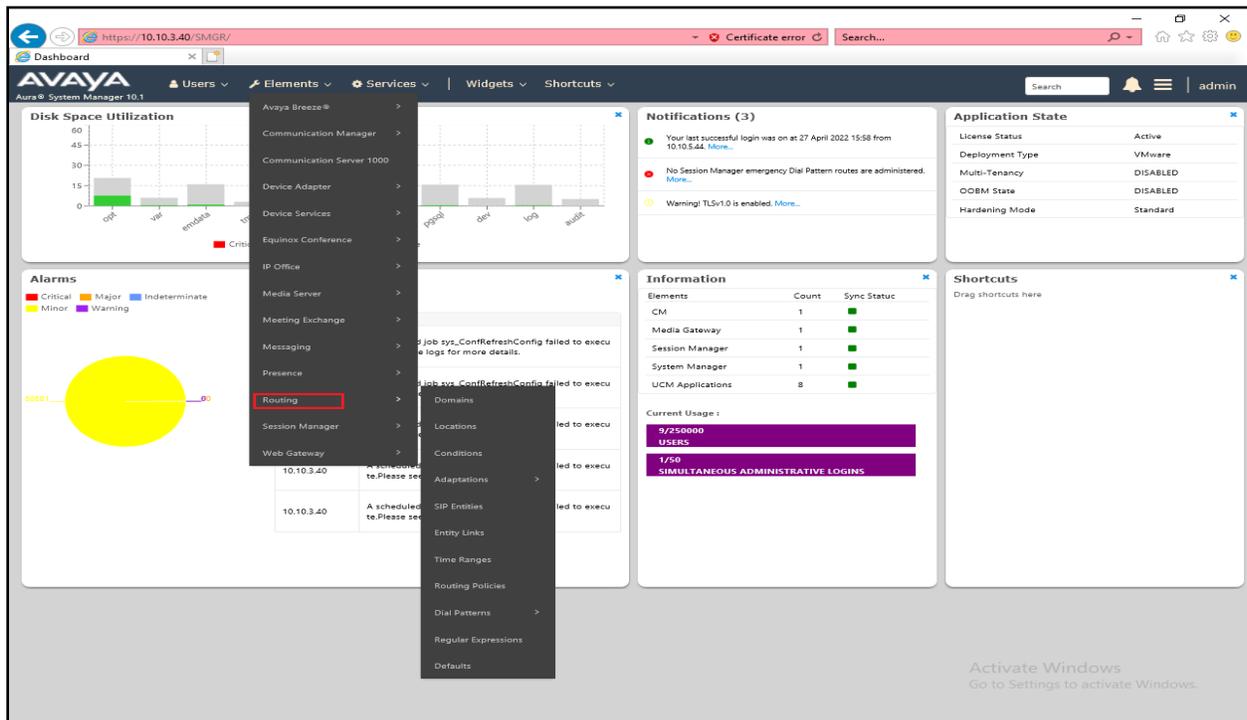

Most of the configuration items are performed in the Routing Element. Click on **Routing** in the Elements column shown above to bring up the **Introduction to Network Routing Policy** screen.

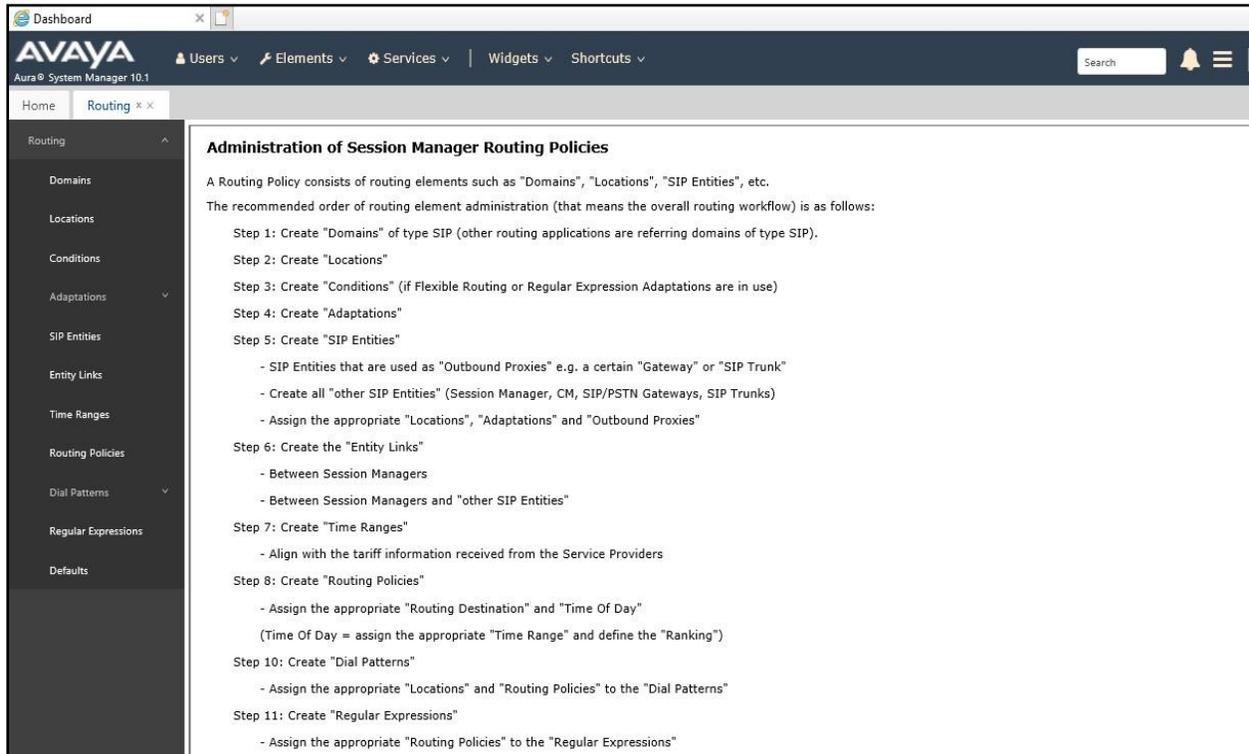


6.2. Administer SIP Domain

Create a SIP domain for each domain for which Session Manager will need to be aware in order to route calls. Expand **Elements** → **Routing** and select **Domains** from the left navigation menu, click **New** (not shown). Enter the following values and use default values for remaining fields.

- **Name:** Enter a Domain Name. In the sample configuration, **avaya.com** was used.
- **Type:** Verify **SIP** is selected.
- **Notes:** Add a brief description [Optional].

Click **Commit** to save. The screen below shows the SIP Domain defined for the sample configuration.

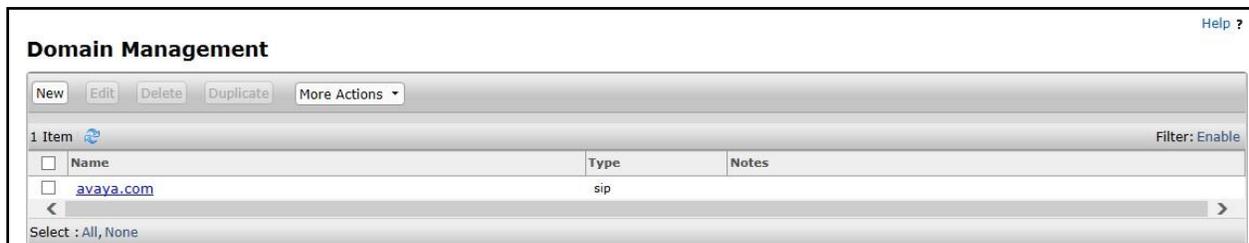

6.3. Administer Locations

Locations can be used to identify logical and/or physical locations where SIP Entities reside for purposes of bandwidth management and call admission control. To add a location, navigate to **Routing → Locations** in the left-hand navigation pane and click the **New** button in the right pane (not shown). In the **General** section, enter the following values. Use default values for all remaining fields:

- **Name:** Enter a descriptive name for the location.
- **Notes:** Add a brief description (optional).

The following screenshot shows the location details named **Session Manager**. This location is assigned to the SIP Entity called Session Manager in **Section 6.5.1**.

The screenshot shows a web-based configuration interface titled "Location Details" with "Commit" and "Cancel" buttons in the top right. The page is divided into several sections:

- General:** Contains a required field for "Name" (value: Session Manager) and an optional "Notes" field.
- Dial Plan Transparency in Survivable Mode:** Includes an "Enabled" checkbox (unchecked), a "Listed Directory Number" field, and an "Associated CM SIP Entity" field.
- Overall Managed Bandwidth:** Features a "Managed Bandwidth Units" dropdown (set to Kbit/sec), "Total Bandwidth" and "Multimedia Bandwidth" input fields, and a checked "Audio Calls Can Take Multimedia Bandwidth" checkbox.
- Per-Call Bandwidth Parameters:** Lists four bandwidth settings: "Maximum Multimedia Bandwidth (Intra-Location)" (2000 Kbit/Sec), "Maximum Multimedia Bandwidth (Inter-Location)" (2000 Kbit/Sec), "* Minimum Multimedia Bandwidth" (64 Kbit/Sec), and "* Default Audio Bandwidth" (80 Kbit/Sec).

The location pattern is a way of using subnets to further refine the location information, this may be useful for endpoints that could be logged in from different subnets. This was not used during testing. If required, scroll to the bottom of the page and under **Location Pattern**, click **Add**, then enter an **IP Address Pattern** in the resulting new row, * is used to specify any number of allowed characters at the end of the string.

The screenshot shows a web interface titled "Location Pattern". At the top, there are "Add" and "Remove" buttons. Below them, it says "0 Items" with a refresh icon and a "Filter: Enable" link. A table with one row is visible, containing "IP Address Pattern" in the first column and "Notes" in the second. At the bottom right, there are "Commit" and "Cancel" buttons.


Although routing based on location was not used on Session Manager during testing, separate locations were also defined for both Communication Manager and Avaya SBCE.

The following screenshot shows the location details named **Communication Manager**. This location is assigned to the SIP Entity called Communication Manager in **Section 6.5.2**.

The screenshot shows a "Location Details" configuration page for "Communication Manager". It has "Commit" and "Cancel" buttons at the top right. The page is divided into three sections:

- General:** Includes a required "Name" field with "Communication Manager" entered, and an empty "Notes" field.
- Dial Plan Transparency in Survivable Mode:** Includes an "Enabled" checkbox (unchecked), a "Listed Directory Number" field, and an "Associated CM SIP Entity" field.
- Overall Managed Bandwidth:** Includes a "Managed Bandwidth Units" dropdown menu set to "Kbit/sec", "Total Bandwidth" and "Multimedia Bandwidth" input fields, and an "Audio Calls Can Take Multimedia Bandwidth" checkbox (checked).

The following screenshot shows the location details named **Experience Portal**. This location is assigned to the SIP Entity called Experience Portal in **Section 6.5.3**.

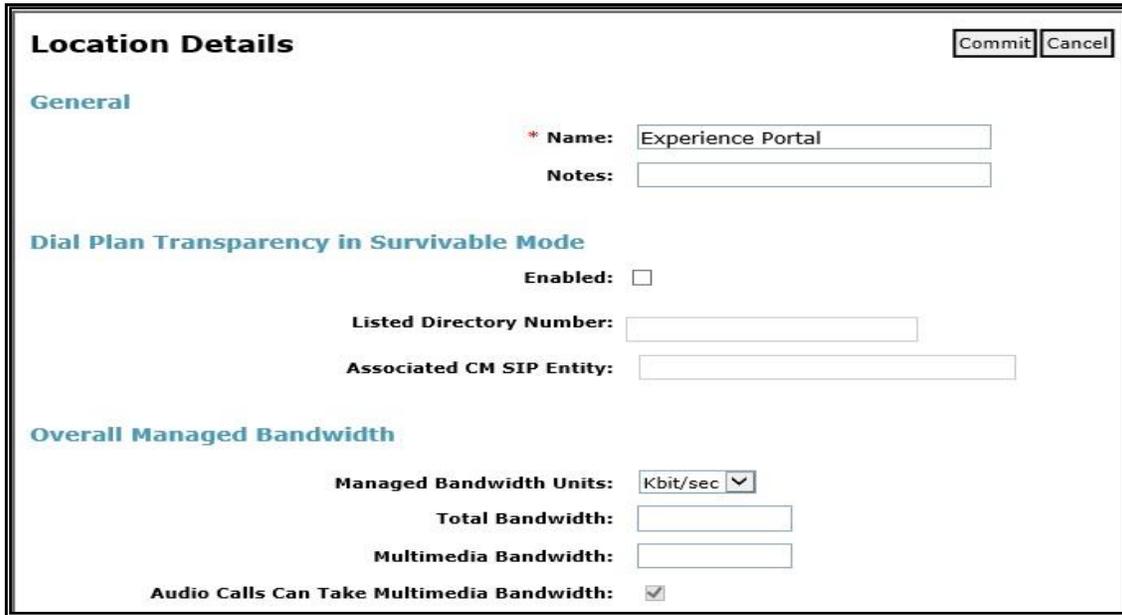

Location Details Commit Cancel

General

* **Name:** Experience Portal
Notes:

Dial Plan Transparency in Survivable Mode

Enabled:


Listed Directory Number:
Associated CM SIP Entity:

Overall Managed Bandwidth

Managed Bandwidth Units: Kbit/sec
Total Bandwidth:
Multimedia Bandwidth:

Audio Calls Can Take Multimedia Bandwidth:

The following screenshot shows the location details named **Avaya SBCE**. This location is assigned to the SIP Entity called Avaya SBCE in **Section 6.5.4**.

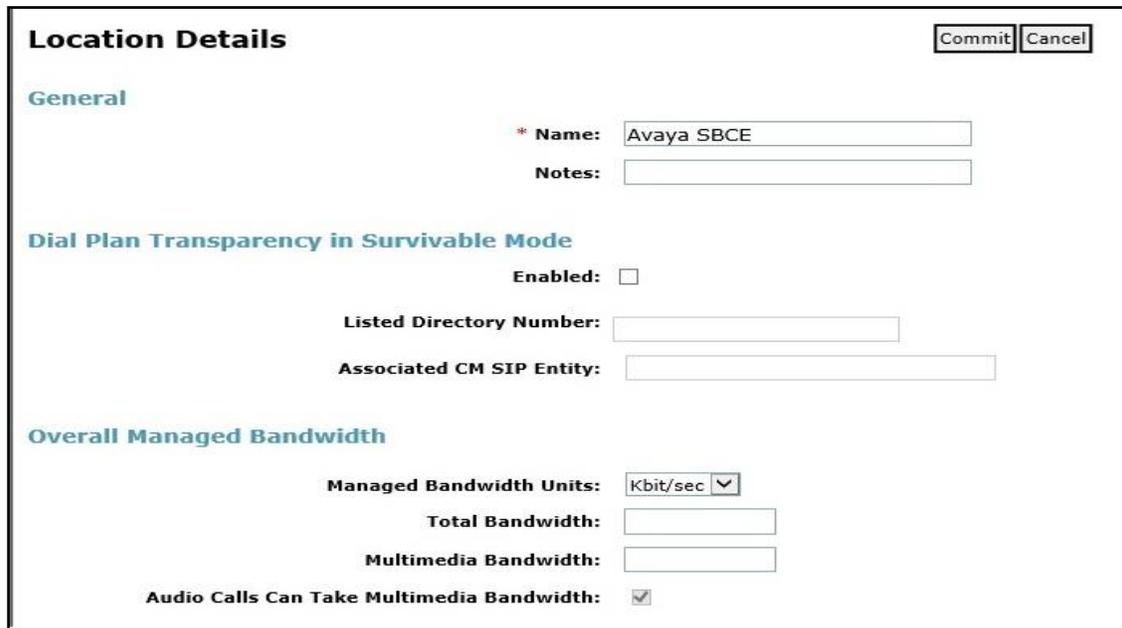

Location Details Commit Cancel

General

* **Name:** Avaya SBCE
Notes:

Dial Plan Transparency in Survivable Mode

Enabled:

Listed Directory Number:
Associated CM SIP Entity:

Overall Managed Bandwidth

Managed Bandwidth Units: Kbit/sec
Total Bandwidth:
Multimedia Bandwidth:

Audio Calls Can Take Multimedia Bandwidth:

6.4. Administer Adaptations

Session Manager Adaptations can be used to alter parameters in the SIP message headers. An Adaptation was used during testing to remove Avaya proprietary headers from messages sent. Adaptations can be used to modify the called and calling party numbers to meet the requirements of the service. The called party number present in the SIP INVITE Request URI is modified by the **Digit Conversion** in the Adaptation. In order to improve interoperability with third party elements, Session Manager R10.1 incorporates the ability to use Adaptation modules to remove specific SIP headers that are either Avaya proprietary unnecessary for non-Avaya elements. For the compliance test, an Adaptation named “**BTDE**” was created to block the following headers from outbound messages, before they were forwarded to the Avaya SBCE: AV-Global-Session-ID, AV-Correlation-ID, Alert-Info, Endpoint-View, P-AV-Message-ID, P-Charging-Vector, and P-Location. These headers contain private information from the enterprise and also add unnecessary size to outbound messages, while they have no significance to the service provider.

To add an adaptation, under the **Routing** tab select **Adaptations** on the left-hand menu and then click on the **New** button (not shown). Under **Adaptation Details → General**:

- **Adaption Name:** Enter an appropriate name such as **BTDE**.
- **Module Name:** Select **DigitConversionAdapter**.
- **Modular Parameter Type:** Select **Name-Value Parameter**.

Click **Add** to add the name and value parameters.

- **Name:** Enter **eRHdrs**. This parameter will remove the specific headers from messages in the egress direction.
- **Value:** Enter **AV-Global-Session-ID, AV-Correlation-ID, Alert-Info, Endpoint-View, P-AV-Message-ID, P-Charging-Vector, P-Location**.
- **Name:** Enter **fromto**. Modifies From and To header of a message.
- **Value:** Enter **true**.
- **Name:** Enter **MIME**. Remove MIME message bodies from Session Manager.
- **Value:** Enter **no**.

Adaptation Details Commit Cancel Help ?

General

* Adaptation Name:

* Module Name:

Module Parameter Type:

Name	Value
<input type="checkbox"/> eRHdrs	"P-AV-Message-Id, P-Charging-Vector, P-Location, Endpoint-View, P-Conference, Alert-
<input type="checkbox"/> fromto	true
<input type="checkbox"/> MIME	no

Egress URI Parameters:

Notes:

Scroll down the page and under **Digit Conversion for Outgoing Calls from SM**, click the **Add** button and specify the digit manipulation to be performed as follows:

- Enter the leading digits that will be matched in the Matching Pattern field.
- In the **Min** and **Max** fields set the minimum and maximum digits allowed in the digit string to be matched.
- In the **Delete Digits** field enter the number of leading digits to be removed.
- In the **Insert Digits** field specify the digits to be prefixed to the digit string.
- In the **Address to modify** field specify the digits to manipulate by the adaptation. In this configuration the dialed number is the target so **both** have been selected.

Digit Conversion for Outgoing Calls from SM

Add Remove

1 Item Filter: Enable

Matching Pattern	Min	Max	Phone Context	Delete Digits	Insert Digits	Address to modify	Adaptation Data	Notes
<input type="checkbox"/> *00	*2	*15		*2	+	both		

Select : All, None

Commit Cancel

This will ensure any outgoing numbers matching 00 will be deleted and have + inserted being converted to E.164 format before being forwarded to the Avaya SBCE.

6.5. Administer SIP Entities

A SIP Entity must be added for each SIP-based telephony system supported by a SIP connection to Session Manager. To add a SIP Entity, select **SIP Entities** on the left panel menu and then click on the **New** button (not shown). The following will need to be entered for each SIP Entity.

Under **General**:

- In the **Name** field enter an informative name.
- In the **FQDN or IP Address** field enter the IP address of Session Manager or the signalling interface on the connecting system.
- In the **Type** field use **Session Manager** for a Session Manager SIP Entity, **CM** for a Communication Manager SIP Entity, **Voice Portal** for an Experience Portal SIP Entity and **SIP Trunk** for the Avaya SBCE SIP Entities.
- In the **Location** field select the appropriate location from the drop-down menu.
- In the **Time Zone** field enter the time zone for the SIP Entity.

In this configuration there are four SIP Entities.

- Session Manager SIP Entity.
- Communication Manager SIP Entity.
- Avaya Experience Portal.
- Avaya SBCE SIP Entity.

6.5.1. Avaya Aura® Session Manager SIP Entity

The following screens show the SIP entity for Session Manager. The **FQDN or IP Address** field is set to the IP address of the Session Manager SIP signalling interface and **Type** is **Session Manager**. Set the **Location** to that defined for Session Manager in **Section 6.3** and the **Time Zone** to the appropriate time zone.

SIP Entity Details

General

* **Name:**

* **IP Address:**

SIP FQDN:

Type: ▼

Notes:

Location: ▼

Outbound Proxy: ▼

Time Zone: ▼

Minimum TLS Version: ▼

Credential name:

Monitoring

SIP Link Monitoring: ▼

CRLF Keep Alive Monitoring: ▼

Session Manager must be configured with the port numbers on the protocols that will be used by the other SIP entities. To configure these scroll to the bottom of the page and under **Port**, click **Add**, then edit the fields in the resulting new row.

- In the **Port** field enter the port number on which the system listens for SIP requests.
- In the **Protocol** field enter the transport protocol to be used for SIP requests.
- In the **Default Domain** field, from the drop-down menu select the domain added in **Section 6.2** as the default domain.

Port

TCP Failover port:

TLS Failover port:

3 Items	Port	Protocol	Default Domain	Notes
<input type="checkbox"/>	<input type="text" value="5060"/>	TCP ▼	avaya.com ▼	<input type="text"/>
<input type="checkbox"/>	<input type="text" value="5061"/>	TLS ▼	avaya.com ▼	<input type="text"/>
<input type="checkbox"/>	<input type="text" value="5061"/>	UDP ▼	avaya.com ▼	<input type="text"/>

Select : All, None

6.5.2. Avaya Aura® Communication Manager SIP Entity

The following screen shows the SIP entity for Communication Manager. This SIP Entity is used for the SIP Trunk. The **FQDN or IP Address** field is set to the IP address of the interface on Communication Manager that will be providing SIP signalling. Set the **Location** to that defined for Communication Manager in **Section 6.3** and the **Time Zone** to the appropriate time zone.

SIP Entity Details

Commit Cancel

General

* **Name:**

* **FQDN or IP Address:**

Type:

Notes:

Adaptation:

Location:

Time Zone:

* **SIP Timer B/F (in seconds):**

Minimum TLS Version:

Credential name:

Securable:

Call Detail Recording:

Loop Detection

Loop Detection Mode:

Loop Count Threshold:

Loop Detection Interval (in msec):

Other parameters can be set for the SIP Entity as shown in the following screenshot, but for test, these were left at default values.

Loop Detection

Loop Detection Mode:

SIP Link Monitoring

SIP Link Monitoring:

0

6.5.3. Avaya Experience Portal SIP Entity

The following screen shows the SIP entity for Experience Portal. The **FQDN or IP Address** field is set to the IP address of the Experience Portal. Set the **Location** to that defined for Experience Portal in **Section 6.3** and the **Time Zone** to the appropriate time zone.

SIP Entity Details

Commit Cancel
General

* **Name:**

* **FQDN or IP Address:**

Type: ▼

Notes:

Adaptation: ▼

Location: ▼

Time Zone: ▼

* **SIP Timer B/F (in seconds):**

Minimum TLS Version: ▼

Credential name:

Securable:

Call Detail Recording: ▼

Loop Detection

Loop Detection Mode: ▼

Loop Count Threshold:

Loop Detection Interval (in msec):

6.5.4. Avaya Session Border Controller for Enterprise SIP Entity

The following screen shows the SIP Entity for the Avaya SBCE used for PSTN destinations. The **FQDN or IP Address** field is set to the IP address of the Avaya SBCE private network interface (See **Section 8.4.1**). Set the **Adaptation** to that defined in **Section 6.4**, the **Location** to that defined for Avaya SBCE in **Section 6.3** and the **Time Zone** to the appropriate time zone.

SIP Entity Details


Commit Cancel
General
*** Name:**
*** FQDN or IP Address:**
Type:
Notes:
Adaptation:
Location:
Time Zone:
*** SIP Timer B/F (in seconds):**
Minimum TLS Version:
Credential name:
Securable:
Call Detail Recording:
Loop Detection
Loop Detection Mode:
Loop Count Threshold:
Loop Detection Interval (in msec):

6.6. Administer Entity Links

A SIP trunk between a Session Manager and another system is described by an Entity Link. To add an Entity Link, select **Entity Links** on the left panel menu and click on the **New** button (not shown). Fill in the following fields in the new row that is displayed.

- In the **Name** field enter an informative name.
- In the **SIP Entity 1** field select **Session Manager**.
- In the **Protocol** field enter the transport protocol to be used to send SIP requests.
- In the **Port** field enter the port number to which the other system sends its SIP requests.
- In the **SIP Entity 2** field enter the other SIP Entity for this link, created in **Section 6.5**.
- In the **Port** field enter the port number to which the other system expects to receive SIP requests.
- Select **Trusted** from the drop-down menu to make the other system trusted.

Click **Commit** to save changes. The following screenshot shows the Entity Links used in this configuration.

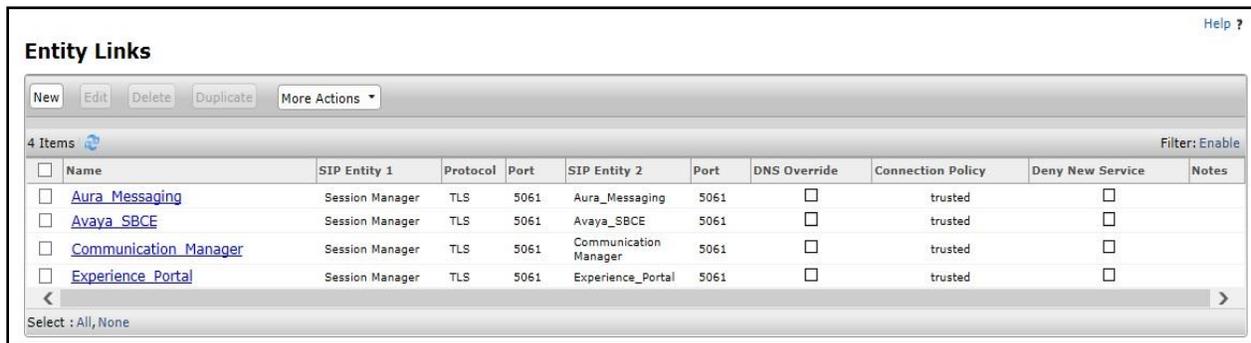

The screenshot shows the 'Entity Links' configuration page. At the top, there are buttons for 'New', 'Edit', 'Delete', 'Duplicate', and a 'More Actions' dropdown. Below the buttons, it indicates '4 Items' and a 'Filter: Enable' option. The main content is a table with the following columns: Name, SIP Entity 1, Protocol, Port, SIP Entity 2, Port, DNS Override, Connection Policy, Deny New Service, and Notes. The table contains four rows of data:

<input type="checkbox"/>	Name	SIP Entity 1	Protocol	Port	SIP Entity 2	Port	DNS Override	Connection Policy	Deny New Service	Notes
<input type="checkbox"/>	Aura Messaging	Session Manager	TLS	5061	Aura_Messaging	5061	<input type="checkbox"/>	trusted	<input type="checkbox"/>	
<input type="checkbox"/>	Avaya SBCE	Session Manager	TLS	5061	Avaya_SBCE	5061	<input type="checkbox"/>	trusted	<input type="checkbox"/>	
<input type="checkbox"/>	Communication Manager	Session Manager	TLS	5061	Communication Manager	5061	<input type="checkbox"/>	trusted	<input type="checkbox"/>	
<input type="checkbox"/>	Experience Portal	Session Manager	TLS	5061	Experience_Portal	5061	<input type="checkbox"/>	trusted	<input type="checkbox"/>	

At the bottom of the table, there is a 'Select : All, None' option.

6.7. Administer Routing Policies

Routing policies must be created to direct how calls will be routed to a system. To add a routing policy, select **Routing Policies** on the left panel menu and then click on the **New** button (not shown). Under **General**:

- Enter an informative name in the **Name** field
- Under **SIP Entity as Destination**, click **Select**, and then select the appropriate SIP entity to which this routing policy applies
- Under **Time of Day**, click **Add**, and then select the time range

The following screen shows the routing policy for inbound calls from the BT SIP Trunk to Communication Manager.

Routing Policy Details Commit Cancel Help ?

General

* Name:

Disabled:

* Retries:

Notes:

SIP Entity as Destination

Select

Name	FQDN or IP Address	Type	Notes
Communication Manager	10.10.3.44	CM	

Time of Day

Add Remove View Gaps/Overlaps

1 Item Filter: Enable

Ranking	Name	Mon	Tue	Wed	Thu	Fri	Sat	Sun	Start Time	End Time	Notes
<input type="checkbox"/> 0	24/7	<input checked="" type="checkbox"/>	00:00	23:59	Time Range 24/7						

Select : All, None

The following screen shows the routing policy for outbound calls from Communication Manager via Avaya SBCE to the BT SIP trunk.

Routing Policy Details Commit Cancel Help ?

General

* Name:

Disabled:

* Retries:

Notes:

SIP Entity as Destination

Select

Name	FQDN or IP Address	Type	Notes
Avaya_SBCE	10.10.3.35	SIP Trunk	

Time of Day

Add Remove View Gaps/Overlaps

1 Item Filter: Enable

Ranking	Name	Mon	Tue	Wed	Thu	Fri	Sat	Sun	Start Time	End Time	Notes
<input type="checkbox"/>	0 24/7	<input checked="" type="checkbox"/>	00:00	23:59	Time Range 24/7						

Select : All, None

The following screen shows the routing policy for calls inbound from the SIP Trunk to Experience Portal.

Routing Policy Details Commit Cancel

General

* Name:

Disabled:

* Retries:

Notes:

SIP Entity as Destination

Select

Name	FQDN or IP Address	Type	Notes
Experience_Portal	10.10.3.50	Voice Portal	

Time of Day

Add Remove View Gaps/Overlaps

1 Item Filter: Enable

Ranking	Name	Mon	Tue	Wed	Thu	Fri	Sat	Sun	Start Time	End Time	Notes
<input type="checkbox"/>	0 24/7	<input checked="" type="checkbox"/>	00:00	23:59	Time Range 24/7						

Select : All, None

6.8. Administer Dial Patterns

A dial pattern must be defined to direct calls to the appropriate telephony system. To configure a dial pattern, select **Dial Patterns** on the left panel menu and then click on the **New** button (not shown).

Under **General**:

- In the **Pattern** field enter a dialled number or prefix to be matched.
- In the **Min** field enter the minimum length of the dialled number.
- In the **Max** field enter the maximum length of the dialled number.
- In the **SIP Domain** field select **ALL** or alternatively one of those configured in **Section 6.2**.

Under **Originating Locations and Routing Policies**:

- Click **Add**, in the resulting screen (not shown).
- Under **Originating Location**, select the location defined in **Section 6.3** or **ALL**.
- Under **Routing Policies** select one of the routing policies defined in **Section 6.7**.
- Click **Select** button to save.

The following screen shows an example dial pattern configured for outbound calls to the BT SIP Trunk.

Dial Pattern Details [Commit] [Cancel]

General

* Pattern: 00353
* Min: 5
* Max: 16
Emergency Call:
SIP Domain: avaya.com
Notes:

Originating Locations and Routing Policies

Add Remove

1 Item

<input type="checkbox"/>	Originating Location Name	Originating Location Notes	Routing Policy Name	Rank	Routing Policy Disabled	Routing Policy Destination	Routing Policy Notes
<input type="checkbox"/>	Communication Manager		to_Avaya_SBCE	0	<input type="checkbox"/>	Avaya_SBCE	Outbound calls to SP via ASBCE.

Select : All, None

Denied Originating Locations

Add Remove

0 Items

<input type="checkbox"/>	Originating Location	Notes
--------------------------	----------------------	-------

[Commit] [Cancel]

The following screen shows the dial pattern configured for inbound calls to Communication Manager.

Dial Pattern Details
Commit Cancel
Help ?

General

* Pattern:

* Min:

* Max:

Emergency Call:

SIP Domain:

Notes:

Originating Locations and Routing Policies

Add Remove

1 Item

<input type="checkbox"/>	Originating Location Name	Originating Location Notes	Routing Policy Name	Rank	Routing Policy Disabled	Routing Policy Destination	Routing Policy Notes
<input type="checkbox"/>	Avaya SBCE		to_Communication_Manager	0	<input type="checkbox"/>	Communication Manager	Inbound calls to CM,

Select : All, None

Denied Originating Locations

Add Remove

0 Items

<input type="checkbox"/>	Originating Location	Notes
<input type="checkbox"/>		

Commit Cancel

The following screen shows the dial pattern configured for inbound calls to Experience Portal.

Dial Pattern Details
Commit Cancel
Help ?

General

* Pattern:

* Min:

* Max:

Emergency Call:

SIP Domain:

Notes:

Originating Locations and Routing Policies

Add Remove

1 Item

<input type="checkbox"/>	Originating Location Name	Originating Location Notes	Routing Policy Name	Rank	Routing Policy Disabled	Routing Policy Destination	Routing Policy Notes
<input type="checkbox"/>	Session Manager		to_Experience_Portal	0	<input type="checkbox"/>	Experience_Portal	

Select : All, None

Denied Originating Locations

Add Remove

0 Items

<input type="checkbox"/>	Originating Location	Notes
<input type="checkbox"/>		

Commit Cancel

The following screen shows the dial pattern configured for outbound calls from Experience Portal to the BT SIP Trunk.

Dial Pattern Details
Commit Cancel
Help ?

General

* Pattern:

* Min:

* Max:

Emergency Call:

SIP Domain:

Notes:

Originating Locations and Routing Policies

Add Remove

1 Item

<input type="checkbox"/>	Originating Location Name	Originating Location Notes	Routing Policy Name	Rank	Routing Policy Disabled	Routing Policy Destination	Routing Policy Notes
<input type="checkbox"/>	Experience Portal		to_Avaya_SBCE	0	<input type="checkbox"/>	Avaya SBCE	Outbound calls to SP via ASBCE.

Select : All, None

Denied Originating Locations

Add Remove

0 Items

<input type="checkbox"/>	Originating Location	Notes
<input type="checkbox"/>		

Commit Cancel

7. Configure Avaya Experience Portal

These Application Notes assume that the necessary Experience Portal licenses have been installed and basic Experience Portal administration has already been performed. Consult [13] in the **References** section for further details if necessary.

7.1. Background


Experience Portal consists of one or more Media Processing Platform (MPP) servers and an Experience Portal Manager (EPM) server. A single “server configuration” was used in the reference configuration. This consisted of a single MPP and EPM, running on a VMware environment, including an Apache Tomcat Application Server (hosting the Voice XML (VXML) and/or Call Control XML (CCXML) application scripts), that provide the directives to Experience Portal for handling the inbound calls.

References to the Voice XML and/or Call Control XML applications are administered on Experience Portal, along with one or more called numbers for each application reference. When an inbound call arrives at Experience Portal, the called party DDI number is matched against those administered called numbers. If a match is found, then the corresponding application is accessed to handle the call. If no match is found, Experience Portal informs the caller that the call cannot be handled, and disconnects the call sample configuration described in these Application Notes. A simple VXML test application was used to exercise various SIP call flow scenarios with the BT SIP Trunk service. In production, enterprises can develop their own VXML and/or CCXML applications to meet specific customer self-service needs, or consult Avaya Professional Services and/or authorized Avaya Business Partners. The development and deployment of VXML and CCXML applications is beyond the scope of these Application Notes.

7.2. Logging In and Licensing


This section describes the steps on Experience Portal for administering a SIP connection to the Session Manager.

Step 1 - Launch a web browser, enter `http://<IP address of the Avaya EPM server>/` in the URL, log in with the appropriate credentials and the following screen is displayed.

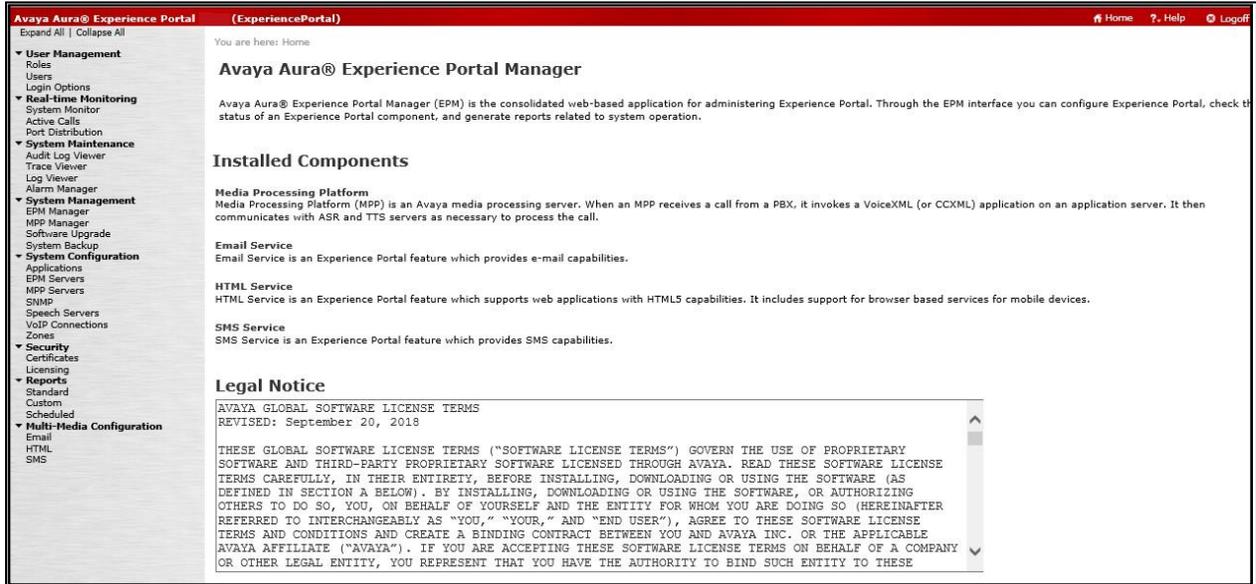

The screenshot shows the Avaya Aura Experience Portal Manager interface. The left sidebar contains a navigation menu with categories like User Management, Real-time Monitoring, System Maintenance, System Management, System Configuration, Security, Reports, and Multi-Media Configuration. The main content area displays the 'Avaya Aura Experience Portal Manager' title and a brief description of the EPM application. Below this, there is a section for 'Installed Components' listing Media Processing Platform, Email Service, HTML Service, and SMS Service. A 'Legal Notice' section is also visible, containing the 'AVAYA GLOBAL SOFTWARE LICENSE TERMS' and a 'REVISED: September 20, 2018' date.

Step 2 - In the left pane, navigate to **Security**→**Licensing**. On the **Licensing** page, verify that Experience Portal is properly licensed. If required licenses are not enabled, contact an authorized Avaya representative to obtain the licenses.

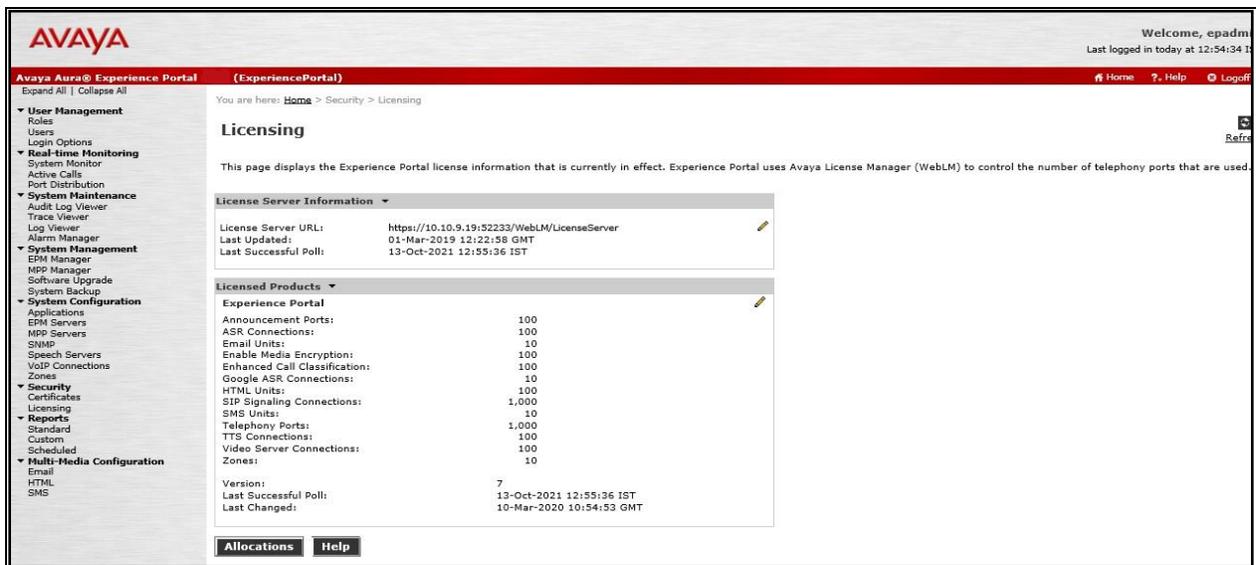

The screenshot shows the Avaya Aura Experience Portal Manager interface with the 'Licensing' page selected. The left sidebar is the same as in the previous screenshot. The main content area displays the 'Licensing' title and a brief description of the page's purpose. Below this, there are two sections: 'License Server Information' and 'Licensed Products'. The 'License Server Information' section shows details for the license server, including the URL, last updated date, and last successful poll. The 'Licensed Products' section shows a table of licensed products and their quantities.

Product	Quantity
Announcement Ports	100
ASR Connections	100
Email Units	10
Enable Media Encryption	100
Enhanced Call Classification	100
Google ASR Connections	10
HTML Units	100
SIP Signaling Connections	1,000
SMS Units	10
Telephony Ports	1,000
TTS Connections	100
Video Server Connections	100
Zones	10

7.3. VoIP Connection

This section defines a SIP trunk between Experience Portal and Session Manager.

Step 1 - In the left pane, navigate to **System Configuration** → **VoIP Connections**. On the **VoIP Connections** page, select the **SIP** tab and click **Add** to add a SIP trunk. **Note** – Only one SIP trunk can be active at any given time on Experience Portal.

You are here: [Home](#) > System Configuration > VoIP Connections

VoIP Connections

This page displays a list of Voice over Internet Protocol (VoIP) servers that Experience Portal communicates with. You can configure multiple SIP connections, but only one SIP connection can be enabled at any one given time.

H.323 SIP

Name	Enable	Proxy Transport	Proxy/DNS Server Address	Proxy Server Port	Listener Port	SIP Domain	Maximum Simultaneous Calls
SM8	Yes	TLS	10.10.3.42	5061	5061	avaya.com	10

Add **Delete** **Help**

Step 2 - Configure a SIP connection as follows:

- **Name** – Set to a descriptive name (e.g., **SM8**).
- **Enable** – Set to **Yes**.
- **Proxy Server Transport** – Set to **TLS**.
- Select **Proxy Servers**, and enter:
 - **Proxy Server Address** = **10.10.3.42** (the IP address of the Session Manager signaling interface defined in **Section 6.5.1**).
 - **Port** = **5061**
 - **Priority** = **0** (default)
 - **Weight** = **0** (default)
- **Listener Port** – Set to **5061**.
- **SIP Domain** – Set to **avaya.com** (see **Section 6.2**).
- **Consultative Transfer** – Select **INVITE with REPLACES**.
- **SIP Reject Response Code** – Select **ASM (503)**.
- **Maximum Simultaneous Calls** – Set to a number in accordance with licensed capacity. In the reference configuration a value of **10** was used.
- Select **All Calls can be either inbound or outbound**.
- **SRTP Enable** = **Yes**
- **Encryption Algorithm** = **AES_CM_128**
- **Authentication Algorithm** = **HMAC_SHA1_80**
- **RTCP Encryption Enabled** = **No**
- **RTP Authentication Enabled** = **Yes**
- Use default values for all other fields and click **Save**

Name:

Enable: Yes No

Proxy Transport: ▼

Proxy Servers DNS SRV Domain

Address	Port	Priority	Weight	
10.10.3.42	5061	0	0	Remove

Additional Proxy Server

Listener Port:

SIP Domain:

P-Asserted-Identity:

Maximum Redirection Attempts:

Consultative Transfer: INVITE with REPLACES REFER

SIP Reject Response Code: ASM (503) SES (480) Custom

SIP Timers

T1: milliseconds

T2: milliseconds

B and F: milliseconds

Call Capacity

Maximum Simultaneous Calls:

All Calls can be either inbound or outbound

Configure number of inbound and outbound calls allowed

SRTP

Enable: Yes No

Encryption Algorithm: AES_CM_128 NONE

Authentication Algorithm: HMAC_SHA1_80 HMAC_SHA1_32

RTCP Encryption Enabled: Yes No

RTP Authentication Enabled: Yes No


Add

7.4. Speech Servers

Avaya Experience Portal system integrates with two types of third-party speech servers:

- Automatic Speech Recognition (ASR): This technology enables an interactive voice response (IVR) system to collect verbal responses from callers.
- Text-to-Speech (TTS): This technology enables an IVR system to render text content into synthesized speech output according to algorithms within the TTS software.

No speech servers were required as part of the test configuration. The installation and administration of the ASR and TTS Speech Servers are beyond the scope of this document

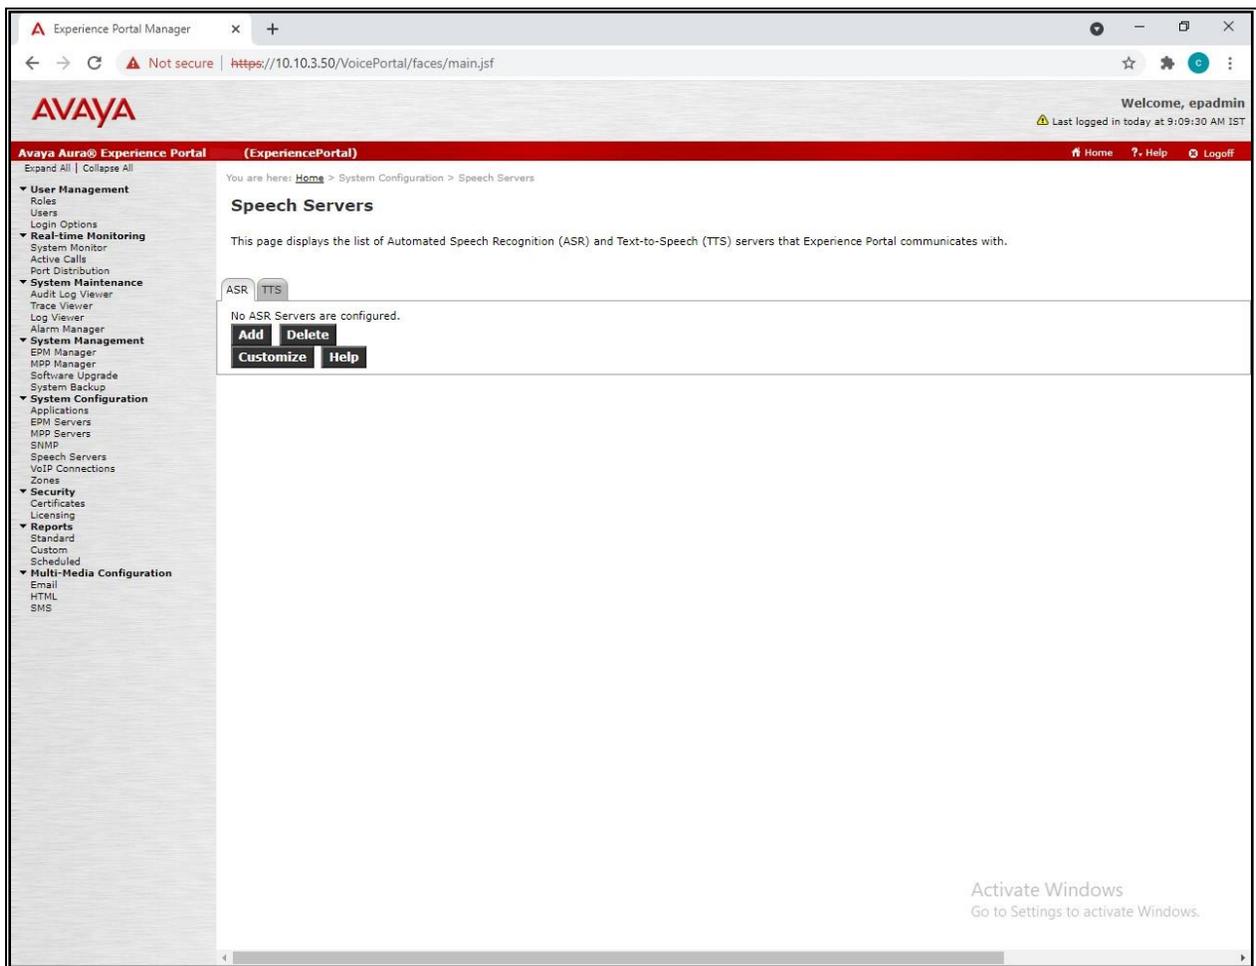

7.5. Application References

This section describes the steps for administering a reference to the VXML and/or CCXML applications residing on the application server. In the sample configuration, the applications were co-resident on one Experience Portal server, with IP Address 10.10.3.50.

Step 1 - In the left pane, navigate to **System Configuration** → **Applications**. On the **Applications** page (not shown), click **Add** to add an application and configure as follows:

- **Name** – Set to a descriptive name (e.g., **Test_App**).
- **Enable** – Set to **Yes**. This field determines which application(s) will be executed based on their defined criteria.
- **Type** – Select **VoiceXML**, **CCXML**, or **CCXML/VoiceXML** according to the application type. CCXML was used in the test configuration.
- **VoiceXML** and/or **CCXML URL** – Enter the necessary URL(s) to access the VXML and/or CCXML application(s) on the application server. In the sample screen below, the Experience Portal test application on a single server is referenced. CCXML was used in the test configuration.
- **Speech Servers ASR** and **TTS** – Select the appropriate ASR and/or TTS servers as necessary.
- **Application Launch** – Set to **Inbound**.
- **Called Number** – Enter the number as per **Section 6.8** to match against an inbound SIP INVITE message, and click **Add**.

Change Application

Use this page to change the configuration of an application.

Name: Test_App
Enable: Yes No
Type: CCXML
Reserved SIP Calls: None Minimum Maximum
Requested:

URI

Single Fail Over Load Balance

CCXML URL:

Verify

Mutual Certificate Authentication: Yes No

Basic Authentication: Yes No

ASR Speech Servers

Engine Types

<None>

Selected Engine Types

<None>

ASR:

TTS Speech Servers

TTS:

Application Launch

Inbound Inbound Default Outbound

Number Number Range URI

Called Number:

Add

8000

Remove

7.6. MPP Servers and VoIP Settings

This section illustrates the procedure for viewing or changing the MPP Settings. In the sample configuration, the MPP Server is co-resident on a single server with the Experience Portal Management server (EPM).

Step 1 - In the left pane, navigate to **System Configuration** → **MPP Servers** and the following screen is displayed. Click **Add**.

Avaya Aura® Experience Portal (ExperiencePortal)

You are here: [Home](#) > System Configuration > MPP Servers

MPP Servers

This page displays the list of Media Processing Platform (MPP) servers in the Experience Portal system. When an MPP receives a call from a PBX, it invokes a VoiceXML application server and communicates with ASR and TTS servers as necessary to process the call.

<input type="checkbox"/>	Name	Host Address	Network Address (VoIP)	Network Address (MRCP)	Network Address (AppSvr)	Maximum Simultaneous Calls	Trace Level
<input type="checkbox"/>	mpp1	10.10.3.50	<Default>	<Default>	<Default>	10	Use MPP Settings

Add **Delete**

MPP Settings **Browser Settings** **Video Settings** **VoIP Settings** **Help**

Step 2 - Enter any descriptive name in the **Name** field (e.g., **mpp1**) and the IP address of the MPP server in the **Host Address** field and click **Continue** (not shown).

Step 3 - The certificate page will open. Check the **Trust this certificate** box (not shown). Once complete, click **Save**.

You are here: [Home](#) > System Configuration > [MPP Servers](#) > Change MPP Server

Change MPP Server

Use this page to change the configuration of an MPP. Take care when changing the MPP Trace Logging Thresholds. Do not set Trace Levels to Finest if your Experience Portal system has heavy call traffic. The system might experience performance issues if Trace Levels are set to Finest. Set Trace Levels to Finest only when you are troubleshooting the system.

Name: mpp1
Host Address: 10.10.3.50
Network Address (VoIP): <Default>
Network Address (MRCP): <Default>
Network Address (AppSvr): <Default>
Maximum Simultaneous Calls: 10
Restart Automatically: Yes No

MPP Certificate

```
Owner: CN=ep7cmn.avaya.com,O=Avaya,OU=EPM
Issuer: CN=ep7cmn.avaya.com,O=Avaya,OU=EPM
Serial Number: 952c116c181b7815
Signature Algorithm: SHA256withRSA
Valid from: 25 February 2019 13:17:17 GMT until 25 February 2029 13:17:17 GMT
Certificate Fingerprints
MD5: 8b:17:0c:92:48:ef:64:3d:86:b2:60:6a:bb:f5:09:69
SHA: 9a:90:a4:2c:48:21:46:ac:e4:18:c0:85:b0:ef:c1:48:3c:9b:d1:be
SHA-256: 09:cb:da:79:0d:e6:ae:02:95:80:eb:92:56:0c:15:17:b2:f6:9e:f6:f9:2e:90:63:5e:06:be:98:96:cc:6a:26
Subject Alternative Name
DNS Name: ep7cmn
DNS Name: ep7cmn.avaya.com
IP Address: 10.10.3.50
```

Categories and Trace Levels

Step 4 - Click **VoIP Settings** tab on the screen displayed in **Step 1**, and the following screen is displayed.

- In the **Port Ranges** section, default ports were used.

You are here: [Home](#) > [System Configuration](#) > [MPP Servers](#) > [VoIP Settings](#)

VoIP Settings

Voice over Internet Protocol (VoIP) is the process of sending voice data through a network using one or more standard protocols such as H.323 and Real-time Transfer Protocol (RTP). Use this page to configure parameters that affect how voice data is transferred through the network. Note that if you make any changes to this page, you must restart all MPPs.

Port Ranges

	Low	High
UDP:	11000	30999
TCP:	31000	33499
MRCP:	34000	36499
H.323 Station:	37000	39499

RTCP Monitor Settings

Host Address:

Port:

VoIP Audio Formats

MPP Native Format:

In the **Codecs** section set:

- Set **Packet Time** to **20**.
- Verify the **G711alaw**, **G729** and **G711ulaw** codecs are enabled.
- Set **G729 Discontinuous Transmission** to **No** (G.729A).
- Set the **Offer Order** to the preferred codec.
- Use default values for all other fields.

Step 5 - Click on **Save**.

Codecs

Offer

Enable	Codec	Order
<input checked="" type="checkbox"/>	G711aLaw	1
<input checked="" type="checkbox"/>	G729	2
<input checked="" type="checkbox"/>	G711uLaw	3

Packet Time: milliseconds

G729 Discontinuous Transmission: Yes No

Answer

Enable	Codec	Order
<input checked="" type="checkbox"/>	G711uLaw	1
<input checked="" type="checkbox"/>	G711aLaw	1
<input checked="" type="checkbox"/>	G729	1

G729 Discontinuous Transmission: Yes No Either

G729 Reduced Complexity Encoder: Yes No

QoS Parameters

Out of Service Threshold (% of VoIP Resources)

Call Progress

Miscellaneous

After saving the configuration changes, restart the MPP server for the change to take effect. As shown below, the MPP may be restarted using the **Restart** button available via the Experience Portal GUI at **System Management → MPP Manager**. Note that the **State** column shows when the MPP is running after the restart.

You are here: [Home](#) > System Management > MPP Manager

MPP Manager (Oct 13, 2021 1:09:43 PM IST)

This page displays the current state of each MPP in the Experience Portal system. To enable the state and mode commands, select one or more MPPs. selected MPPs must also be stopped.

Last Poll: Oct 13, 2021 1:09:22 PM IST

✓	Server Name	Mode	State	Config	Auto Restart	Restart Schedule		Active Calls	
						Today	Recurring	In	Out
✓	mpp1	Online	Running	OK	Yes	No	None	0	0

State Commands

Start Stop **Restart** Reboot Halt Cancel

Restart/Reboot Options

One server at a time
 All servers

Mode Commands

Offline Test Online

Help

8. Configure Avaya Session Border Controller for Enterprise


This section describes the configuration of the Session Border Controller for Enterprise (Avaya SBCE). The Avaya SBCE provides security and manipulation of signalling to provide an interface to the Service Provider's SIP Trunk that is standard where possible and adapted to the Service Provider's SIP implementation where necessary.

8.1. Access Avaya Session Border Controller for Enterprise

Access the Avaya SBCE using a web browser by entering the URL **https://<ip-address>**, where **<ip-address>** is the management IP address configured at installation and enter the **Username** and **Password**.




Once logged in, on the top-left of the screen, under **Device:** select the required device from the drop-down menu. with a menu on the left-hand side. In this case, **GSSCP_R10.1** is used as a starting point for all configuration of the Avaya SBCE.

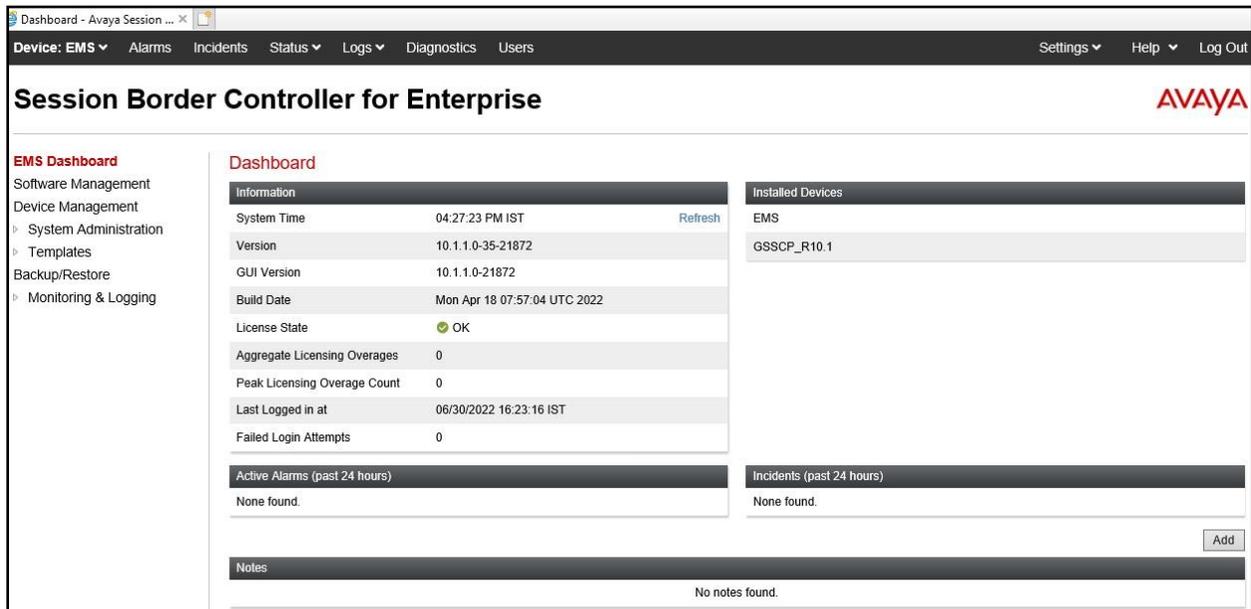

To view system information that was configured during installation, navigate to **Device Management**. A list of installed devices is shown in the right pane. In the case of the sample configuration, a single device named **GSSCP_R10.1** is shown. To view the configuration of this device, click **View** (the third option from the right).



The **System Information** screen shows the **General Configuration**, **Device Configuration**, **License Allocation**, **Network Configuration**, **DNS Configuration** and **Management IP** information.

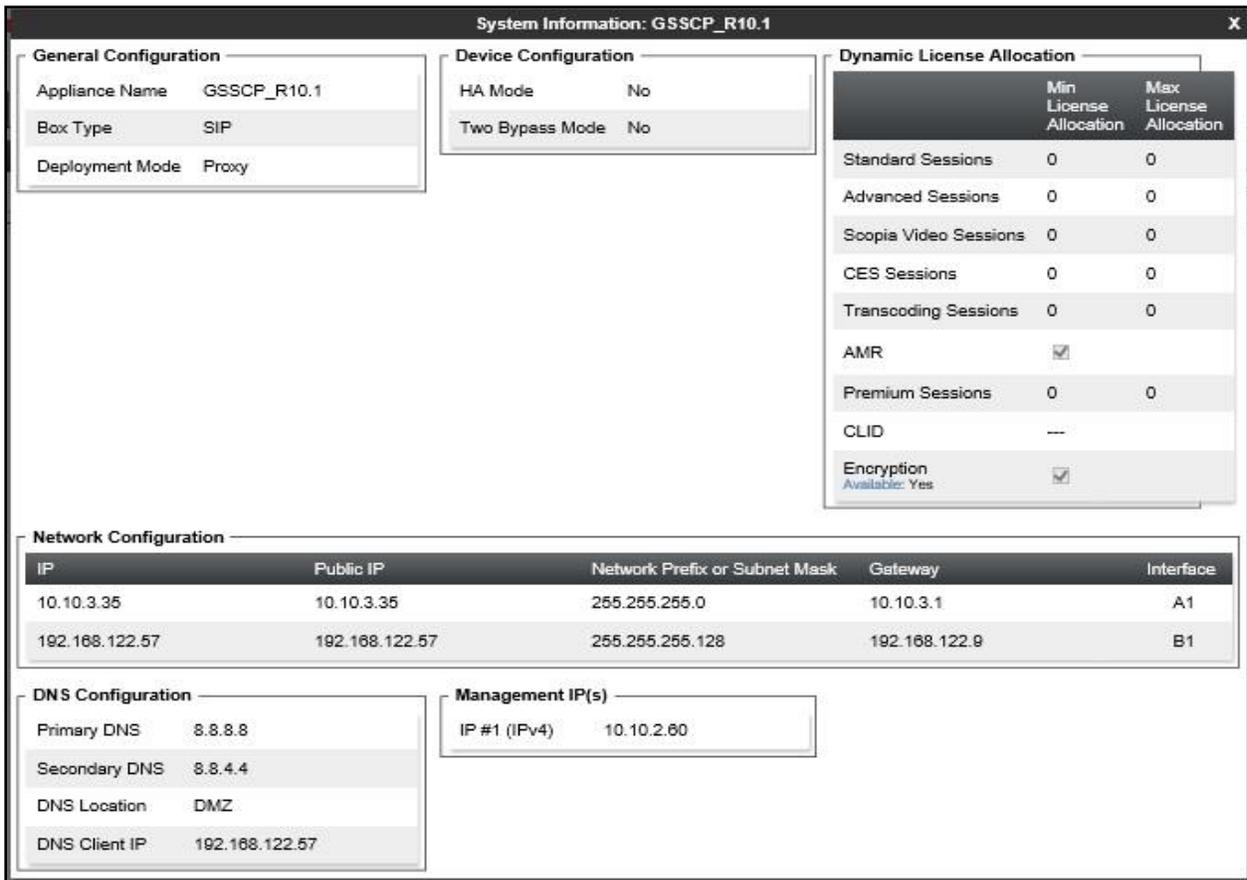

8.2. Define Network Management

Network information is required on the Avaya SBCE to allocate IP addresses and masks to the interfaces. Note that only the **A1** and **B1** interfaces are used, typically the **A1** interface is used for the internal side and **B1** is used for external. Each side of the Avaya SBCE can have only one physical interface assigned.

To define the network information, navigate to **Network & Flows** → **Network Management** in the main menu on the left-hand side and click on **Add**. Enter details for the external interfaces in the dialogue box:

- Enter a descriptive name in the **Name** field.
- Enter the default gateway IP address for the external interfaces in the **Default Gateway** field.
- Enter the subnet mask in the **Network Prefix or Subnet Mask** field.
- Select the external physical interface to be used from the **Interface** drop down menu. In the test environment, this was **B1**.
- Click on **Add** and an additional row will appear allowing an IP address to be entered.
- Enter the external IP address of the Avaya SBCE on the SIP trunk in the **IP Address** field and leave the **Public IP** and **Gateway Override** fields blank.
- Click on **Finish** to complete the interface definition.

The screenshot shows a dialog box titled "Network" with a close button (X) in the top right corner. A warning message at the top states: "Modifications to the interfaces and IP addresses are service impacting and take effect immediately. If changes are made, sessions using this network will be dropped." Below the warning, there are several input fields: "Name" (containing "B1_External"), "Default Gateway" (containing "192.168.122.9"), "Network Prefix or Subnet Mask" (containing "255.255.255.128"), and "Interface" (a dropdown menu showing "B1"). An "Add" button is located to the right of the "Interface" field. Below these fields is a table with three columns: "IP Address", "Public IP", and "Gateway Override". The "IP Address" column contains "192.168.122.57", the "Public IP" column contains "Use IP Address", and the "Gateway Override" column contains "Use Default". A "Delete" button is located to the right of the "Gateway Override" field. At the bottom of the dialog box is a "Finish" button.

Click on **Add** to define the internal interfaces or Edit if it was defined during installation of the Avaya SBCE. Enter details in the dialogue box:


- Enter a descriptive name in the **Name** field.
- Enter the default gateway IP address for the internal interfaces in the **Default Gateway** field.
- Enter the subnet mask in the **Network Prefix or Subnet Mask** field.
- Select the internal physical interface to be used from the **Interface** drop down menu. In the test environment, this was **A1**.
- Click on **Add** and an additional row will appear allowing an IP address to be entered.
- Enter the internal IP address of the Avaya SBCE on the SIP trunk in the **IP Address** field and leave the **Public IP** and **Gateway Override** fields blank.
- Click on **Finish** to complete the interface definition.

IP Address	Public IP	Gateway Override
10.10.3.35	Use IP Address	Use Default

The following screenshot shows the completed Network Management configuration:

Name	Gateway	Subnet Mask / Prefix Length	Interface	IP Address	Edit	Delete
A1_Internal	10.10.3.1	255.255.255.0	A1	10.10.3.35	Edit	Delete
B1_External	192.168.122.9	255.255.255.128	B1	192.168.122.57	Edit	Delete

Select the **Interfaces** tab and click on the **Status** of the physical interface to toggle the state. Change the state to **Enabled** where required.

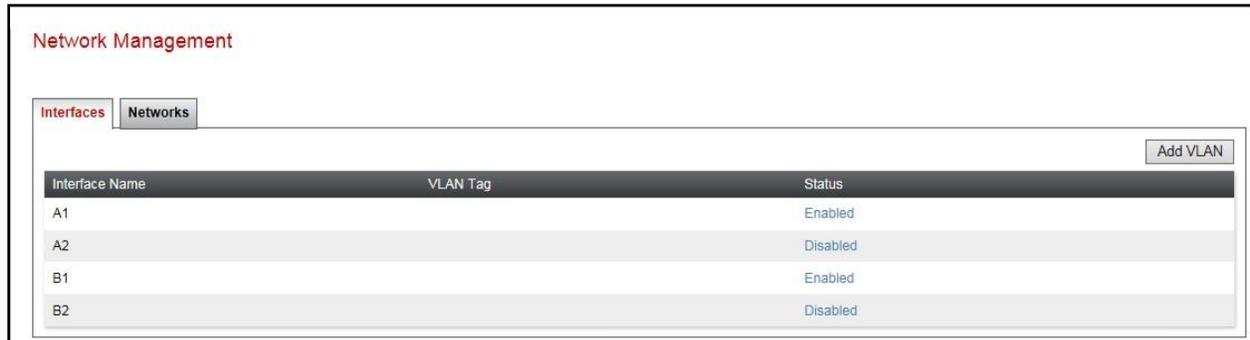

The screenshot shows a web interface titled "Network Management". It has two tabs: "Interfaces" (selected) and "Networks". In the top right corner, there is a button labeled "Add VLAN". Below the tabs is a table with three columns: "Interface Name", "VLAN Tag", and "Status". The table contains four rows of data:

Interface Name	VLAN Tag	Status
A1		Enabled
A2		Disabled
B1		Enabled
B2		Disabled

Note: to ensure that the Avaya SBCE uses the interfaces defined, the Application must be restarted.

- Click on **Device Management** in the main menu (not shown).
- Select **Restart Application** indicated by an icon in the status bar (not shown).

A status box will appear that will indicate when the restart is complete.

8.3. Define TLS Profiles


For the compliance test, TLS transport is used for signalling on the SIP trunk between Session Manager and the Avaya SBCE. Compliance testing was done using identity certificates signed by a local certificate authority. The generation and installation of these certificates are beyond the scope of these Application Notes.

The following procedures show how to view the certificates and configure the Client and Server profiles to support the TLS connection.

8.3.1. Certificates

To view the certificates currently installed on the Avaya SBCE, navigate to **TLS Management** → **Certificates**:

- Verify that an Avaya SBCE identity certificate (**asbce40int.pem**) is present under **Installed Certificates**.
- Verify that certificate authority root certificate (**SystemManagerCA.pem**) is present under **Installed CA certificates**.
- Verify that private key associated with the identity certificate (**asbce40int.key**) is present under **Installed Keys**.

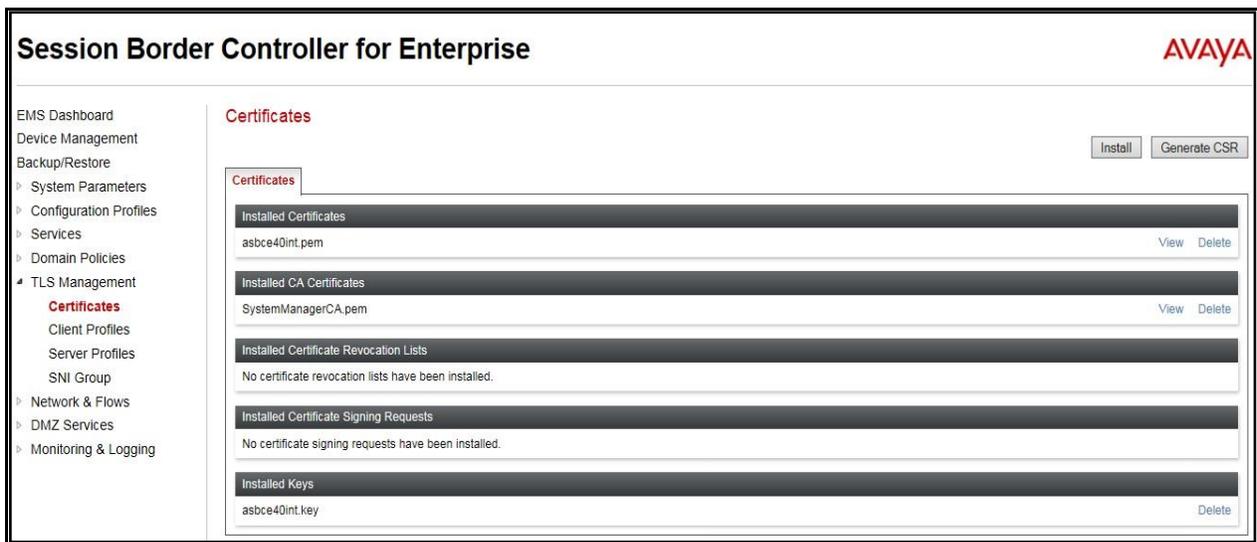

8.3.2. Client Profile

To create a new client profile, navigate to **TLS Management** → **Client Profile** in the left pane and click **Add** (not shown).

- Set **Profile Name** to a descriptive name. **GSSCP_Client** was used in the compliance testing.
- Set **Certificate** to the identity certificate **asbce40int.pem** used in the compliance testing.
- **Peer Verification** is automatically set to **Required**.
- Set **Peer Certificate Authorities** to the **SystemManagerCA.pem** identity certificate.
- Set **Verification Depth** to **1**.

Click **Next** to accept default values for the next screen and click **Finish** (not shown).

The screenshot shows the configuration interface for a client profile named 'GSSCP_Client'. The interface is divided into several sections:

- Client Profiles: GSSCP_Client**: A header with an 'Add' button and a 'Delete' button.
- Client Profiles**: A list containing 'GSSCP_Client'.
- Client Profile**: A tabbed view showing the configuration for the selected profile.
- TLS Profile**:
 - Profile Name: GSSCP_Client
 - Certificate: asbce40int.pem
 - SNI: Enabled
- Certificate Verification**:
 - Peer Verification: Required
 - Peer Certificate Authorities: SystemManagerCA.pem
 - Peer Certificate Revocation Lists: ---
 - Verification Depth: 1
 - Extended Hostname Verification:
- Renegotiation Parameters**:
 - Renegotiation Time: 0
 - Renegotiation Byte Count: 0
- Handshake Options**:
 - Version: TLS 1.2 TLS 1.1 TLS 1.0
 - Ciphers: Default FIPS Custom
 - Value: HIGH:!DH:!ADH:!MD5:!aNULL:!eNULL:@STRENGTH
- Edit**: A button at the bottom right of the configuration area.

8.3.3. Server Profile

To create a new server profile, navigate to **TLS Management** → **Server Profile** in the left pane and click **Add** (not shown).

- Set **Profile Name** to a descriptive name. **GSSCP_Server** was used in the compliance testing
- Set **Certificate** to the identity certificate **asbce40int.pem** used in the compliance testing.
- Set **Peer Verification** to **Optional**.

Click **Next** to accept default values for the next screen and click **Finish** (not shown).

The screenshot shows the configuration page for a server profile named 'GSSCP_Server'. The interface is divided into several sections:

- Server Profiles: GSSCP_Server** (Header)
- Add** (Button)
- Delete** (Button)
- Server Profiles** (List): GSSCP_Server
- Server Profile** (Section):
 - TLS Profile**
 - Profile Name: GSSCP_Server
 - Certificate: asbce40int.pem
 - SNI Options: None
 - Certificate Verification**
 - Peer Verification: Optional
 - Peer Certificate Authorities: ---
 - Peer Certificate Revocation Lists: ---
 - Verification Depth: 1
 - Extended Hostname Verification:
- Renegotiation Parameters**
 - Renegotiation Time: 0
 - Renegotiation Byte Count: 0
- Handshake Options**
 - Version: TLS 1.2 TLS 1.1 TLS 1.0
 - Ciphers: Default FIPS Custom
 - Value: HIGH:!DH:!ADH:!MD5:!aNULL:!eNULL:@STRENGTH
- Edit** (Button)

8.4. Define Interfaces

When the IP addresses and masks are assigned to the interfaces, these are then configured as signalling and media interfaces.

8.4.1. Signalling Interfaces


To define the signalling interfaces on the Avaya SBCE, navigate to **Network & Flows** → **Signaling Interface** from the menu on the left-hand side. Details of transport protocol and ports for the internal and external SIP signalling are entered here.

To enter details of transport protocol and ports for the SIP signalling on the internal interface:

- Select **Add** and enter details of the internal signalling interface in the pop-up menu (not shown).
- In the **Name** field enter a descriptive name for the interface.
- For **Signaling IP**, select the **A1_Internal** signalling interface IP addresses defined in **Section 8.2**.
- Select **TLS** port number, **5061** is used for Session Manager.
- Select a **TLS Profile** defined in **Section 8.3.3** from the drop-down menu.
- Click **Finish**.

To enter details of transport protocol and ports for the SIP signalling on the external interface:

- Select **Add** and enter details of the external signalling interface in the pop-up menu (not shown).
- In the **Name** field enter a descriptive name for the external signalling interface.
- For **Signaling IP**, select the **B1_external** signalling interface IP address defined in **Section 8.2**.
- Select **TCP** port number, **5060** is used for the BT SIP Trunk.
- Click **Finish**.

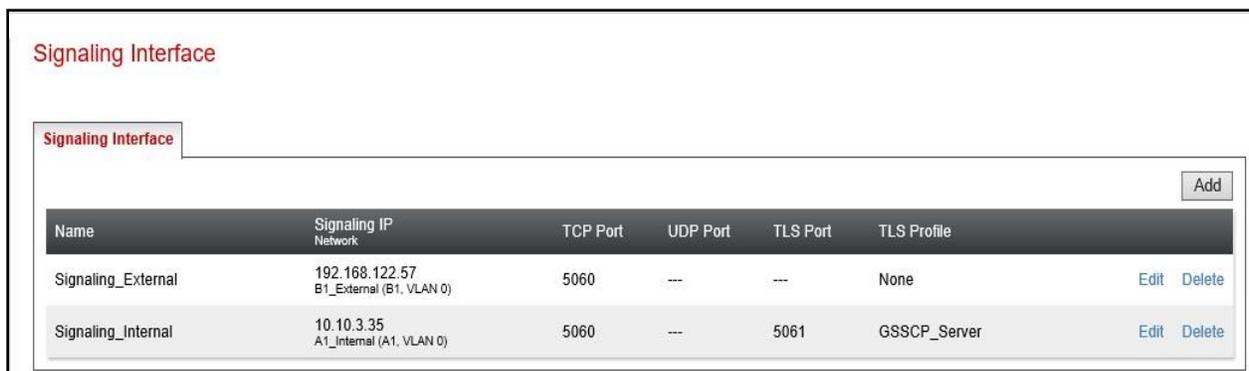

The screenshot shows the 'Signaling Interface' configuration page. At the top, there is a red header 'Signaling Interface' and a sub-header 'Signaling Interface' with an 'Add' button. Below this is a table with the following columns: Name, Signaling IP Network, TCP Port, UDP Port, TLS Port, TLS Profile, and Edit/Delete actions.

Name	Signaling IP Network	TCP Port	UDP Port	TLS Port	TLS Profile	Edit	Delete
Signaling_External	192.168.122.57 B1_External (B1, VLAN 0)	5060	---	---	None	Edit	Delete
Signaling_Internal	10.10.3.35 A1_Internal (A1, VLAN 0)	5060	---	5061	GSSCP_Server	Edit	Delete

8.4.2. Media Interfaces


To define the media interfaces on the Avaya SBCE, navigate to **Network & Flows** → **Media Interface** from the menu on the left-hand side. Details of the RTP and SRTP port ranges for the internal and external media streams are entered here. The IP addresses for media can be the same as those used for signalling.

To enter details of the media IP and RTP port range for the internal interface to be used in the server flow:

- Select **Add Media Interface** and enter details in the pop-up menu.
- In the **Name** field enter a descriptive name for the internal media interface.
- For **Media IP**, select the **A1_Internal** media interface IP address defined in **Section 8.2**.
- For **Port Range**, enter **35000-40000**.
- Click **Finish**.

To enter details of the media IP and RTP port range on the external interface to be used in the server flow:

- Select **Add Media Interface** and enter details in the pop-up menu.
- In the **Name** field enter a descriptive name for the external media interface.
- For **Media IP**, select the **B1_External** media interface IP address defined in **Section 8.2**.
- Select **Port Range**, enter **35000-40000**.
- Click **Finish**.

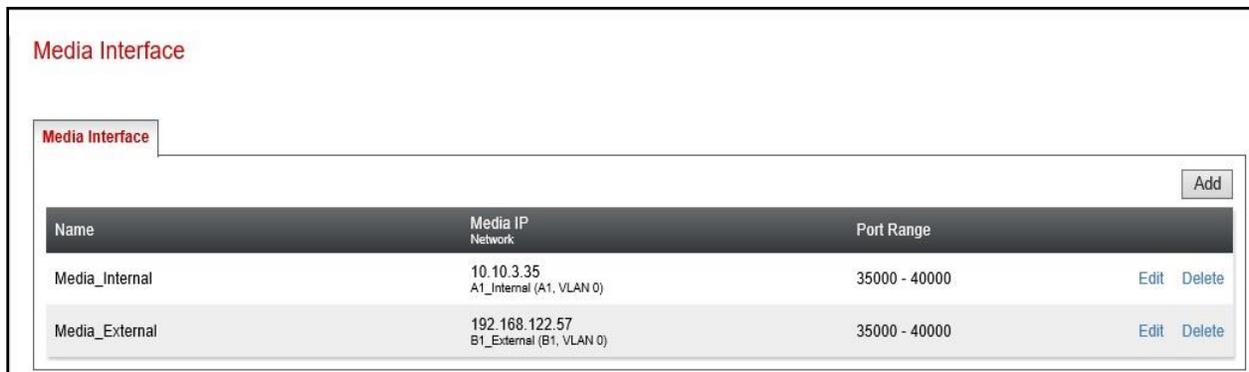

The screenshot shows the 'Media Interface' configuration page. It features a table with the following data:

Name	Media IP Network	Port Range	
Media_Internal	10.10.3.35 A1_Internal (A1, VLAN 0)	35000 - 40000	Edit Delete
Media_External	192.168.122.57 B1_External (B1, VLAN 0)	35000 - 40000	Edit Delete

8.5. Define Server Interworking

Server interworking is defined for each server connected to the Avaya SBCE. In this case, BT SIP platform is connected as the Trunk Server and the Session Manager is connected as the Call Server.

8.5.1. Server Interworking Avaya

Server Interworking allows the configuration and management of various SIP call server-specific capabilities such as call hold and T.38. From the left-hand menu select **Configuration Profiles** → **Server Interworking** and click on **Add**.

- Enter profile name such as Avaya and click **Next** (Not Shown).
- Check **Hold Support = None**.
- Check **T.38 Support**.
- All other options on the **General** Tab can be left at default.

General	
Hold Support	<input checked="" type="radio"/> None <input type="radio"/> RFC2543 - c=0.0.0.0 <input type="radio"/> RFC3284 - a=sendonly
180 Handling	<input checked="" type="radio"/> None <input type="radio"/> SDP <input type="radio"/> No SDP
181 Handling	<input checked="" type="radio"/> None <input type="radio"/> SDP <input type="radio"/> No SDP
182 Handling	<input checked="" type="radio"/> None <input type="radio"/> SDP <input type="radio"/> No SDP
183 Handling	<input checked="" type="radio"/> None <input type="radio"/> SDP <input type="radio"/> No SDP
Refer Handling	<input type="checkbox"/>
URI Group	None ▾
Send Hold	<input type="checkbox"/>
Delayed Offer	<input type="checkbox"/>
3xx Handling	<input type="checkbox"/>
Diversion Header Support	<input type="checkbox"/>
Delayed SDP Handling	<input type="checkbox"/>
Re-Invite Handling	<input type="checkbox"/>
Prack Handling	<input type="checkbox"/>
Allow 18X SDP	<input type="checkbox"/>
T.38 Support	<input checked="" type="checkbox"/>
URI Scheme	<input checked="" type="radio"/> SIP <input type="radio"/> TEL <input type="radio"/> ANY
Via Header Format	<input checked="" type="radio"/> RFC3281 <input type="radio"/> RFC2543

On the **Advanced** Tab:

- Check **Record Routes = Both Sides**.
- Ensure **Extensions = Avaya**.
- Check **Has Remote SBC**.
- All other options on the **Advanced** Tab can be left at default.

Click **Finish**.

The screenshot shows a configuration window with the following settings:

- Record Routes:** Radio buttons for None, Single Side, **Both Sides** (selected), Dialog-Initiate Only (Single Side), and Dialog-Initiate Only (Both Sides).
- Include End Point IP for Context Lookup:**
- Extensions:** Dropdown menu set to **Avaya**.
- Diversion Manipulation:**
- Diversion Condition:** Dropdown menu set to **None**.
- Diversion Header URI:** Empty text input field.
- Has Remote SBC:**
- Route Response on Via Port:**
- Relay INVITE Replace for SIPREC:**
- MOBX Re-INVITE Handling:**
- DTMF Section:**
 - DTMF Support:** Radio buttons for **None** (selected), SIP Notify, RFC 2833 Relay & SIP Notify, SIP Info, RFC 2833 Relay & SIP Info, and Inband.

A **Finish** button is located at the bottom of the configuration window.

8.5.2. Server Interworking – BT

Server Interworking allows the configuration and management of various SIP call server-specific capabilities such as call hold and T.38. From the left-hand menu select **Configuration Profiles** → **Server Interworking** and click on **Add**.

- Enter profile name such as **BT** and click **Next** (Not Shown).
- Check **Hold Support = None**.
- Check **Refer Handling** as per **Section 2.2**.
- Check **T.38 Support**.
- All other options on the **General** Tab can be left at default.

General	
Hold Support	<input checked="" type="radio"/> None <input type="radio"/> RFC2543 - c=0.0.0.0 <input type="radio"/> RFC3264 - a=sendonly
180 Handling	<input checked="" type="radio"/> None <input type="radio"/> SDP <input type="radio"/> No SDP
181 Handling	<input checked="" type="radio"/> None <input type="radio"/> SDP <input type="radio"/> No SDP
182 Handling	<input checked="" type="radio"/> None <input type="radio"/> SDP <input type="radio"/> No SDP
183 Handling	<input checked="" type="radio"/> None <input type="radio"/> SDP <input type="radio"/> No SDP
Refer Handling	<input checked="" type="checkbox"/>
URI Group	None ▾
Send Hold	<input type="checkbox"/>
Delayed Offer	<input type="checkbox"/>
3xx Handling	<input type="checkbox"/>
Diversion Header Support	<input type="checkbox"/>
Delayed SDP Handling	<input type="checkbox"/>
Re-Invite Handling	<input type="checkbox"/>
Prack Handling	<input type="checkbox"/>
Allow 18X SDP	<input type="checkbox"/>
T.38 Support	<input checked="" type="checkbox"/>
URI Scheme	<input checked="" type="radio"/> SIP <input type="radio"/> TEL <input type="radio"/> ANY
Via Header Format	<input checked="" type="radio"/> RFC3261 <input type="radio"/> RFC2543

On the **Advanced** Tab:

- Check **Record Routes = Both Sides**.
- Ensure **Extensions = None**.
- Check **Has Remote SBC**.
- All other options on the **Advanced** Tab can be left at default.

Click **Finish**.

The screenshot displays the 'Advanced' configuration tab with the following settings:

- Record Routes:** Radio buttons for None, Single Side, Both Sides (selected), Dialog-Initiate Only (Single Side), and Dialog-Initiate Only (Both Sides).
- Include End Point IP for Context Lookup:** Checked checkbox.
- Extensions:** Dropdown menu set to 'None'.
- Diversion Manipulation:** Unchecked checkbox.
- Diversion Condition:** Dropdown menu set to 'None'.
- Diversion Header URI:** Empty text input field.
- Has Remote SBC:** Checked checkbox.
- Route Response on Via Port:** Unchecked checkbox.
- Relay INVITE Replace for SIPREC:** Unchecked checkbox.
- DTMF:** Section header.
- DTMF Support:** Radio buttons for None (selected), SIP Notify, SIP Info, and Inband.

A 'Finish' button is located at the bottom center of the configuration area.

8.6. Signalling Manipulation


The Signaling Manipulation feature allows the ability to add, change and delete any of the headers in a SIP message. This feature will add the ability to configure such manipulation in a highly flexible manner using a proprietary scripting language called SigMa. The SigMa scripting language is designed to express any of the SIP header manipulation operations to be done by the Avaya SBCE

It was observed when performing Blind Transfer to PSTN numbers on inbound calls (i.e. PSTN (A) -> Avaya (B) -> Blind transfer -> PSTN (C)) from Avaya SIP handsets, that BT BV IP Connect was responding with a “604 Does Not Exist Anywhere”. The reason BT BV IP Connect was responding with “604 Does Not Exist Anywhere” is that the Avaya SIP handsets populate the P-Asserted-Identity Header with the originating caller (A) CLID. BT BV IP Connect require the P-Asserted-Identity Header to be populated with the CLID of a known BT BV IP Connect number (B) on their SIP platform. In order for Blind Transfers to PSTN to complete successfully, a SigMa script was created on the Avaya SBCE to populate the P-Asserted-Identity Header with a known BT BV IP Connect CLID number on their SIP platform.

To define the signalling manipulation, navigate to **Configuration Profiles → Signaling Manipulations** and click on **Add** and enter a title. A new blank Signaling Manipulation Editor window will pop up. The script text is as follows:

```
/*Script to copy From Header to PAI Header for Blind Transfer */  
  
within session "INVITE"  
{  
  act on message where %DIRECTION="OUTBOUND" and %ENTRY_POINT="POST_ROUTING"  
  {  
    if (exists(%HEADERS["Referred-By"][1])) then  
    {  
      %DivUser = %HEADERS["From"][1].URI.USER;  
      %HEADERS["P-Asserted-Identity"][1].URI.USER = %DivUser;  
    }  
  }  
}
```

Once entered and saved, the script appears as shown in the following screenshot:

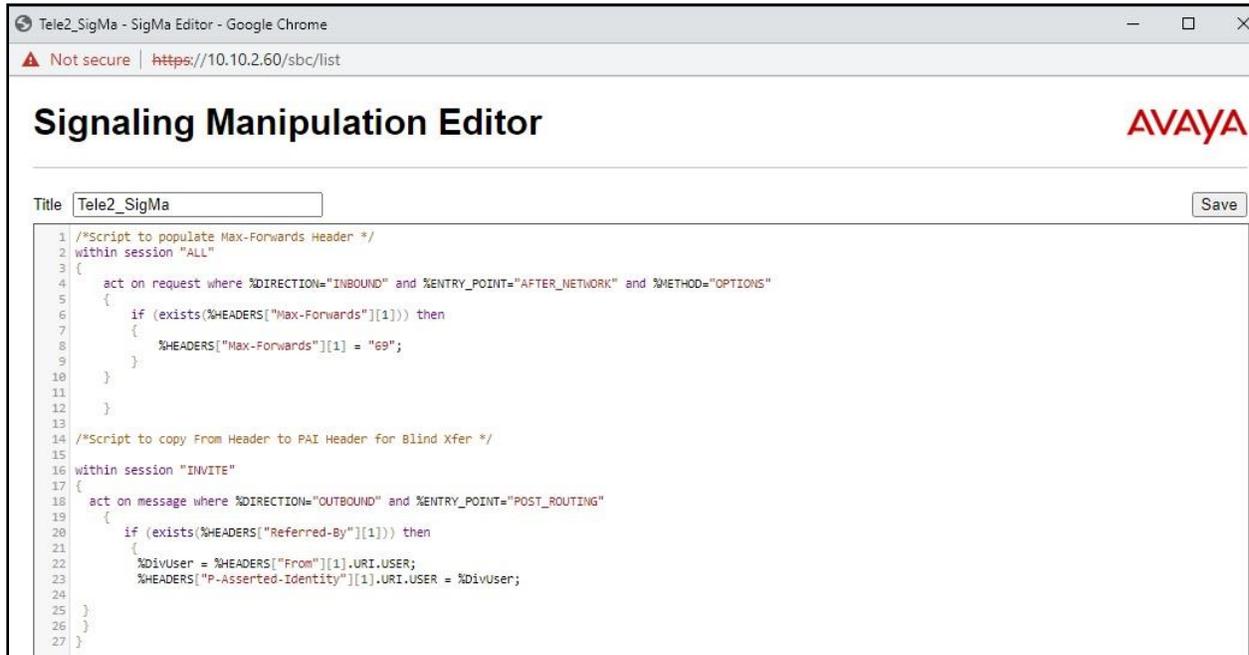

The screenshot shows a web browser window titled "Tele2_SigMa - SigMa Editor - Google Chrome" with the address bar showing "https://10.10.2.60/sbc/list". The page title is "Signaling Manipulation Editor" and the Avaya logo is in the top right. Below the title is a "Title" field containing "Tele2_SigMa" and a "Save" button. The main area contains a script with the following content:

```
1 /*script to populate Max-Forwards Header */
2 within session "ALL"
3 {
4   act on request where %DIRECTION="INBOUND" and %ENTRY_POINT="AFTER_NETWORK" and %METHOD="OPTIONS"
5   {
6     if (exists(%HEADERS["Max-Forwards"][1])) then
7     {
8       %HEADERS["Max-Forwards"][1] = "69";
9     }
10  }
11 }
12 }
13
14 /*script to copy From Header to PAI Header for Blind Xfer */
15
16 within session "INVITE"
17 {
18   act on message where %DIRECTION="OUTBOUND" and %ENTRY_POINT="POST_ROUTING"
19   {
20     if (exists(%HEADERS["Referred-By"][1])) then
21     {
22       %DivUser = %HEADERS["From"][1].URI.USER;
23       %HEADERS["P-Asserted-Identity"][1].URI.USER = %DivUser;
24     }
25   }
26 }
27 }
```

8.7. Define Servers

Servers are defined for each server connected to the Avaya SBCE. In this case, BT is connected as the Trunk Server and Session Manager is connected as the Call Server.

8.7.1. Server Configuration – Avaya


From the left-hand menu select **Services** → **SIP Servers** and click on **Add** and enter a descriptive name. On the **Add Server Configuration Profiles** tab, set the following:

- Select **Server Type** to be **Call Server**.
- Select **TLS Client Profile** to be **GSSCP_Client** defined in **Section 8.3.2** from the drop-down menu.
- Enter **IP Address / FQDN** to **10.10.3.42** (Session Manager IP Address).
- For **Port**, enter **5061**.
- For **Transport**, select **TLS**.
- Click on **Next** (not shown) to use default entries on the **Authentication** and **Heartbeat** tabs.

IP Address / FQDN	Port	Transport
10.10.3.42	5061	TLS

On the **Advanced** tab:

- Check **Enable Grooming**.
- Select **Avaya** for **Interworking Profile**.
- Click **Finish**.

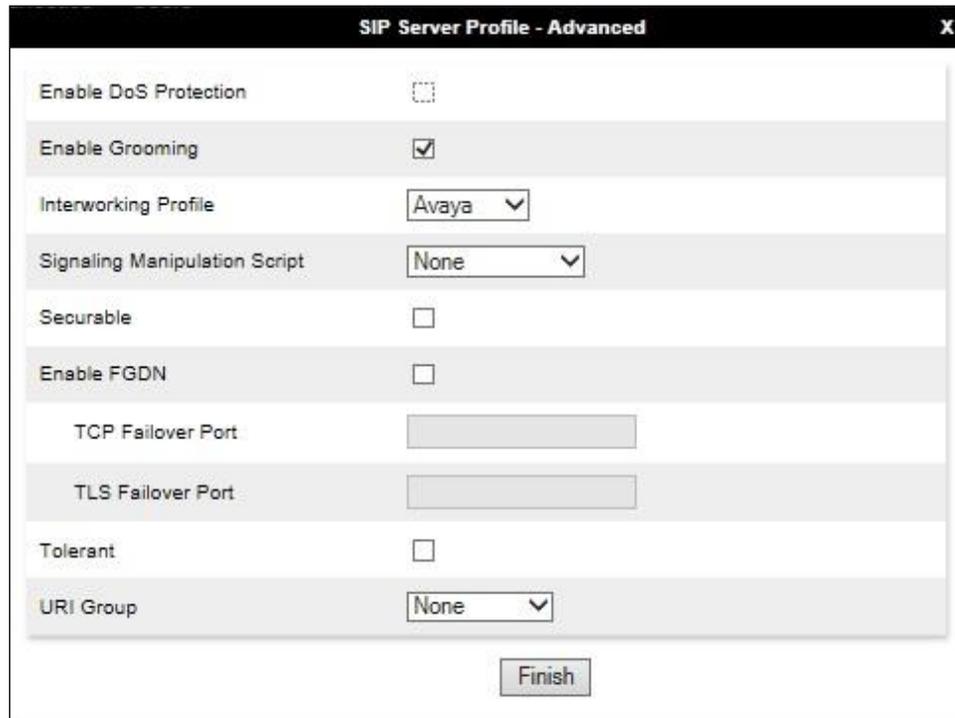

The screenshot shows a configuration window titled "SIP Server Profile - Advanced" with a close button (X) in the top right corner. The window contains several settings:


Enable DoS Protection	<input type="checkbox"/>
Enable Grooming	<input checked="" type="checkbox"/>
Interworking Profile	Avaya
Signaling Manipulation Script	None
Securable	<input type="checkbox"/>
Enable FGDN	<input type="checkbox"/>
TCP Failover Port	
TLS Failover Port	
Tolerant	<input type="checkbox"/>
URI Group	None

At the bottom center of the window is a button labeled "Finish".

8.7.2. Server Configuration – BT

To define the BT Trunk Server, navigate to **Services** → **SIP Servers** and click on **Add** and enter a descriptive name. On the **Add Server Configuration Profile** tab, set the following:

- Select **Server Type** to be **Trunk Server**.
- Enter **IP Address / FQDN** to **192.168.69.40** (BT SIP Platform).
- For **Port**, enter **5060**.
- For **Transport**, select **TCP**.
- Click on **Next** (not shown) to use default entries on the **Authentication** and **Heartbeat** tabs.

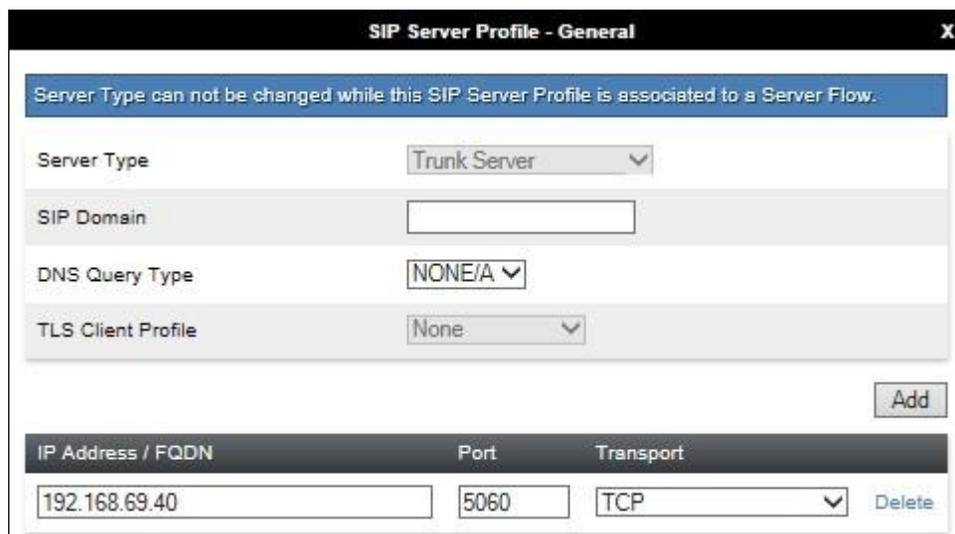

The screenshot shows the 'SIP Server Profile - General' configuration window. At the top, a blue banner reads: 'Server Type can not be changed while this SIP Server Profile is associated to a Server Flow.' Below this, the configuration fields are as follows:

- Server Type:** Trunk Server (dropdown menu)
- SIP Domain:** (empty text input field)
- DNS Query Type:** NONE/A (dropdown menu)
- TLS Client Profile:** None (dropdown menu)

An **Add** button is located to the right of the TLS Client Profile field. Below these fields is a table for server entries:

IP Address / FQDN	Port	Transport	
192.168.69.40	5060	TCP	Delete

On the Advanced tab:

- Check **Enable Grooming**.
- Select **BT** for **Interworking Profile**.
- Select **BT_SigMa** for **Signaling Manipulation Script**.
- Click **Finish**.

The screenshot shows a configuration window titled "SIP Server Profile - Advanced". The window contains several settings:

Enable DoS Protection	<input type="checkbox"/>
Enable Grooming	<input checked="" type="checkbox"/>
Interworking Profile	BT
Signaling Manipulation Script	BT_Sigma
Securable	<input type="checkbox"/>
Enable FGDN	<input type="checkbox"/>
TCP Failover Port	
TLS Failover Port	
Tolerant	<input type="checkbox"/>
URI Group	None
NG911 Support	<input type="checkbox"/>

At the bottom of the window, there is a "Finish" button.

8.8. Routing

Routing profiles define a specific set of packet routing criteria that are used in conjunction with other types of domain policies to identify a particular call flow and thereby ascertain which security features will be applied to those packets. Parameters defined by Routing Profiles include packet transport settings, name server addresses and resolution methods, next hop routing information, and packet transport types.

Routing information is required for routing to Session Manager on the internal side and BT address on the external side. The IP addresses and ports defined here will be used as the destination addresses for signalling. If no port is specified in the **Next Hop IP Address**, default 5060 is used.

8.8.1. Routing – Avaya


Create a Routing Profile for Session Manager.

- Navigate to **Configuration Profiles → Routing** and select **Add Profile**.
- Enter a **Profile Name** and click **Next**.



The screenshot shows a window titled "Routing Profile" with a close button (X) in the top right corner. Below the title bar, there is a text input field labeled "Profile Name" containing the text "Avaya". Below the input field is a "Next" button.

The Routing Profile window will open. Use the default values displayed and click **Add**.

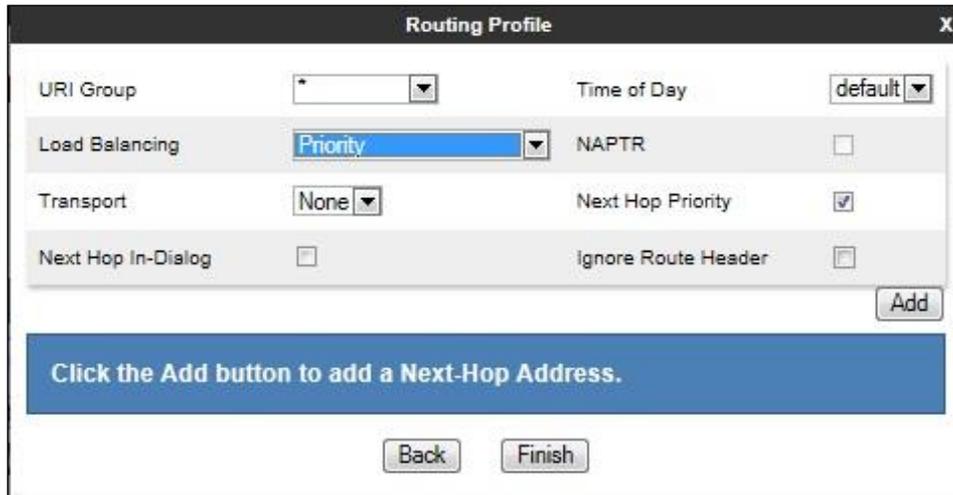

The screenshot shows the "Routing Profile" configuration window with the following settings:

URI Group	*	Time of Day	default
Load Balancing	Priority	NAPTR	<input type="checkbox"/>
Transport	None	Next Hop Priority	<input checked="" type="checkbox"/>
Next Hop In-Dialog	<input type="checkbox"/>	Ignore Route Header	<input type="checkbox"/>

At the bottom right of the settings area is an "Add" button. Below the settings is a blue banner with the text "Click the Add button to add a Next-Hop Address." At the bottom of the window are "Back" and "Finish" buttons.

On the **Next Hop Address** window, set the following:

- **Priority/Weight = 1.**
- **SIP Server Profile = Avaya (Section 8.7.1)** from drop down menu.
- **Next Hop Address = Select 10.10.3.42:5061(TLS)** from drop down menu.
- Click **Finish.**

The screenshot shows the 'Profile : Avaya' configuration window. The settings are as follows:

URI Group	-	Time of Day	default
Load Balancing	Priority	NAPTR	<input type="checkbox"/>
Transport	None	LDAP Routing	<input type="checkbox"/>
LDAP Server Profile	None	LDAP Base DN (Search)	None
Matched Attribute Priority	<input type="checkbox"/>	Alternate Routing	<input type="checkbox"/>
Next Hop Priority	<input checked="" type="checkbox"/>	Next Hop In-Dialog	<input type="checkbox"/>
Ignore Route Header	<input type="checkbox"/>		
ENUM	<input type="checkbox"/>	ENUM Suffix	

Buttons: Add, Finish

Priority / Weight	LDAP Search Attribute	LDAP Search Regex Pattern	LDAP Search Regex Result	SIP Server Profile	Next Hop Address	Transport	
1				Avaya	10.10.3.42:5061 (TLS)	None	Delete

8.8.2. Routing – BT

Create a Routing Profile for BT SIP network.

- Navigate to **Configuration Profiles → Routing** and select **Add Profile.**
- Enter a **Profile Name** and click **Next.**

The screenshot shows the 'Routing Profile' configuration window. The 'Profile Name' field contains the text 'BT'. The 'Next' button is visible at the bottom.

The Routing Profile window will open. Use the default values displayed and click **Add**.

On the **Next Hop Address** window, set the following:

- **Priority/Weight = 1.**
- **SIP Server Profile = BT (Section 8.7.2)** from drop down menu.
- **Next Hop Address = Select 192.168.69.40:5060 (TCP)** from drop down menu.
- Click **Finish**.

Priority / Weight	LDAP Search Attribute	LDAP Search Regex Pattern	LDAP Search Regex Result	SIP Server Profile	Next Hop Address	Transport
1				BT	192.168.69.40:5060 (TCP)	None

8.9. Topology Hiding

Topology hiding is used to hide local information such as private IP addresses and local domain names. The local information can be overwritten with a domain name or IP addresses. The default **Replace Action** is **Auto**, this replaces local information with IP addresses, generally the next hop. Topology hiding has the advantage of presenting single Via and Record-Route headers externally where multiple headers may be received from the enterprise. In some cases where Topology Hiding can't be applied, in particular the Contact header, IP addresses are translated to the Avaya SBCE external addresses using NAT.

To define Topology Hiding for Session Manager, navigate to **Configuration Profiles** → **Topology Hiding** from menu on the left-hand side. Click on **Add** and enter details in the **Topology Hiding Profile** pop-up menu (not shown).

- Enter a descriptive Profile Name such as **Avaya**.
- If the required Header is not shown, click on **Add Header**.
- Under the **Header** field for **To**, **From** and **Request Line**, select **IP/Domain** under **Criteria** and **Overwrite** under **Replace Action**. For Overwrite value, insert **avaya.com**.
- Click **Finish** (not shown).

The screenshot shows the 'Topology Hiding Profiles: Avaya' configuration page. On the left, there is a sidebar with a list of profiles: 'default', 'cisco_th_profile', 'Avaya' (highlighted), and 'BT'. An 'Add' button is located above the list. The main area contains a table with the following data:

Header	Criteria	Replace Action	Overwrite Value
To	IP/Domain	Overwrite	avaya.com
Via	IP/Domain	Auto	---
SDP	IP/Domain	Auto	---
Referred-By	IP/Domain	Auto	---
Request-Line	IP/Domain	Overwrite	avaya.com
Refer-To	IP/Domain	Auto	---
Record-Route	IP/Domain	Auto	---
From	IP/Domain	Overwrite	avaya.com

At the top right of the main area are buttons for 'Rename', 'Clone', and 'Delete'. Below the table is an 'Edit' button. A description field at the top of the main area contains the text 'Click here to add a description.'

To define Topology Hiding for BT, navigate to **Configuration Profiles** → **Topology Hiding** from the menu on the left-hand side. Click on **Add** and enter details in the **Topology Hiding Profile** pop-up menu (not shown).

- In the **Profile Name** field enter a descriptive name for BT and click **Next**.
- If the required Header is not shown, click on **Add Header**.
- Under the **Header** field for **To**, **From** and **Request Line**, select **IP/Domain** under **Criteria** and **Overwrite** under **Replace Action**. For Overwrite value, insert **bosch.com**.
- Click **Finish** (not shown).

Topology Hiding Profiles: BT

Buttons: Add, Rename, Clone, Delete

Click here to add a description.

Topology Hiding Profiles List:

- Topology Hiding Profiles
- default
- cisco_th_profile
- Avaya
- BT**

Topology Hiding Table:

Header	Criteria	Replace Action	Overwrite Value
To	IP/Domain	Overwrite	bosch.com
Via	IP/Domain	Auto	---
SDP	IP/Domain	Auto	---
Referred-By	IP/Domain	Auto	---
Request-Line	IP/Domain	Overwrite	bosch.com
Refer-To	IP/Domain	Auto	---
Record-Route	IP/Domain	Auto	---
From	IP/Domain	Overwrite	bosch.com

Edit

8.10. Media Rules

A media rule defines the processing to be applied to the selected media. For the compliance test, a media rule was created for Session Manager to use SRTP, while the predefined **default-low-med** media rule was used for the BT SIP trunk.

To define the Media Rule for Session Manager, navigate to **Domain Policies** → **Media Rules** in the main menu on the left-hand side. Click on **Add** and enter details in the Media Rule pop-up box (not shown)

- In the **Rule Name** field enter a descriptive name such as **Avaya_SRTP**.
- Set **Preferred Format #1** to **SRTP_AES_CM_128_HMAC_SHA1_80**.
- Set **Preferred Format #2** to **RTP**.
- Uncheck **Encrypted RTCP**.
- Check **Capability Negotiation** under **Miscellaneous** (not shown).

Default values were used for all other fields. Click **Finish** (not shown).

The screenshot shows the configuration page for a media rule named "Avaya_SRTP". On the left, a sidebar lists various media rules, with "Avaya_SRTP" selected. The main area contains a form with several tabs: "Encryption", "Codec Prioritization", "Advanced", and "QoS". The "Encryption" tab is active, showing settings for "Audio Encryption" and "Video Encryption".

Section	Field	Value
Audio Encryption	Preferred Formats	SRTP_AES_CM_128_HMAC_SHA1_80 RTP
	SRTP Context Reset on SSRC Change	<input type="checkbox"/>
	Encrypted RTCP	<input type="checkbox"/>
	MKI	<input type="checkbox"/>
	Lifetime	Any
	Interworking	<input type="checkbox"/>
Video Encryption	Preferred Formats	RTP
	Interworking	<input type="checkbox"/>

For the compliance test, the default media rule **default-low-med** was used for BT.



8.11. End Point Policy Groups


An end point policy group is a set of policies that will be applied to traffic between the Avaya SBCE and a signaling endpoint (connected server). Thus, one end point policy group must be created for Session Manager and another for the BT SIP trunk. The end point policy group is applied to the traffic as part of the end point flow defined in **Section 8.12**.

8.11.1. End Point Policy Group – Session Manager

To define an End Point policy for Session Manager, navigate to **Domain Policies → End Point Policy Groups** in the main menu on the left-hand side. Click on **Add** and enter details in the Policy Group pop-up box (not shown).


- In the **Group Name** field enter a descriptive name, in this case **Avaya**, and click **Next** (not shown).
- Leave the **Application Rule**, **Border Rule**, **Security Rule** and **Signalling Rule** fields at their default values.
- In the **Media Rule** drop down menu, select the recently added Media Rule called **Avaya_SRTP**.

Click **Finish**.

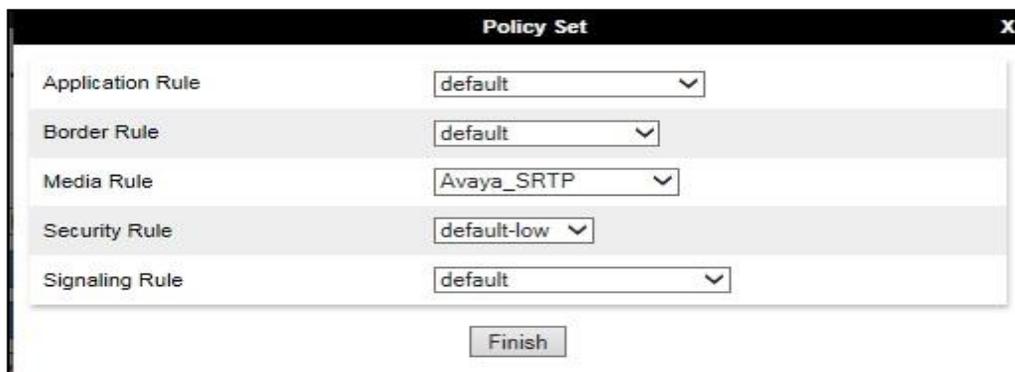

8.11.2. End Point Policy Group – BT

For the compliance test, the predefined End Point Policy **default-low** was used for the A1 End Point Policy Group.

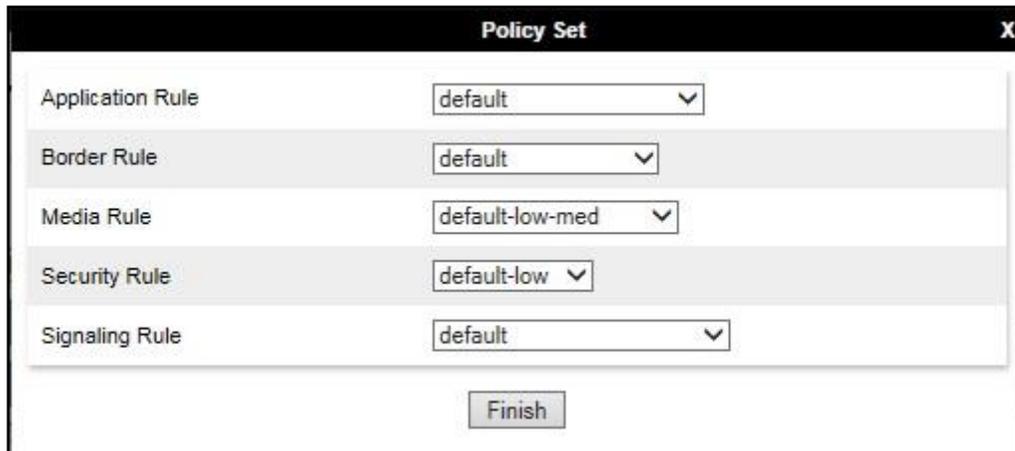


The screenshot shows a 'Policy Set' configuration window with the following settings:

Rule Type	Selected Policy
Application Rule	default
Border Rule	default
Media Rule	default-low-med
Security Rule	default-low
Signaling Rule	default

A 'Finish' button is located at the bottom center of the window.

8.12. Server Flows

Server Flows combine the previously defined profiles into outgoing flows from Session Manager to BT's SIP Trunk and incoming flows from BT's SIP Trunk to Session Manager. The following screen illustrates the flow through the Avaya SBCE to secure a SIP Trunk call.

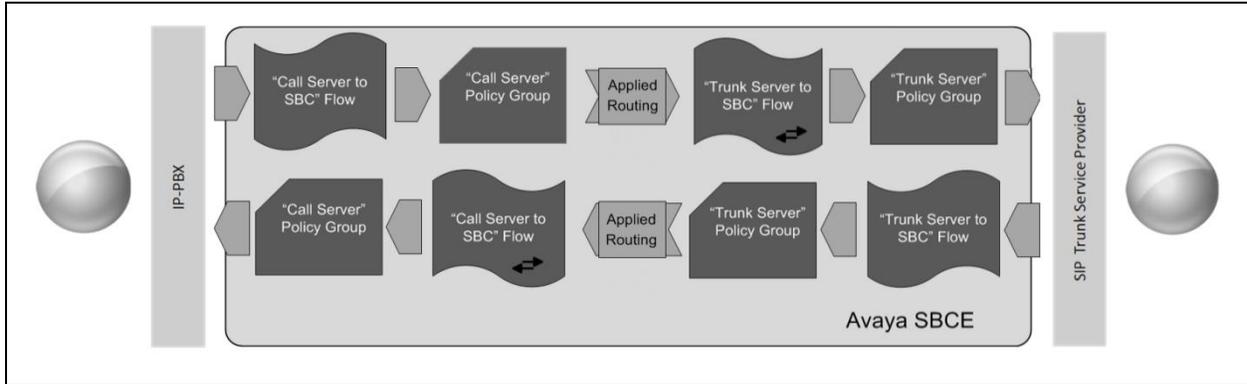

This configuration ties all the previously entered information together so that calls can be routed from Session Manager to BT's SIP platform and vice versa. The following screenshot shows all configured flows.

End Point Flows

Subscriber Flows | **Server Flows** | Add

Modifications made to a Server Flow will only take effect on new sessions.

[Click here to add a row description.](#)

SIP Server: Avaya

Priority	Flow Name	URI Group	Received Interface	Signaling Interface	End Point Policy Group	Routing Profile	
1	Call_Server	*	Signaling_External	Signaling_Internal	Avaya	BT	View Clone Edit Delete

SIP Server: BT

Priority	Flow Name	URI Group	Received Interface	Signaling Interface	End Point Policy Group	Routing Profile	
1	Trunk_Server	*	Signaling_Internal	Signaling_External	default-low	Avaya	View Clone Edit Delete

To define a Server Flow for the BT SIP Trunk, navigate to **Network & Flows → End Point Flows**.

- Click on the **Server Flows** tab.
- Select **Add Flow** and enter details in the pop-up menu.
- In the **Name** field enter a descriptive name for the server flow for BT SIP Trunk, in the test environment **Trunk_Server** was used.
- In the **Server Configuration** drop-down menu, select the BT server configuration defined in **Section 8.7.2**.
- In the **Received Interface** drop-down menu, select the internal SIP signalling interface defined in **Section 8.4.1**.
- In the **Signaling Interface** drop-down menu, select the external SIP signalling interface defined in **Section 8.4.1**.
- In the **Media Interface** drop-down menu, select the external media interface defined in **Section 8.4.2**.
- Set the **End Point Policy Group** to the endpoint policy group **default-low**.
- In the **Routing Profile** drop-down menu, select the routing profile of the Session Manager defined in **Section 8.8.1**.
- In the **Topology Hiding Profile** drop-down menu, select the topology hiding profile of the BT SIP Trunk defined in **Section 8.9** and click **Finish** (not shown).

The screenshot shows a configuration window titled "Flow: Trunk_Server" with a close button (X) in the top right corner. The window is divided into two main sections: "Criteria" and "Profile".

Criteria	
Flow Name	Trunk_Server
Server Configuration	BT
URI Group	*
Transport	*
Remote Subnet	*
Received Interface	Signaling_Internal

Profile	
Signaling Interface	Signaling_External
Media Interface	Media_External
Secondary Media Interface	None
End Point Policy Group	default-low
Routing Profile	Avaya
Topology Hiding Profile	BT
Signaling Manipulation Script	None
Remote Branch Office	Any
Link Monitoring from Peer	<input type="checkbox"/>
FQDN Support	<input type="checkbox"/>

To define an incoming server flow for Session Manager from the BT network, navigate to **Network & Flows → End Point Flows**.

- Click on the **Server Flows** tab.
- Select **Add Flow** and enter details in the pop-up menu.
- In the **Name** field enter a descriptive name for the server flow for Session Manager, in the test environment **Call_Server** was used.
- In the **Server Configuration** drop-down menu, select the server configuration for Session Manager defined in **Section 8.7.1**.
- In the **Received Interface** drop-down menu, select the internal SIP signalling interface defined in **Section 8.4.1**.
- In the **Signaling Interface** drop-down menu, select the external SIP signalling interface defined in **Section 8.4.1**.
- In the **Media Interface** drop-down menu, select the external media interface defined in **Section 8.4.2**.
- Set the **End Point Policy Group** to the endpoint policy group **Avaya**.
- In the **Routing Profile** drop-down menu, select the routing profile of the BT SIP Trunk defined in **Section 8.8.2**.
- In the **Topology Hiding Profile** drop-down menu, select the topology hiding profile of Session Manager defined in **Section 8.9** and click **Finish** (not shown).

The screenshot shows a configuration window titled "Flow: Call_Server". It is divided into two main sections: "Criteria" and "Profile".

Criteria		Profile	
Flow Name	Call_Server	Signaling Interface	Signaling_Internal
Server Configuration	Avaya	Media Interface	Media_Internal
URI Group	*	Secondary Media Interface	None
Transport	*	End Point Policy Group	Avaya
Remote Subnet	*	Routing Profile	BT
Received Interface	Signaling_External	Topology Hiding Profile	Avaya
		Signaling Manipulation Script	None
		Remote Branch Office	Any
		Link Monitoring from Peer	<input type="checkbox"/>
		FQDN Support	<input type="checkbox"/>

9. Configure the BT SIP Trunk Equipment

The configuration of the BT SIP Trunk equipment used to support the SIP Trunk is outside the scope of these Application Notes and will not be covered. To obtain further information on BT equipment and system configuration please contact an authorised BT representative.

10. Verification Steps

This section provides steps that may be performed to verify that the solution is configured correctly.

1. From System Manager **Home** tab click on **Session Manager** and navigate to **Session Manager → System Status → SIP Entity Monitoring**. Select the relevant SIP Entities from the list and observe if the **Conn Status** and **Link Status** are showing as **up**.

Session Manager Entity Link Connection Status
This page displays detailed connection status for all entity links from a Session Manager.

Status Details for the selected Session Manager:

All Entity Links for Session Manager: Session Manager

Summary View

4 Items Filter: Enable

SIP Entity Name	IP Address Family	SIP Entity Resolved IP	Port	Proto.	Deny	Conn. Status	Reason Code	Link Status
Avaya SBCE	IPv4	10.10.3.30	5061	TLS	FALSE	UP	200 OK	UP
Experience Portal	IPv4	10.10.3.50	5060	TCP	FALSE	UP	200 OK	UP
Communication Manager	IPv4	10.10.3.44	5061	TLS	FALSE	UP	200 OK	UP
Aura Messaging	IPv4	10.10.2.90	5060	TCP	FALSE	UP	200 OK	UP

Select : None

2. From Communication Manager SAT interface run the command **status trunk n** where **n** is a previously configured SIP trunk. Observe if all channels on the trunk group display **in-service/idle**.

```
status trunk 2
```

Member	Port	Service State	Mtce Connected Ports Busy
0002/001	T00011	in-service/idle	no
0002/002	T00012	in-service/idle	no
0002/003	T00013	in-service/idle	no
0002/004	T00014	in-service/idle	no
0002/005	T00015	in-service/idle	no
0002/006	T00016	in-service/idle	no

3. Verify that endpoints at the enterprise site can place calls to the PSTN and that the call remains active.
4. Verify that endpoints at the enterprise site can receive calls from the PSTN and that the call can remain active.
5. Verify that the user on the PSTN can end an active call by hanging up.
6. Verify that an endpoint at the enterprise site can end an active call by hanging up.
7. Should issues arise with the SIP trunk, use the Avaya SBCE trace facility to check that the OPTIONS requests sent from Session Manager via the Avaya SBCE to the network SBCs are receiving a response.

To define the trace, navigate to **Monitoring & Logging → Trace** in the main menu on the left-hand side and select the **Packet Capture** tab.

- Select the SIP Trunk interface from the **Interface** drop down menu.
- Select the signalling interface IP address or from the **Local Address** drop down menu.
- Enter the IP address of the network SBC in the **Remote Address** field or enter a * to capture all traffic.
- Specify the protocol type from the **Protocol** field.
- Specify the **Maximum Number of Packets to Capture**, **1000** is shown as an example.
- Specify the filename of the resultant pcap file in the **Capture Filename** field.
- Click on **Start Capture**.


Trace: GSSCP_R10.1

Packet Capture
Captures

Packet Capture Configuration

Status	Ready
Interface	B1 <input type="button" value="v"/>
Local Address <small>IP[:Port]</small>	All <input type="button" value="v"/> : <input style="width: 50px;" type="text"/>
Remote Address <small>*, *:Port, IP, IP:Port</small>	<input style="width: 100%;" type="text" value="*"/>
Protocol	All <input type="button" value="v"/>
Maximum Number of Packets to Capture	<input style="width: 50px;" type="text" value="10000"/>
Capture Filename <small>Using the name of an existing capture will overwrite it.</small>	<input style="width: 100%;" type="text" value="test.pcap"/>

To view the trace, select the **Captures** tab and click on the relevant filename in the list of traces.

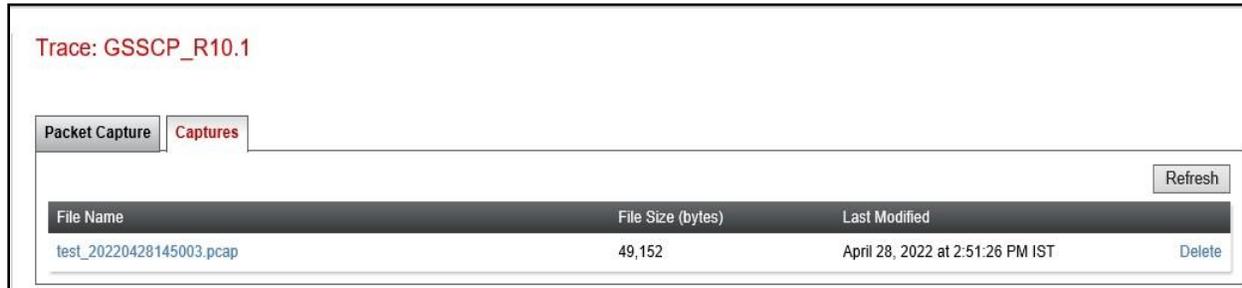

The trace is viewed as a standard pcap file in Wireshark. If the SIP trunk is working correctly, a SIP response to OPTIONS in the form of a 200 OK will be seen from the BT network.

11. Conclusion

These Application Notes describe the configuration necessary to connect Avaya Aura[®] Communication Manager R10.1, Avaya Aura[®] Session Manager R10.1, Avaya Experience Portal R8.1. and Avaya Session Border Controller for Enterprise R10.1 to the BT BV IP Connect. The BT BV IP Connect is a SIP-based Voice over IP solution providing businesses a flexible, cost-saving alternative to traditional hardwired telephony trunks. The service was successfully tested with a number of observations listed in **Section 2.2**.

12. Additional References

This section references the documentation relevant to these Application Notes. Additional Avaya product documentation is available at <http://support.avaya.com>.

- [1] *Deploying Avaya Appliance Virtualization Platform*, Release 10.1, Apr 2022
- [2] *Upgrading Avaya Aura[®] applications*, Release 10.1, Apr 2022
- [3] *Deploying Avaya Aura[®] applications from System Manager*, Release 10.1, Apr 2022
- [4] *Deploying Avaya Aura[®] Communication Manager*, Release 10.1, Apr 2022
- [5] *Administering Avaya Aura[®] Communication Manager*, Release 10.1, Apr 2022
- [6] *Upgrading Avaya Aura[®] Communication Manager*, Release 10.1, Apr 2022
- [7] *Deploying Avaya Aura[®] System Manager*, Release 10.1, Apr 2022
- [8] *Upgrading Avaya Aura[®] System Manager*, Release 10.1, Apr 2022
- [9] *Administering Avaya Aura[®] System Manager*, Release 10.1, Apr 2022
- [10] *Deploying Avaya Aura[®] Session Manager*, Release 10.1 Apr 2022
- [11] *Upgrading Avaya Aura[®] Session Manager*, Release 10.1, Apr 2022
- [12] *Administering Avaya Aura[®] Session Manager*, Release 10.1, Apr 2022
- [13] *Implementing Avaya Experience Portal*, Release 8.1, Jan 2022
- [14] *Upgrading to Experience Portal*, Release 8.1, Jan 2022
- [15] *Administrating Experience Portal*, Release 8.1, Jan 2022
- [16] *Deploying Avaya Session Border Controller for Enterprise*, Release 10.1, Dec 2021
- [17] *Upgrading Avaya Session Border Controller for Enterprise*, Release 10.1 Dec 2021
- [18] *Administering Avaya Session Border Controller for Enterprise*, Release 10.1, Dec 2021
- [19] *RFC 3261 SIP: Session Initiation Protocol*, <http://www.ietf.org/>

13. Appendix A: SigMa Scripts

Following is the Signaling Manipulation script that were used in the configuration of the Avaya SBCE as explained in **Section 8.6**. When adding these scripts as instructed in **Sections 8.7.2** enter a name for the script in the Title

```
/*Script to copy From Header to PAI Header for Blind Xfer */  
  
within session "INVITE"  
{  
  act on message where %DIRECTION="OUTBOUND" and  
  %ENTRY_POINT="POST_ROUTING"  
  {  
    if (exists(%HEADERS["Referred-By"][1])) then  
    {  
      %DivUser = %HEADERS["From"][1].URI.USER;  
      %HEADERS["P-Asserted-Identity"][1].URI.USER = %DivUser;  
  
    }  
  }  
}
```

©2022 Avaya Inc. All Rights Reserved.

Avaya and the Avaya Logo are trademarks of Avaya Inc. All trademarks identified by ® and ™ are registered trademarks or trademarks, respectively, of Avaya Inc. All other trademarks are the property of their respective owners. The information provided in these Application Notes is subject to change without notice. The configurations, technical data, and recommendations provided in these Application Notes are believed to be accurate and dependable, but are presented without express or implied warranty. Users are responsible for their application of any products specified in these Application Notes.

Please e-mail any questions or comments pertaining to these Application Notes along with the full title name and filename, located in the lower right corner, directly to the Avaya DevConnect Program at devconnect@avaya.com.